

EMBRAER S.A - P.O. BOX 8050  
12227-901 SAO JOSE DOS CAMPOS - S.P.  
BRAZIL  
PHONE: + + 55 12 3927-7517  
FAX: + + 55 12 3927-7546  
<http://www.embraer.com>  
e-mail: distrib@embraer.com.br

---

# AIRPORT PLANNING MANUAL

In connection with the use of this document, Embraer does not provide any express or implied warranties and expressly disclaims any warranty of merchantability or fitness for a particular purpose.

This document contains trade secrets, confidential, proprietary information of Embraer and technical data subject to U.S. Export Administration Regulation ("EAR") and other countries export control laws and regulations. Diversion contrary to the EAR and other laws regulations is strictly forbidden. The above restrictions may apply to data on all pages of this document.

APM-1346  
08 DECEMBER 2003  
REVISION 17 - 09 OCTOBER 2015





**EMBRAER S.A.**

AV. BRIGADEIRO FARIA LIMA, 2.170 - CAIXA POSTAL 8050 - TELEFONE (55) 12 39277517  
FAX (55) 12 39277546 - CEP 12.227-901 - SÃO JOSÉ DOS CAMPOS - SÃO PAULO - BRASIL  
e-mail: distrib@embraer.com.br - <http://www.embraer.com>

TO: HOLDERS OF PUBLICATION No. **APM-1346** - "AIRPORT PLANNING MANUAL".

**FRONT MATTER - REVISION No. 17 DATED OCTOBER 09/2015**

Pages which have been added, revised, or deleted by the current revision are indicated by an asterisk, on the List of Effective Pages.

This issue incorporates all preceding Temporary Revisions (if any).

Modifications introduced by this revision are all editorial in nature, with no technical implications, they not being therefore highlighted and no substantiation source being presented herein.

**HIGHLIGHTS**

Page 1 of 2  
Oct 09/15





# **EMBRAER 170 AIRPORT PLANNING MANUAL**

## **RECORD OF REVISIONS**

The user must update the Record of Revisions when a revision is put into the manual.

RETAIN THIS RECORD IN THE FRONT OF MANUAL OR CHAPTER.  
ON RECEIPT OF REVISIONS, INSERT REVISED PAGES IN THE MANUAL, AND ENTER REVISION NUMBER, DATE  
INSERTED AND INITIALS.





# **EMBRAER 170**



## AIRPORT PLANNING MANUAL

## **RECORD OF TEMPORARY REVISIONS**





# **EMBRAER 170 AIRPORT PLANNING MANUAL**

## **TEMPORARY REVISION STATUS REPORT**

This list is intended to show the operator which temporary revisions are applicable to his fleet. The list consists of the temporary revision number, the related issue date, the incorporation date, and the affected subject.

**S\*** INDICATES TR HAS BEEN SUPERSEDED BY THE TR REFERRED TO.

EFFECTIVITY: ALL

**TR STATUS REPORT**





# **EMBRAER 170 AIRPORT PLANNING MANUAL**

## **LIST OF SERVICE BULLETINS**

This list is intended to let the operator know which Service Bulletins are incorporated to the APM.

The list consists of the Service Bulletin numbers and the respective revisions (if applicable), the affected section (s) (APM Section Number), information on whether the Service Bulletin affects the manual, the aircraft (Effectivity) affected by the Service Bulletins and the incorporation date.

A revision bar is placed on the left margin of the list whenever data are inserted or revised.

**NOTE:** The effectivity is indicated by means of two numerical groups separated by a dash. The first group presented in the effectivity column corresponds to the last digits of the lowest aircraft designation number to indicate the beginning of the effectivity, and the second group corresponds to the last digits of the highest aircraft designation number to indicate the end of the effectivity.

<b>SERVICE BULLETIN NUMBER</b>	<b>APM SECTION NUMBER</b>	<b>INCORPORATION DATE</b>	<b>EFFECTIVITY</b>
SB 170-53-0080/00	02-1	Oct 07/2014	170:00007-00029, 00045-00047





# EMBRAER 170 AIRPORT PLANNING MANUAL

Title	Section 3	
BLOCK	PAGE REVISION	
TRLIST	3-1 .....	Jan 09/06
1 .....	3-2 .....	Jan 09/06
2 Blank .....	3-3 .....	Oct 31/12
SBLIST	3-4 .....	Oct 31/12
* 1 (rev) .....	3-5 .....	Oct 31/12
2 Blank .....	3-6 .....	Oct 31/12
List of Effective Pages	3-7 .....	Oct 31/12
* 1 (rev) .....	3-8 .....	Oct 07/14
* 2 (rev) .....	3-9 .....	Oct 07/14
Table of Contents	3-10 .....	Oct 07/14
1 .....	3-11 .....	Oct 07/14
2 .....	3-12 .....	Oct 07/14
List of Tables	3-13 .....	Oct 07/14
1 .....	3-14 .....	Oct 07/14
2 Blank .....	3-15 .....	Oct 07/14
List of Figures	3-16 .....	Oct 31/12
1 .....	3-17 .....	Oct 31/12
2 .....	3-18 .....	Oct 31/12
3 .....	3-19 .....	Oct 31/12
4 Blank .....	3-20 .....	Oct 31/12
Section 1	Section 4	
1-1 .....	4-1 .....	Oct 07/08
1-2 .....	4-2 .....	Oct 07/08
1-3 .....	4-3 .....	Oct 07/08
1-4 Blank .....	4-4 .....	Jul 01/05
	4-5 .....	Oct 07/08
	4-6 .....	Dec 08/03
Section 2	4-7 .....	Dec 08/03
2-1 .....	4-8 .....	Dec 08/03
2-2 .....	4-9 .....	Dec 08/03
2-3 .....	4-10 Blank .....	Dec 08/03
2-4 .....	5-1 .....	Dec 08/03
2-5 .....	5-2 .....	Dec 08/03
2-6 .....	5-3 .....	Dec 08/03
2-7 .....	5-4 .....	Dec 08/03
2-8 .....	5-5 .....	May 11/07
* 2-9 (rev) .....	5-6 .....	Dec 08/03
2-10 .....	5-7 .....	Dec 08/03
2-11 .....	5-8 .....	May 11/07
2-12 .....	5-9 .....	Oct 06/11
2-13 .....	5-10 .....	Oct 06/11
2-14 .....	5-11 .....	Oct 06/11
2-15 (del) .....	5-12 .....	Oct 06/11
2-16 (del) .....	5-13 .....	Oct 06/11
2-17 (del) .....	5-14 Blank .....	Oct 06/11
2-18 (del) .....	Section 5	
2-19 (del) .....	5-1 .....	Dec 08/03
2-20 (del) .....	5-2 .....	Dec 08/03
	5-3 .....	Dec 08/03
	5-4 .....	Dec 08/03
	5-5 .....	May 11/07
	5-6 .....	Dec 08/03
	5-7 .....	May 11/07
	5-8 .....	May 11/07
	5-9 .....	Oct 06/11
	5-10 .....	Oct 06/11
	5-11 .....	Oct 06/11
	5-12 .....	Oct 06/11
	5-13 .....	Oct 06/11
	5-14 Blank .....	Oct 06/11
	Section 6	

Pages revised or added by the current revision are indicated by an asterisk (\*). Pages deleted by the current revision are indicated by \* (del). Pages deleted by the previous revision are indicated by (del).

EFFECTIVITY: ALL

**LIST OF EFFECTIVE PAGES**

REV. 17

Page 1

Oct 09/15



# EMBRAER 170 AIRPORT PLANNING MANUAL

6-1 .....	Dec 08/03	9-6 .....	Dec 08/03
6-2 .....	Dec 08/03		
6-3 .....	Dec 08/03		
6-4 .....	Dec 08/03		
6-5 .....	Dec 08/03		
6-6 .....	Jan 09/06		
6-7 .....	Jan 09/06		
6-8 .....	Dec 18/06		
6-9 .....	Jan 09/06		
6-10 .....	Oct 07/10		
6-11 .....	Oct 07/10		
6-12 Blank .....	Oct 07/10		

## Section 7

7-1 .....	Dec 08/03
7-2 .....	Jul 01/05
7-3 .....	Jul 01/05
7-4 .....	Jul 01/05
7-5 .....	Dec 08/03
7-6 .....	Dec 08/03
7-7 .....	Jul 01/05
7-8 .....	Dec 08/03
7-9 .....	Dec 08/03
7-10 .....	Jul 01/05
7-11 .....	Dec 08/03
7-12 .....	Dec 08/03
7-13 .....	Jul 01/05
7-14 .....	Dec 08/03
7-15 .....	Dec 08/03
7-16 .....	Dec 08/03
7-17 .....	Dec 08/03
7-18 .....	Jul 01/05
7-19 .....	Dec 08/03
7-20 .....	Dec 08/03
7-21 .....	Oct 06/11
7-22 .....	Oct 06/11
7-23 .....	Oct 06/11
7-24 .....	Oct 06/11
7-25 .....	Oct 06/11
7-26 Blank .....	Oct 06/11

## Section 8

8-1 .....	Dec 08/03
8-2 Blank .....	Dec 08/03

## Section 9

9-1 .....	Dec 08/03
9-2 .....	Dec 08/03
9-3 .....	Dec 08/03
9-4 .....	Dec 08/03
9-5 .....	Dec 08/03

Pages revised or added by the current revision are indicated by an asterisk (\*). Pages deleted by the current revision are indicated by \* (del). Pages deleted by the previous revision are indicated by (del).

EFFECTIVITY: ALL

## LIST OF EFFECTIVE PAGES

REV. 17

Page 2

Oct 09/15



# EMBRAER 170 AIRPORT PLANNING MANUAL

## TABLE OF CONTENTS

### SECTION 1 - SCOPE

1.	Scope .....	1-1
1.1.	Purpose .....	1-1
1.2.	Introduction .....	1-1
1.3.	Abbreviations .....	1-2

### SECTION 2 - AIRCRAFT DESCRIPTION

2.	Aircraft Description .....	2-1
2.1.	Aircraft Characteristics .....	2-1
2.2.	General Aircraft Dimensions .....	2-3
2.3.	Ground Clearances .....	2-5
2.4.	Interior Arrangement .....	2-8
2.5.	Passenger Cabin Cross Section .....	2-11
2.6.	Lower Compartment Containers .....	2-13
2.7.	Door Clearances .....	2-14

### SECTION 3 - AIRCRAFT PERFORMANCE

3.	Aircraft Performance .....	3-1
3.1.	General Information .....	3-1
3.2.	Payload X Range .....	3-2
3.3.	Takeoff Field Lengths .....	3-7
3.4.	Landing Field Lengths .....	3-16

### SECTION 4 - GROUND MANEUVERING

4.	Ground Maneuvering .....	4-1
4.1.	General Information .....	4-1
4.2.	Turning Radii .....	4-1
4.3.	Minimum Turning Radii .....	4-3
4.4.	Visibility From Cockpit .....	4-4
4.5.	Runway and Taxiway Dimensions .....	4-5
4.6.	Runway Holding Bay .....	4-9

### SECTION 5 - TERMINAL SERVICING

5.	Terminal Servicing .....	5-1
5.1.	Aircraft Servicing Arrangement .....	5-2
5.2.	Terminal Operations - Turnaround Station .....	5-4
5.3.	Terminal Operations - En Route Station .....	5-6
5.4.	Ground Servicing Connections .....	5-7
5.5.	Engine Starting Pneumatic Requirements .....	5-9
5.6.	Ground Pneumatic Power Requirements .....	5-10
5.7.	Preconditioned Airflow Requirements .....	5-11
5.8.	Ground Towing Requirements .....	5-13



# **EMBRAER 170 AIRPORT PLANNING MANUAL**

## **SECTION 6 - OPERATING CONDITIONS**

6.	Operating Conditions .....	6-1
6.1.	Engine Exhaust Velocities and Temperatures .....	6-2
6.2.	Airport and Community Noise .....	6-8
6.3.	Hazard Areas .....	6-9

## **SECTION 7 - PAVEMENT DATA**

7.	Pavement Data .....	7-1
7.1.	General Information .....	7-1
7.2.	Footprint .....	7-2
7.3.	Maximum Pavement Loads .....	7-3
7.4.	Landing Gear Loading on Pavement .....	7-4
7.5.	Flexible Pavement Requirements, U.S. Corps of Engineers Design Method .....	7-5
7.6.	Flexible Pavement Requirements, LCN Method .....	7-8
7.7.	Rigid Pavement Requirements, Portland Cement Association Design Method .....	7-11
7.8.	Rigid Pavement Requirements, LCN Method .....	7-14
7.9.	ACN - PCN System - Flexible and Rigid Pavements .....	7-19

## **SECTION 8 - POSSIBLE EMBRAER 170 DERIVATIVE AIRCRAFT**

8.	Possible EMBRAER 170 Derivative Aircraft .....	8-1
8.1.	Not Applicable .....	8-1

## **SECTION 9 - SCALED DRAWINGS**

9.	Scaled Drawings .....	9-1
9.1.	General .....	9-1


**EMBRAER 170 AIRPORT  
PLANNING MANUAL**
**LIST OF TABLES**

<u>TABLE</u>	<u>TITLE</u>	<u>SECTION</u>	<u>PAGE</u>
1.1	APM Arrangement .....	01	1
2.1	Aircraft General Characteristics .....	02	2
2.2	Aircraft General Characteristics .....	02	2
2.3	Ground Clearance - STD Aircraft Model .....	02	6
2.4	Ground Clearance - LR, SU or SE Aircraft Models .....	02	7
2.5	Capacity of the Cargo Compartment .....	02	10
3.1	ISA .....	03	1
4.1	Reference Codes.....	04	5
7.1	Pavement Evaluation.....	07	19

EFFECTIVITY: ALL

**LIST OF TABLES**

Page 1 / 2

Dec 18/06





# EMBRAER 170 AIRPORT PLANNING MANUAL

## LIST OF FIGURES

FIGURE	TITLE	SHEET	SECTION	PAGE
2.1	General Aircraft Dimensions .....		02	4
2.2	Ground Clearances .....		02	5
2.3	Typical Interior Arrangements .....		02	9
2.4	Economy Class Passenger Cabin Cross-Section.....		02	11
2.5	First Class Passenger Cabin Cross-Section.....		02	12
2.6	Door Dimensions.....		02	14
3.1	Payload x Range - ISA Conditions .....		03	3
3.2	Payload x Range - ISA + 10 °C Conditions .....		03	4
3.3	Payload x Range - ISA Conditions .....		03	5
3.4	Payload x Range - ISA + 10 °C Conditions .....		03	6
3.5	Takeoff Field Lengths - ISA Conditions .....		03	8
3.6	Takeoff Field Lengths - ISA + 15 °C Conditions.....		03	9
3.7	Takeoff Field Lengths - ISA Conditions .....		03	10
3.8	Takeoff Field Lengths - ISA + 15 °C Conditions.....		03	11
3.9	Takeoff Field Lengths - ISA Conditions .....		03	12
3.10	Takeoff Field Lengths - ISA + 15 °C Conditions.....		03	13
3.11	Takeoff Field Lengths - ISA Conditions .....		03	14
3.12	Takeoff Field Lengths - ISA + 15 °C Conditions.....		03	15
3.13	Landing Field Lengths - Flaps 5 .....		03	17
3.14	Landing Field Lengths - Flaps Full .....		03	18
3.15	Landing Field Lengths - Flaps 5 .....		03	19
3.16	Landing Field Lengths - Flaps Full .....		03	20
4.1	Turning Radii - No Slip Angle .....		04	2
4.2	Minimum Turning Radius .....		04	3
4.3	Visibility from Cockpit in Static Position.....		04	4
4.4	More than 90° Turn - Runway to Taxiway .....		04	6
4.5	90° Turn - Runway to Taxiway .....		04	7
4.6	90° Turn - Taxiway to Taxiway .....		04	8

EFFECTIVITY: ALL

LIST OF FIGURES

Page 1

Oct 31/12



# EMBRAER 170 AIRPORT PLANNING MANUAL

<u>FIGURE</u>	<u>TITLE</u>	<u>SHEET</u>	<u>SECTION</u>	<u>PAGE</u>
4.7	Runway Holding Bay.....		04	9
5.1	Aircraft Servicing Arrangement With Passenger Stairs .....		05	2
5.2	Aircraft Servicing Arrangement With Passenger Bridge .....		05	3
5.3	Air Terminal Operation - Turnaround Station .....		05	5
5.4	Ground Servicing Connections .....		05	7
5.5	Ground Servicing Connections .....		05	8
5.6	Engine Starting Pneumatic Requirements .....		05	9
5.7	Ground Pneumatic Power Requirements .....		05	10
5.8	Preconditioned Airflow Requirements .....		05	12
5.9	Ground Towing Requirements.....		05	13
6.1	Jet Wake Velocity Profile - Takeoff Power .....		06	2
6.2	Jet Wake Temperature Profile - Takeoff Power .....		06	3
6.3	Jet Wake Velocity Profile - Ground Idle .....		06	4
6.4	Jet Wake Temperature Profile - Ground Idle .....		06	5
6.5	Jet Wake Velocity Profile - Breakaway Power.....		06	6
6.6	Jet Wake Temperature Profile - Breakaway Power.....		06	7
6.7	Hazard Areas - Takeoff Power .....		06	9
6.8	Hazard Areas - Ground Idle .....		06	10
6.9	Hazard Areas - Breakaway Power.....		06	11
7.1	Footprint .....		07	2
7.2	Maximum Pavement Loads.....		07	3
7.3	Landing Gear Loading on Pavement.....		07	4
7.4	Flexible Pavement Requirements - US Army Corps of Engineers Design Method .....		07	6
7.5	Flexible Pavement Requirements - US Army Corps of Engineers Design Method .....		07	7
7.6	Flexible Pavement Requirements - LCN Method .....		07	9
7.7	Flexible Pavement Requirements - LCN Method .....		07	10
7.8	Rigid Pavement Requirements - Portland Cement Association Design Method .....		07	12

EFFECTIVITY: ALL

## LIST OF FIGURES

Page 2

Oct 31/12



**EMBRAER 170 AIRPORT  
PLANNING MANUAL**

<u>FIGURE</u>	<u>TITLE</u>	<u>SHEET</u>	<u>SECTION</u>	<u>PAGE</u>
7.9	Rigid Pavement Requirements - Portland Cement Association Design Method .....		07	13
7.10	Radius of Relative Stiffness .....		07	15
7.11	Radius of Relative Stiffness (other values).....		07	16
7.12	Rigid Pavement Requirements - LCN Method .....		07	17
7.13	Rigid Pavement Requirements - LCN Method .....		07	18
7.14	ACN For Flexible Pavement .....		07	20
7.15	ACN For Flexible Pavement .....		07	21
7.16	ACN For Flexible Pavement .....		07	22
7.17	ACN For Rigid Pavement.....		07	23
7.18	ACN For Rigid Pavement.....		07	24
7.19	ACN For Rigid Pavement.....		07	25
9.1	Scale: 1 Inch Equals 32 Feet.....		09	2
9.2	Scale: 1 Inch Equals 50 Feet.....		09	3
9.3	Scale: 1 Inch Equals 100 Feet.....		09	4
9.4	Scale: 1 to 500 .....		09	5
9.5	Scale: 1 to 1000 .....		09	6

EFFECTIVITY: ALL

**LIST OF FIGURES**

Page 3 / 4  
Oct 31/12





# EMBRAER 170 AIRPORT PLANNING MANUAL

## 1. SCOPE

### 1.1. PURPOSE

This document provides airplane characteristics for general airport planning. Since the operational practices vary among the airlines, specific data should be coordinated with the using airlines before the facility design is made.

EMBRAER should be contacted for any additional information required.

### 1.2. INTRODUCTION

The APM has been prepared in accordance with NAS 3601.

It provides aircraft characteristics for general airport planning, airport operators, airlines, and engineering consultant organizations.

The APM is arranged as shown in the table below:

Table 1.1 - APM Arrangement

ARRANGEMENTS	CONTENTS
Manual Front Matter	Title Page
	Customer Comment Form
	Highlights
	Record of Revision Sheet
	Temporary Revision Sheet
	List of Service Bulletins
	List of Effective Pages
	Table of Contents
	List of Tables
	List of Figures
Section	Scope
	Aircraft Description
	Aircraft Performance
	Ground Maneuvering
	Terminal Servicing
	Operating Conditions
	Pavement Data
	Possible Derivative Aircraft
	Scaled Drawings

The front matter for the whole manual contains:

- Title Page: Shows the manufacturer's masthead, identification of the manual, the initial issue date, and revision number and date.
- Highlights: Advises the operator on the revised pages.
- Record of Revisions Sheet: Lists the successive revision numbers, issue date, insertion date and incorporators initials, which must be kept current by the operator.



# EMBRAER 170 AIRPORT PLANNING MANUAL

- List of Service Bulletins: Lists the Service Bulletins, including all issued revisions, which affect the manual as well as the affected section(s) (APM Section Number), the aircraft affected by the Service Bulletin, and the date of incorporation of the SB in the manual.
- Temporary Revision Sheet: Lists the temporary revision numbers, page number, issue date, person responsible for the insertion and insertion date.
- List of Effective Pages: Lists all sections and their list of effective pages with the latest issue dates.
- Queries concerning any printed material, including purchasing, copying, shipping and handling, complaints, or compliments may be addressed to:

Technical Publications Distribution:

Embraer S.A.

Attention of: Technical Publications Department

P.O. BOX 8050

CEP. 12.227-901- São José dos Campos - SP - Brazil

Phone: (55 12) 3927-7517

FAX: (55 12) 3927-7546

<http://www.embraer.com>

e-mail: [distrib@embraer.com.br](mailto:distrib@embraer.com.br)

- For support regarding technical information contained in non-operational publication, please contact:  
Routine Issues: Contact Embraer Customer Support Service  
AOG Issues: Contact Embraer AOG group directly
- For Digital Technical Publications support:  
[cdrom.support@embraer.com.br](mailto:cdrom.support@embraer.com.br)

## 1.2.1. Revisions

Embraer may revise this manual periodically as required to update information or provide information not available at the time of printing.

Revised data may result from Embraer approved aircraft modifications and new available options. Changes to the text are indicated by a black bar in the page left-side margin, beside the revised, added, or deleted material.

Relocated or rearranged text or illustrations will be indicated by a black bar beside the page number.

## 1.3. ABBREVIATIONS

This list gives all the abbreviations, acronyms and measurement units used in this manual with their definitions.

Table 1.2 - List of Acronyms and Abbreviations used in the APM

ACRONYMS AND ABBREVIATIONS	DESCRIPTION
°C	Degree Celsius
°F	Degree Fahrenheit
ℓ	Liter
ACN	Aircraft Classification Number
AFM	Airplane Flight Manual
AOM	Airplane Operations Manual

EFFECTIVITY: ALL

Section 1

Page 1-2

Oct 06/11



# EMBRAER 170 AIRPORT PLANNING MANUAL

Table 1.2 - List of Acronyms and Abbreviations used in the APM

ACRONYMS AND ABBREVIATIONS	DESCRIPTION
APM	Airport Planning Manual
APU	Auxiliary Power Unit
ATTCS	Automatic Takeoff-Thrust Control-System
BOW	Basic Operating Weight
CBR	California Bearing Ratio
ECS	Environmental Control System
FAA	Federal Aviation Administration
FAR	Federal Aviation Regulations
FWD	Forward
GEAE	General Electric Aircraft Engines
ICAO	International Civil Aviation Organization
ISA	International Standard Atmosphere
JAR	Joint Aviation Requirements
LCN	Load Classification Number
LH	Left-Hand
LR	Long Range
MLW	Maximum Landing Weight
MRW	Maximum Ramp Weight
MTOW	Maximum Takeoff Weight
MZFW	Maximum Zero Fuel Weight
N	Newton
RBHA	Requisitos Brasileiros de Homologação Aeronáutica
RH	Right-Hand
STD	Standard
dBA	A-Weighted Decibel
ft	Foot
ft <sup>2</sup>	Square Foot
ft <sup>3</sup>	Cubic Foot
gal.	Gallon
in	Inch
in <sup>2</sup>	Square Inch
inHg	Inch of Mercury
kPa	Kilopascal
kg	Kilogram
lb	Pound
lb/in <sup>3</sup>	Pound per Cubic Inch
lbf	Pound Force
m	Meter
m <sup>2</sup>	Square Meter
m <sup>3</sup>	Cubic Meter
min	Minute
psi	Pounds per Square Inch





## **2. AIRCRAFT DESCRIPTION**

### **2.1. AIRCRAFT CHARACTERISTICS**

The aircraft is:

- • Predominantly metallic;
- • Low winged;
- • Conventional tailed;
- • Monoplane;
- • Retractable tricycle-type with twin-wheeled landing-gear.

There are two high bypass ratio turbofan GEAE CF34-8E with 63.2 kN (14200 lbf) maximum takeoff thrust (sea level, static and ISA + 15 °C) installed under the wings.

■ The aircraft has two versions, with different ranges as a function of the difference between the MTOWs:

- The STD aircraft model - MTOW 35990 kg (79344 lb)
- The LR, SU or SE aircraft models - MTOW 37200 kg (82012 lb)

#### **2.1.1. Definitions**

##### **MRW**

It is the maximum allowed aircraft weight for taxiing or maneuvering on the ground.

##### **MLW**

It is the maximum allowed weight with which the aircraft can normally be landed.

##### **MTOW**

It is the maximum allowed total loaded aircraft weight at the start of the takeoff run.

##### **BOW**

It is the weight of the structure, powerplant, instruments, flight controls, hydraulic, electronic, electrical, air conditioning, oxygen, anti-icing and pressurization systems, interior furnishings, portable and emergency equipment and other items of equipment that are an integral part of the aircraft configuration. It also includes unusable fuel, total engine and APU oil, total hydraulic fluid, toilet fluid and water, potable water, crew and crew baggage, navigation kit (manuals, charts), catering (beverages and food) and removable service equipment for the galley.

##### **MZFW**

It is the maximum allowed weight without usable fuel in the tanks.



# EMBRAER 170 AIRPORT PLANNING MANUAL

## Maximum Payload

It is the difference between the MZFW and the BOW.

## Maximum Seating Capacity

It is the maximum number of passengers specifically certified or anticipated for certification.

## Maximum Cargo Volume

It is the maximum space available for cargo.

## Usable Fuel

Fuel available for the aircraft propulsion.

Table 2.1 - Aircraft General Characteristics

EFFECTIVITY: ON ACFT 170:00001-00006 00030-00044 00048-00058 00060-00065 OR PRE-MOD SB 170-53-0080

DESIGN WEIGHTS <sup>[1]</sup>	AIRCRAFT MODELS	
	STD	LR, SU or SE
MRW	36150 kg (79697 lb)	37360 kg (82365 lb)
MTOW	35990 kg (79344 lb)	37200 kg (82012 lb)
MLW	32800 kg (72311 lb)	
BOW <sup>[2]</sup>	20700 kg (45636 lb)	
MZFW	29600 kg (65257 lb)	
Maximum Payload <sup>[2]</sup>	9100 kg (20062 lb)	
MOW - Minimum Operating Weight	21800 kg (48060 lb)	
Maximum Seating Capacity	78 passengers	70 passengers (SE) 76 passengers (SU) 78 passengers (LR)
Maximum Cargo Volume <sup>[3]</sup>	14.39 m <sup>3</sup> (508.18 ft <sup>3</sup> )	
Usable Fuel <sup>[4]</sup>	9428 kg (20785 lb)	11625 ℥ (3071 gal.)

1. Applicable for standard models. For further information, refer to AFM and AOM.

2. Standard configuration (weights may vary according to optional equipment installed or interior layouts).

3. Standard configuration (volume may vary according to optional equipment installed).

4. Adopted fuel density of 0.811 kg/ℓ (6.77 lb/gal.).

Table 2.2 - Aircraft General Characteristics

EFFECTIVITY: ON ACFT 170:00059-00059 00066-99999 OR POST-MOD SB 170-53-0080

DESIGN WEIGHTS <sup>[1]</sup>	AIRCRAFT MODELS	
	STD	LR, SU or SE
MRW	36150 kg (79697 lb)	37360 kg (82365 lb)
MTOW	35990 kg (79344 lb)	37200 kg (82012 lb)

1. Applicable for standard models. For further information, refer to AFM and AOM.

## Section 2

Page 2-2

Oct 06/11

EFFECTIVITY: ALL



# EMBRAER 170 AIRPORT PLANNING MANUAL

Table 2.2 - Aircraft General Characteristics (Continued)  
EFFECTIVITY: ON ACFT 170:00059-00059 00066-99999

DESIGN WEIGHTS <sup>[1]</sup>	AIRCRAFT MODELS	
	STD	LR, SU or SE
MLW <sup>[2]</sup>		32800 kg (72311 lb)
BOW <sup>[3]</sup>		20700 kg (45636 lb)
MZFW		30140 kg (66447 lb)
Maximum Payload <sup>[3]</sup>		9640 kg (21252 lb)
MOW - Minimum Operating Weight		21800 kg (48060 lb)
Maximum Seating Capacity	78 passengers	70 passengers (SE) 76 passengers (SU) 78 passengers (LR)
Maximum Cargo Volume <sup>[4]</sup>		14.39 m <sup>3</sup> (508.18 ft <sup>3</sup> )
Usable Fuel <sup>[5]</sup>		9428 kg (20785 lb) 11625 ℥ (3071 gal.)

1. Applicable for standard models. For further information, refer to AFM and AOM.

2. For aircraft POST-MOD. S.B. 170-00-0003, consider MLW = 33300 kg (73414 lb).

3. Standard configuration (weights may vary according to optional equipment installed or interior layouts).

4. Standard configuration (volume may vary according to optional equipment installed).

5. Adopted fuel density of 0.811 kg/ℓ (6.77 lb/gal.).

## 2.2. GENERAL AIRCRAFT DIMENSIONS

### 2.2.1. External Dimensions

- Span over winglets - 26.00 m (85 ft 4 in.)
- Height (maximum) - 9.85 m (32 ft 3 in.)
- Overall length - 29.90 m (98 ft 1 in.)

### 2.2.2. Wing

- Reference area - 72.72 m<sup>2</sup> (783 ft<sup>2</sup>)
- Reference aspect ratio - 8.6

### 2.2.3. Fuselage

- Total Length - 29.90 m (98 ft 1 in.)
- Length of pressurized section - 22.74 m (74 ft 7 in.)

### 2.2.4. Horizontal Tail

- Span - 10.00 m (32 ft 9 in)
- Area - 23.25 m<sup>2</sup> (250 ft<sup>2</sup> 37 in<sup>2</sup>)

### 2.2.5. Vertical Tail

- Reference area - 16.20 m<sup>2</sup> (174 ft<sup>2</sup> 55 in<sup>2</sup>)

EFFECTIVITY: ALL


Section 2

Page 2-3

Oct 07/08



# **EMBRAER 170 AIRPORT PLANNING MANUAL**

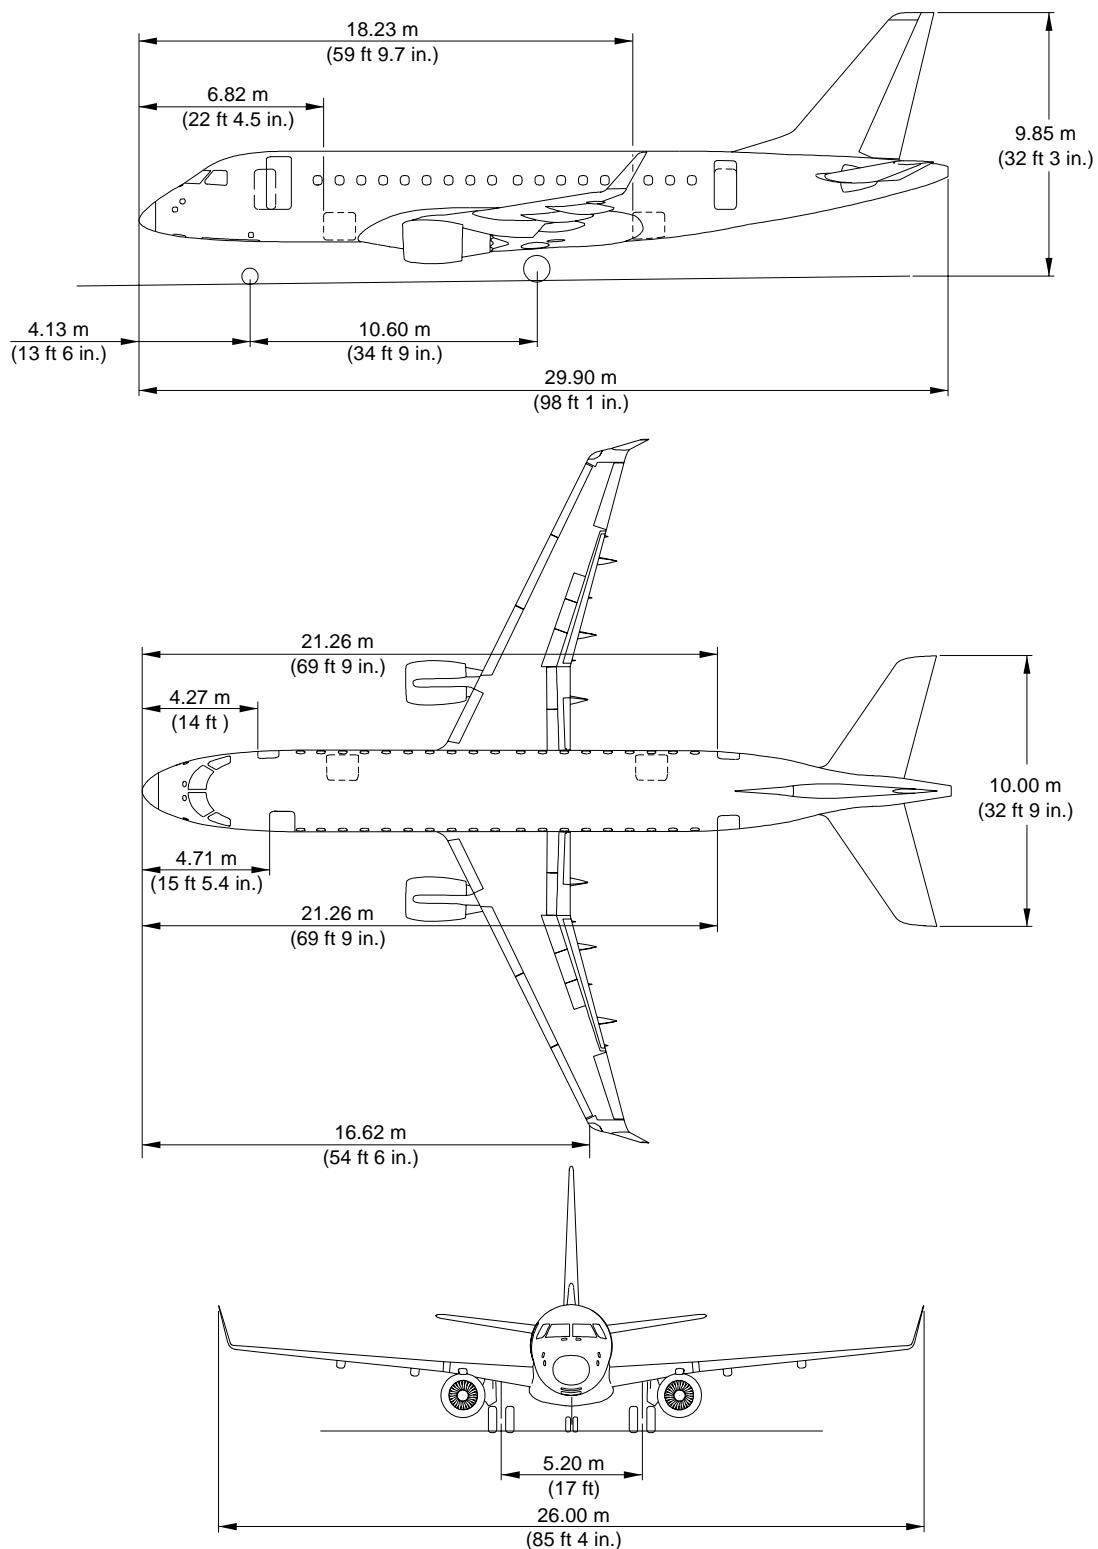

General Aircraft Dimensions  
Figure 2.1

EFFECTIVITY: ALL


**Section 2**  
Page 2-4  
May 11/07

EM170APM020003C.DGN



# EMBRAER 170 AIRPORT PLANNING MANUAL

## 2.3. GROUND CLEARANCES

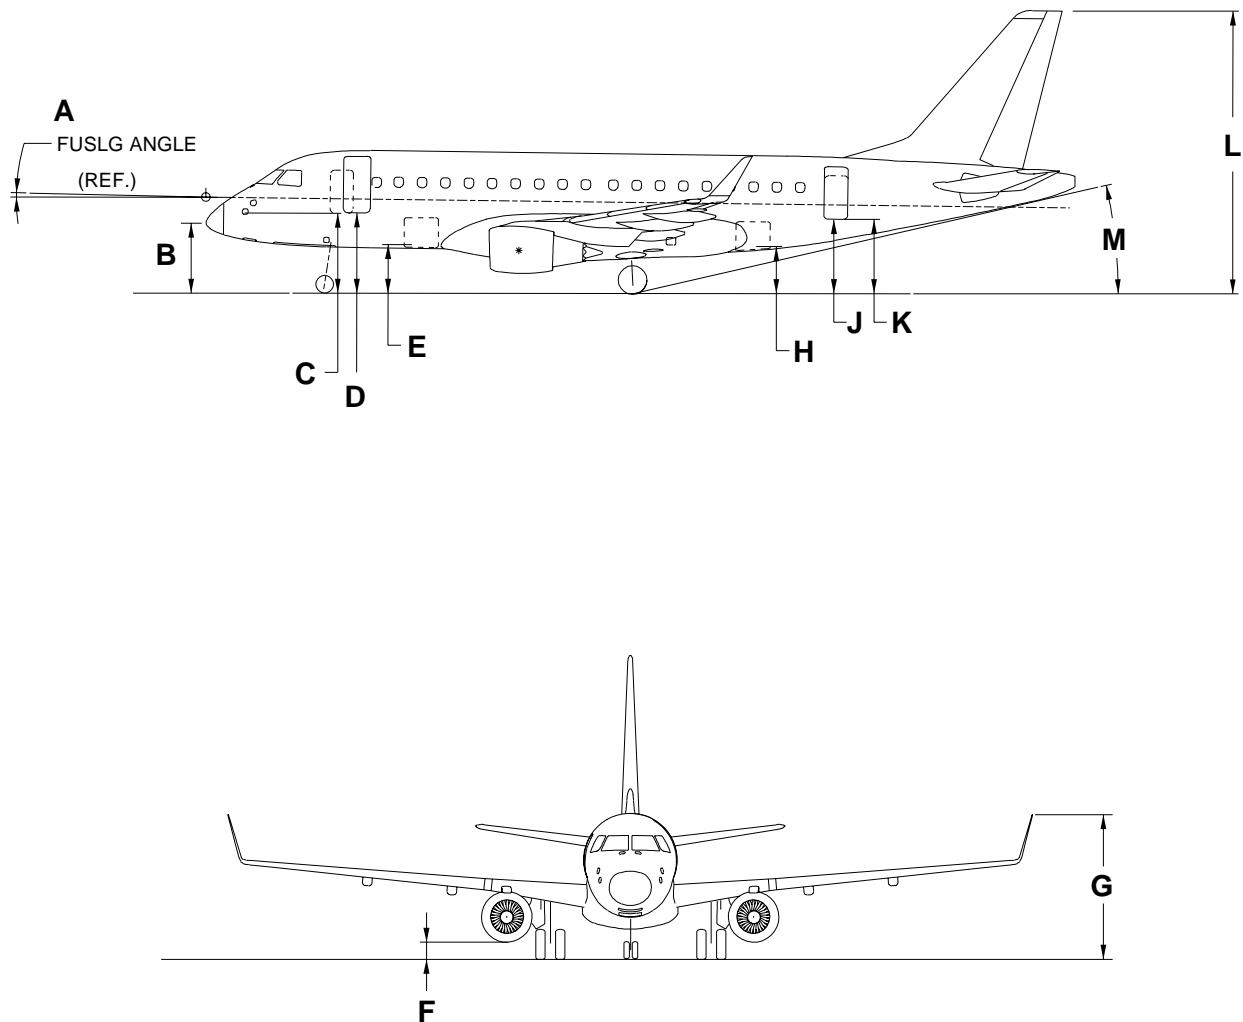

Ground Clearances  
Figure 2.2

EM170APM020005.DGN

EFFECTIVITY: ALL

**Section 2**  
Page 2-5  
Dec 08/03


**EMBRAER 170** AIRPORT  
PLANNING MANUAL

Table 2.3 - Ground Clearance - STD Aircraft Model

WEIGHT	CG (%MAC)	FUS ANGLE (DEG) (A)	NOSE (B)	FORWARD SERVICE DOOR (C)	FORWARD PASSENGER DOOR (D)	FORWARD CARGO DOOR (E)	NACELLE (F)	WINGLET (G)	AFT CARGO DOOR (H)	AFT SER-VICE DOOR (J)	AFT PASSENGER DOOR (K)	VERTICAL TAIL (L)	TAIL SKID ANGULAR CLEAR-ANCE (DEG) (M)
36150 kg 79697 lb	10	0.3	2.13 m 7 ft	2.54 m 8 ft 4 in.	2.54 m 8 ft 4 in.	1.47 m 4 ft 10 in.	0.48 m 1 ft 6 in.	4.50 m 14 ft 9 in.	1.48 m 4 ft 10 in.	2.45 m 8 ft	2.45 m 7 ft 10 in.	9.65 m 31 ft 8 in.	12.6
36150 kg 79697 lb	27	0.6	2.20 m 7 ft 2 in.	2.58 m 8 ft 5 in.	2.58 m 8 ft 5 in.	1.49 m 4 ft 11 in.	0.49 m 1 ft 7 in.	4.47 m 14 ft 8 in.	1.45 m 4 ft 9 in.	2.41 m 7 ft 10 in.	2.41 m 7 ft 10 in.	9.57 m 31 ft 5 in.	12.3
35990 kg 79344 lb	9.8	0.3	2.13 m 7 ft	2.54 m 8 ft 4 in.	2.54 m 8 ft 4 in.	1.47 m 4 ft 10 in.	0.48 m 1 ft 6 in.	4.50 m 14 ft 9 in.	1.48 m 4 ft 10 in.	2.45 m 8 ft	2.45 m 8 ft	9.65 m 31 ft 8 in.	12.7
35990 kg 79344 lb	27	0.6	2.20 m 7 ft 2 in.	2.58 m 8 ft 5 in.	2.58 m 8 ft 5 in.	1.49 m 4 ft 11 in.	0.49 m 1 ft 7 in.	4.47 m 14 ft 8 in.	1.45 m 4 ft 9 in.	2.41 m 7 ft 10 in.	2.41 m 7 ft 10 in.	9.57 m 31 ft 5 in.	12.3
32800 kg 72311 lb	7	0.2	2.13 m 7 ft	2.55 m 8 ft 4 in.	2.54 m 8 ft 4 in.	1.48 m 4 ft 11 in.	0.49 m 1 ft 7 in.	4.53 m 14 ft 10 in.	1.50 m 4 ft 11 in.	2.48 m 8 ft 2 in.	2.48 m 8 ft 2 in.	9.69 m 31 ft 9 in.	12.8
32800 kg 72311 lb	27	0.6	2.20 m 7 ft 2 in.	2.59 m 8 ft 6 in.	2.59 m 8 ft 6 in.	1.50 m 4 ft 11 in.	0.50 m 1 ft 6 in.	4.49 m 14 ft 9 in.	1.47 m 4 ft 10 in.	2.43 m 8 ft	2.43 m 8 ft	9.60 m 31 ft 6 in.	12.4
29600 kg 65257 lb	7	0.2	2.13 m 7 ft	2.55 m 8 ft 4 in.	2.55 m 8 ft 4 in.	1.49 m 4 ft 11 in.	0.51 m 1 ft 8 in.	4.55 m 14 ft 11 in.	1.52 m 4 ft 11 in.	2.50 m 8 ft 2 in.	2.50 m 8 ft 2 in.	9.72 m 31 ft 10 in.	12.9
29600 kg 65257 lb	27	0.5	2.21 m 7 ft 3 in.	2.60 m 8 ft 6 in.	2.60 m 8 ft 6 in.	1.52 m 4 ft 11 in.	0.52 m 1 ft 8 in.	4.51 m 14 ft 9 in.	1.49 m 4 ft 10 in.	2.45 m 8 ft 1 in.	2.45 m 8 ft 1 in.	9.62 m 31 ft 7 in.	12.5
21800 kg 48061 lb	7	0	2.15 m 7 ft 1 in.	2.58 m 8 ft 6 in.	2.58 m 8 ft 6 in.	1.52 m 4 ft 11 in.	0.56 m 1 ft 10 in.	4.62 m 15 ft 2 in.	1.60 m 5 ft 3 in.	2.59 m 8 ft 6 in.	2.59 m 8 ft 6 in.	9.83 m 32 ft 3 in.	13.4
21800 kg 48061 lb	27	0.4	2.24 m 7 ft 5 in.	2.64 m 8 ft 8 in.	2.63 m 8 ft 7 in.	1.56 m 5 ft 1 in.	0.57 m 1 ft 10 in.	4.58 m 15 ft	1.55 m 5 ft 1 in.	2.52 m 8 ft 3 in.	2.52 m 8 ft 3 in.	9.71 m 31 ft 10 in.	12.9

EFFECTIVITY: ALL

**Section 2**

Page 2-6

Jan 09/06


**EMBRAER 170** AIRPORT  
PLANNING MANUAL

Table 2.4 - Ground Clearance - LR, SU or SE Aircraft Models

WEIGHT	CG (%MAC)	FUS ANGLE (DEG) (A)	NOSE (B)	FOR- WARD SERVICE DOOR (C)	FOR- WARD PASSENGER DOOR (D)	FOR- WARD CARGO DOOR (E)	NACELLE (F)	WINGLET (G)	AFT CARGO DOOR (H)	AFT SER- VICE DOOR (J)	AFT PAS- SENGER DOOR (K)	VERTI- CAL TAIL (L)	TAIL SKID ANGU- LAR CLEAR- ANCE (DEG) (M)
37360 kg 82365 lb	11.8	0.4	2.14 m 7 ft	2.54 m 8 ft 4 in.	2.54 m 8 ft 4 in.	1.47 m 4 ft 10 in.	0.48 m 1 ft 6 in.	4.49 m 14 ft 10 in.	1.47 m 4 ft 10 in.	2.44 m 8 ft	2.44 m 8 ft	9.63 m 31 ft 7 in.	12.6
37360 kg 82362 lb	27	0.6	2.19 m 7 ft 2 in.	2.58 m 8 ft 5 in.	2.57 m 8 ft 5 in.	1.49 m 4 ft 11 in.	0.48 m 1 ft 6 in.	4.47 m 14 ft 8 in.	1.44 m 4 ft 9 in.	2.40 m 7 ft 10 in.	2.40 m 8 ft	9.56 m 31 ft 4 in.	12.3
37200 kg 82011 lb	11.8	0.4	2.14 m 7 ft	2.54 m 8 ft 4 in.	2.54 m 8 ft 4 in.	1.47 m 4 ft 10 in.	0.48 m 1 ft 6 in.	4.49 m 14 ft 10 in.	1.47 m 4 ft 10 in.	2.44 m 8 ft	2.44 m 8 ft	9.64 m 31 ft 8 in.	12.6
37200 kg 82011 lb	27	0.6	2.19 m 7 ft 2 in.	2.58 m 8 ft 5 in.	2.57 m 8 ft 5 in.	1.49 m 4 ft 11 in.	0.48 m 1 ft 6 in.	4.47 m 14 ft 8 in.	1.44 m 4 ft 9 in.	2.40 m 7 ft 10 in.	2.40 m 8 ft	9.56 m 31 ft 4 in.	12.3
32800 kg 72311 lb	7	0.2	2.13 m 7 ft	2.55 m 8 ft 4 in.	2.54 m 8 ft 4 in.	1.48 m 4 ft 11 in.	0.49 m 1 ft 7 in.	4.53 m 14 ft 10 in.	1.50 m 4 ft 11 in.	2.48 m 8 ft 2 in.	2.48 m 8 ft 2 in.	9.69 m 31 ft 9 in.	12.8
32800 kg 72311 lb	27	0.6	2.20 m 7 ft 2 in.	2.59 m 8 ft 6 in.	2.59 m 8 ft 6 in.	1.50 m 4 ft 11 in.	0.50 m 1 ft 6 in.	4.49 m 14 ft 9 in.	1.47 m 4 ft 10 in.	2.43 m 8 ft	2.43 m 8 ft	9.60 m 31 ft 6 in.	12.4
29600 kg 65257 lb	7	0.2	2.13 m 7 ft	2.55 m 8 ft 4 in.	2.55 m 8 ft 4 in.	1.49 m 4 ft 11 in.	0.51 m 1 ft 8 in.	4.55 m 14 ft 11 in.	1.52 m 4 ft 11 in.	2.50 m 8 ft 2 in.	2.50 m 8 ft 2 in.	9.72 m 31 ft 10 in.	12.9
29600 kg 65257 lb	27	0.5	2.21 m 7 ft 3 in.	2.60 m 8 ft 6 in.	2.60 m 8 ft 6 in.	1.52 m 4 ft 11 in.	0.52 m 1 ft 8 in.	4.51 m 14 ft 9 in.	1.49 m 4 ft 10 in.	2.45 m 8 ft 1 in.	2.45 m 8 ft 1 in.	9.62 m 31 ft 7 in.	12.5
21800 kg 48061 lb	7	0	2.15 m 7 ft 1 in.	2.58 m 8 ft 6 in.	2.58 m 8 ft 6 in.	1.52 m 4 ft 11 in.	0.56 m 1 ft 10 in.	4.62 m 15 ft 2 in.	1.60 m 5 ft 3 in.	2.59 m 8 ft 6 in.	2.59 m 8 ft 6 in.	9.83 m 32 ft 3 in.	13.4
21800 kg 48061 lb	27	0.4	2.24 m 7 ft 5 in.	2.64 m 8 ft 8 in.	2.63 m 8 ft 7 in.	1.56 m 5 ft 1 in.	0.57 m 1 ft 10 in.	4.58 m 15 ft	1.55 m 5 ft 1 in.	2.52 m 8 ft 3 in.	2.52 m 8 ft 3 in.	9.71 m 31 ft 10 in.	12.9

EFFECTIVITY: ALL

**Section 2**

Page 2-7

Jan 09/06



# **EMBRAER 170 AIRPORT PLANNING MANUAL**

## **2.4. INTERIOR ARRANGEMENT**

The interior arrangement provides accommodation for two pilots, one observer, two flight attendants, and 70 passengers in 32 in pitch standard configuration. One additional flight attendant seat is available as an option.

### **2.4.1. Passenger Cabin**

The passenger cabin accommodates 70 passengers in 17 double seats on the LH side, and 18 double seats on the RH side.


As an option, the passenger cabin can be provided with double first-class seats on the RH side and single first-class seats on the LH side.

The main dimensions of the passenger cabin are presented below:

- • Height - 2.00 m (6 ft 7 in.)
- • Width - 2.74 m (9 ft)
- • Aisle width - 0.49 m (1 ft 7 in.)
- • Pitch - 0.82 m (32 in.)



# **EMBRAER 170 AIRPORT PLANNING MANUAL**

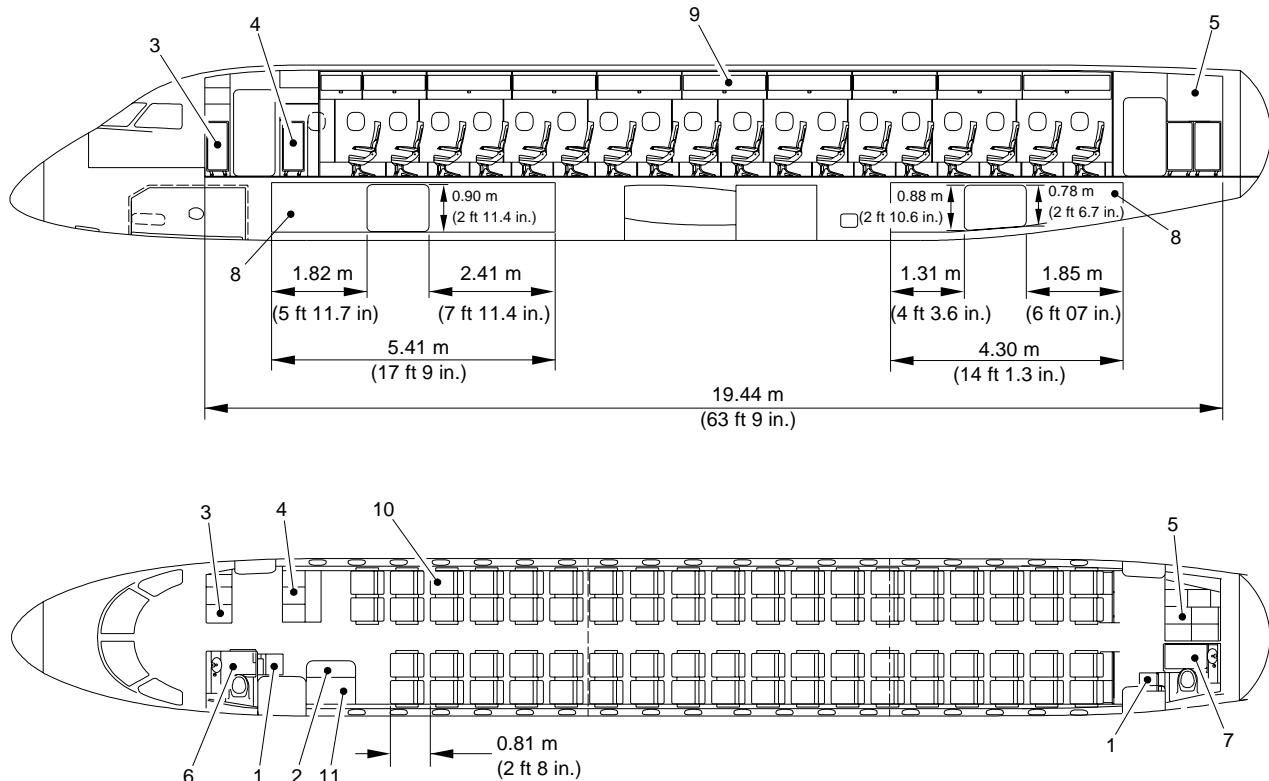

1 – FLIGHT ATTENDANT SEAT

2 – WARDROBE

3 – FWD RH G1 GALLEY

4 – FWD RH G2 GALLEY

5 – AFT RH GALLEY

6 – FWD LAVATORY

7 – AFT LAVATORY

8 – CARGO COMPARTMENT

9 – OVERHEAD BIN

10 – PASSENGER SEAT

11 – AIRSTAIR STOWAGE

CARGO/BAGGAGE VOLUME	
CARGO COMPARTMENT	14.39 m <sup>3</sup> (508.18 ft <sup>3</sup> )
OVERHEAD BIN	0.06 m <sup>3</sup> / pax (2.0 ft <sup>3</sup> / pax)
UNDERSEAT VOLUME	0.04 m <sup>3</sup> / pax (1.4 ft <sup>3</sup> / pax)

Typical Interior Arrangements  
Figure 2.3

EM170APM020004D.DGN

EFFECTIVITY: ALL

**Section 2**  
Page 2-9  
Oct 09/15



## **EMBRAER 170 AIRPORT PLANNING MANUAL**

### **2.4.2. Cargo Compartments**

Two cargo compartments located underfloor are available, one forward of the wing, and the other aft of the wing.

The cargo compartments comply with the FAR-25/JAR-25/RBHA-25 "class C" compartment classification.

The table below contains the capacity of the cargo compartment:

Table 2.5 - Capacity of the Cargo Compartment

CARGO COMPARTMENT	LOADING	VOLUME
FWD [1]	1370 kg (3020 lb)	8.59 m <sup>3</sup> (303.35 ft <sup>3</sup> )
AFT	1030 kg (2270 lb)	5.80 m <sup>3</sup> (204.83 ft <sup>3</sup> )
Total	2400 kg (5290 lb)	14.39 m <sup>3</sup> (508.18 ft <sup>3</sup> )

1. Standard configuration (loading and volume may vary according to optional equipment installed).

The cargo compartments are provided with the following features:

- Optional vertical nets;
- Door net at each cargo door.

### **2.4.3. Cockpit**


The cockpit is acoustically and thermally insulated for appearance and durability. It follows the worldwide trend of rounded edges to avoid harm to the flight crew.

The cockpit is separated from the passenger cabin by a bulkhead provided with a lockable door. The cockpit door has a locking system, which can only be opened from the cockpit side, a peep hole and an escape mechanism on the cockpit side.



# EMBRAER 170 AIRPORT PLANNING MANUAL

## 2.5. PASSENGER CABIN CROSS SECTION

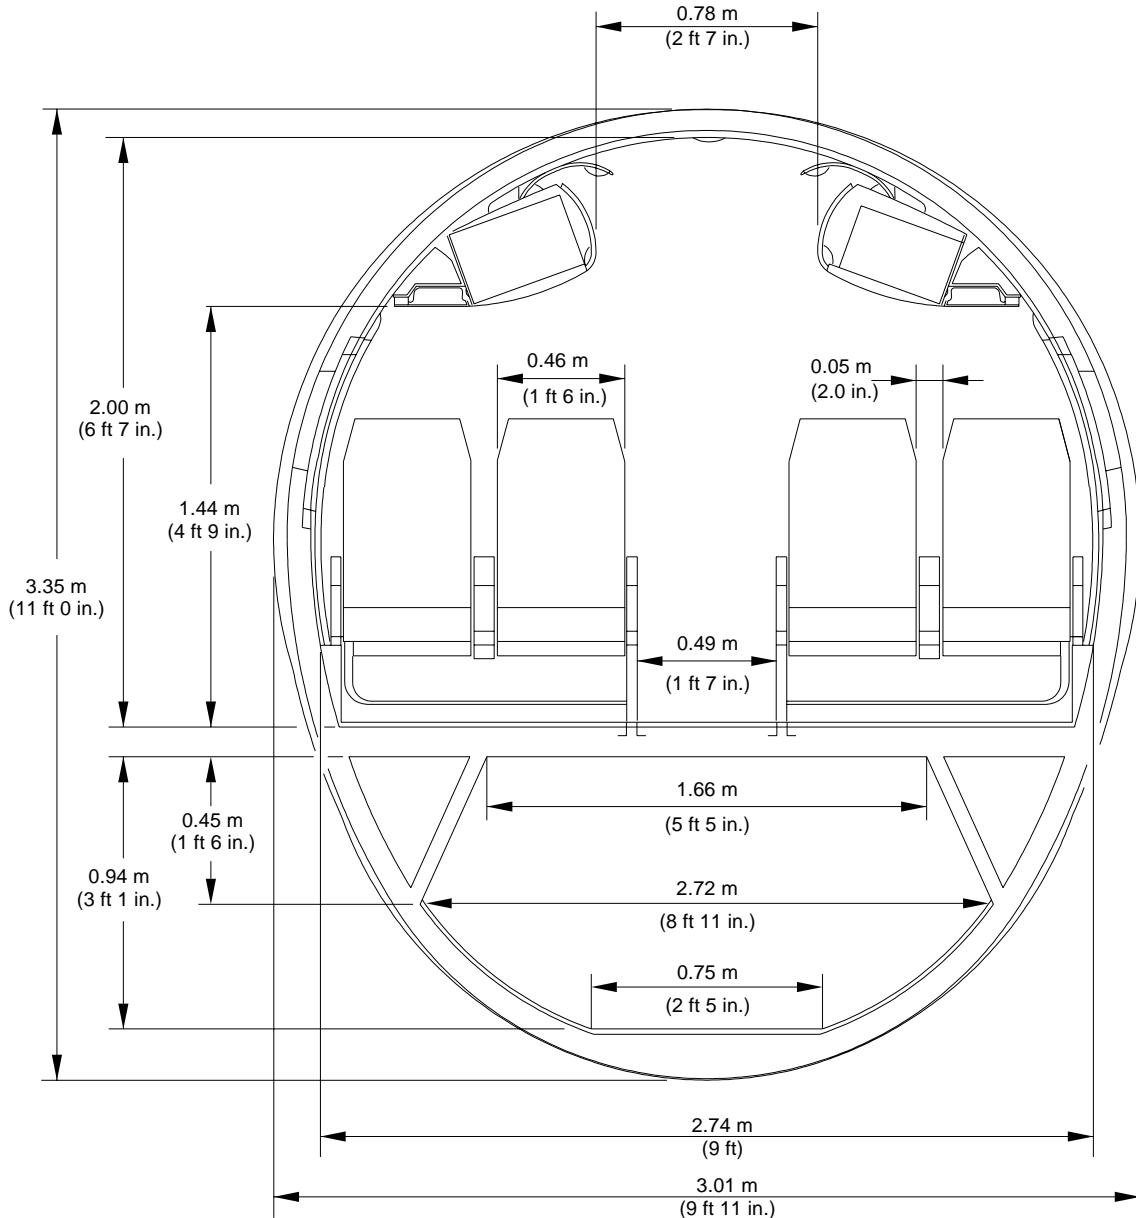


Economy Class Passenger Cabin Cross-Section  
Figure 2.4

EM170APM020001A.DGN

EFFECTIVITY: ALL

**Section 2**  
Page 2-11  
Dec 18/04

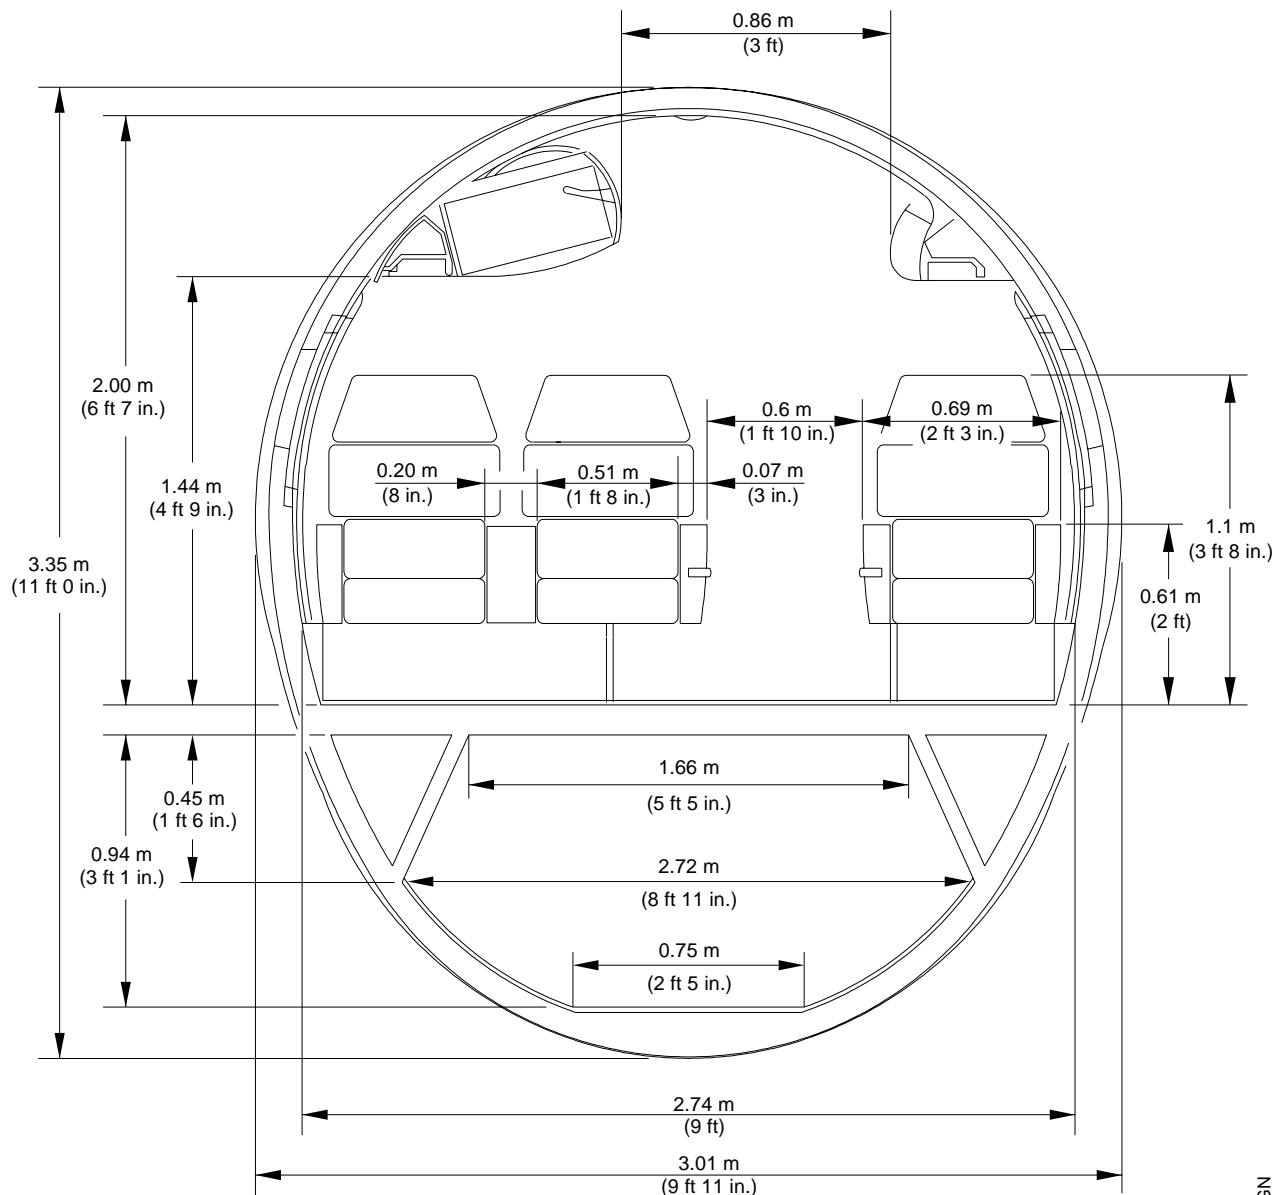
**EMBRAER 170 AIRPORT  
PLANNING MANUAL**


EM170APM0200002A DGN

First Class Passenger Cabin Cross-Section  
Figure 2.5

EFFECTIVITY: ALL

**Section 2**  
Page 2-12  
Dec 18/04



# **EMBRAER 170 AIRPORT PLANNING MANUAL**

## **2.6. LOWER COMPARTMENT CONTAINERS**

Not applicable

EFFECTIVITY: ALL

**Section 2**



Page 2-13

Dec 18/04



# EMBRAER 170 AIRPORT PLANNING MANUAL

## 2.7. DOOR CLEARANCES

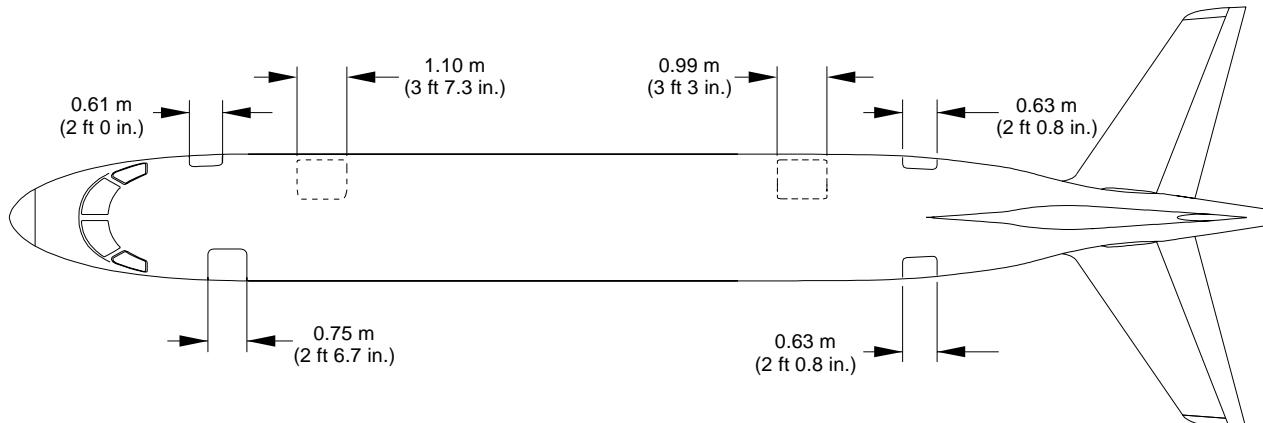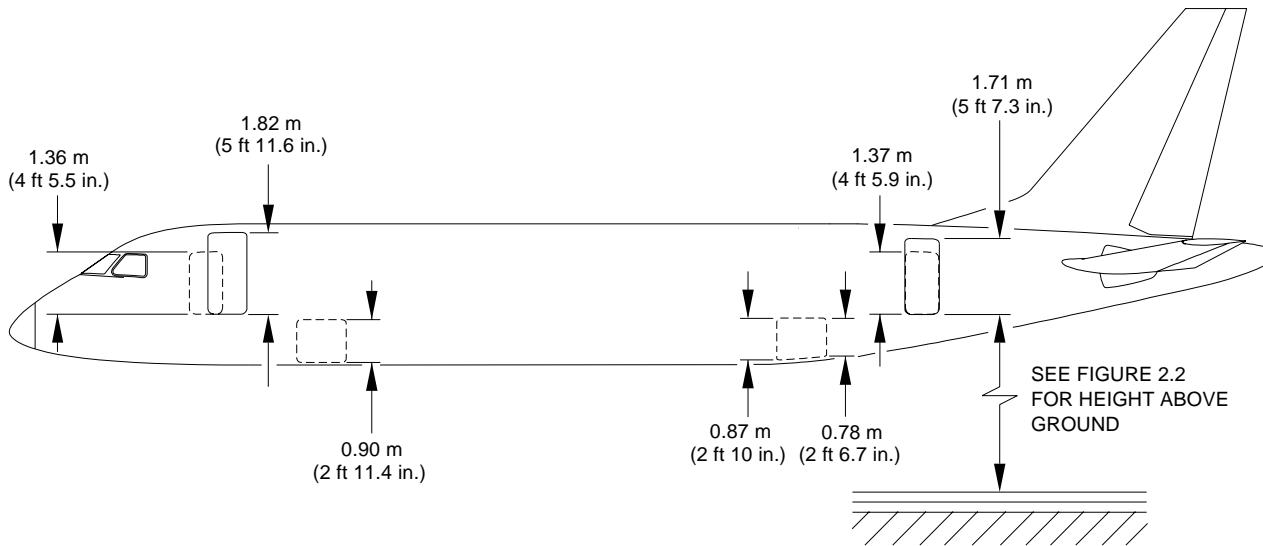

**NOTE:** FOR DIMENSIONS OF ALL DOORS,  
CONSIDER THAT AIRCRAFT IS IN OPERATION,  
THAT IS, EQUIPPED WITH DOOR LININGS AND  
DOOR SURROUNDS.

EM170APM020008C.DGN

Door Dimensions  
Figure 2.6

EFFECTIVITY: ALL

**Section 2**  
Page 2-14  
Jun 29/06



# EMBRAER 170 AIRPORT PLANNING MANUAL

## 3. AIRCRAFT PERFORMANCE

### 3.1. GENERAL INFORMATION

The performance of the aircraft and engine depends on the generation of forces by the interaction between the aircraft or engine, and the air mass through which it flies. The atmosphere has a pronounced effect on the temperature, pressure and density of the air.

The ICAO establishes standard basics for estimating and comparing aircraft and engine performance. Some ICAO standard basics are shown below:

1. Sea level standard day:

Standard Temperature  $T_0 = 15^{\circ}\text{C}$  (288.15 K)

Standard Pressure  $P_0 = 101.3 \text{ kPa}$  (29.92 inHg)

Standard Density  $\rho_0 = 0.002377 \text{ slug per cubic feet}$

2. ISA

Table 3.1 - ISA

ALTITUDE		TEMPERATURE	
m	ft	°C	°F
0	0	15.0	59.0
305	1000	13.0	55.4
610	2000	11.0	51.9
915	3000	9.1	48.3
1220	4000	7.1	44.7
1524	5000	5.1	41.2
3049	10000	-4.8	23.3
4573	15000	-14.7	5.5
6098	20000	-24.6	-12.3
7622	25000	-34.5	-30.2
9146	30000	-44.4	-48.0
11003	36089	-56.5	-69.7
12195	40000	-56.5	-69.7

NOTE: The performance data shown in this section must not be used for operations.

NOTE: For further information about performance, refer to AOM and AFM.

Tire speed limits are not applicable to this specific aircraft.

This section provides the following information:

- The payload x range charts
- The takeoff field length charts
- The landing field length charts

NOTE: For other charts containing payload x ranges, takeoff field lengths and/or landing field lengths with conditions different from those presented in this section, Embraer should be contacted so that these charts can be obtained.



# **EMBRAER 170 AIRPORT PLANNING MANUAL**

## **3.2. PAYOUT X RANGE**

The payload x range charts are based on the following conditions;

- CF34 - 8E5 and CF34 - 8E5A1 engine models;
- Aircraft carrying passengers at 100 kg (220 lb) each one;
- Flight level 350, that represents the cruising altitude equal to 10668 m (35000 ft);
- Atmosphere according to ISA or ISA + 10 °C conditions;
- MTOW.





# EMBRAER 170 AIRPORT PLANNING MANUAL

## PAYOUT VS RANGE

CF34 - 8E5A1 & - 8E5 ENGINES  
FLIGHT LEVEL 350  
ISA

RESERVE : 100 nm ALTERNATE + 45 min FLIGHT

MTOW = 35990 kg (79344 lb)

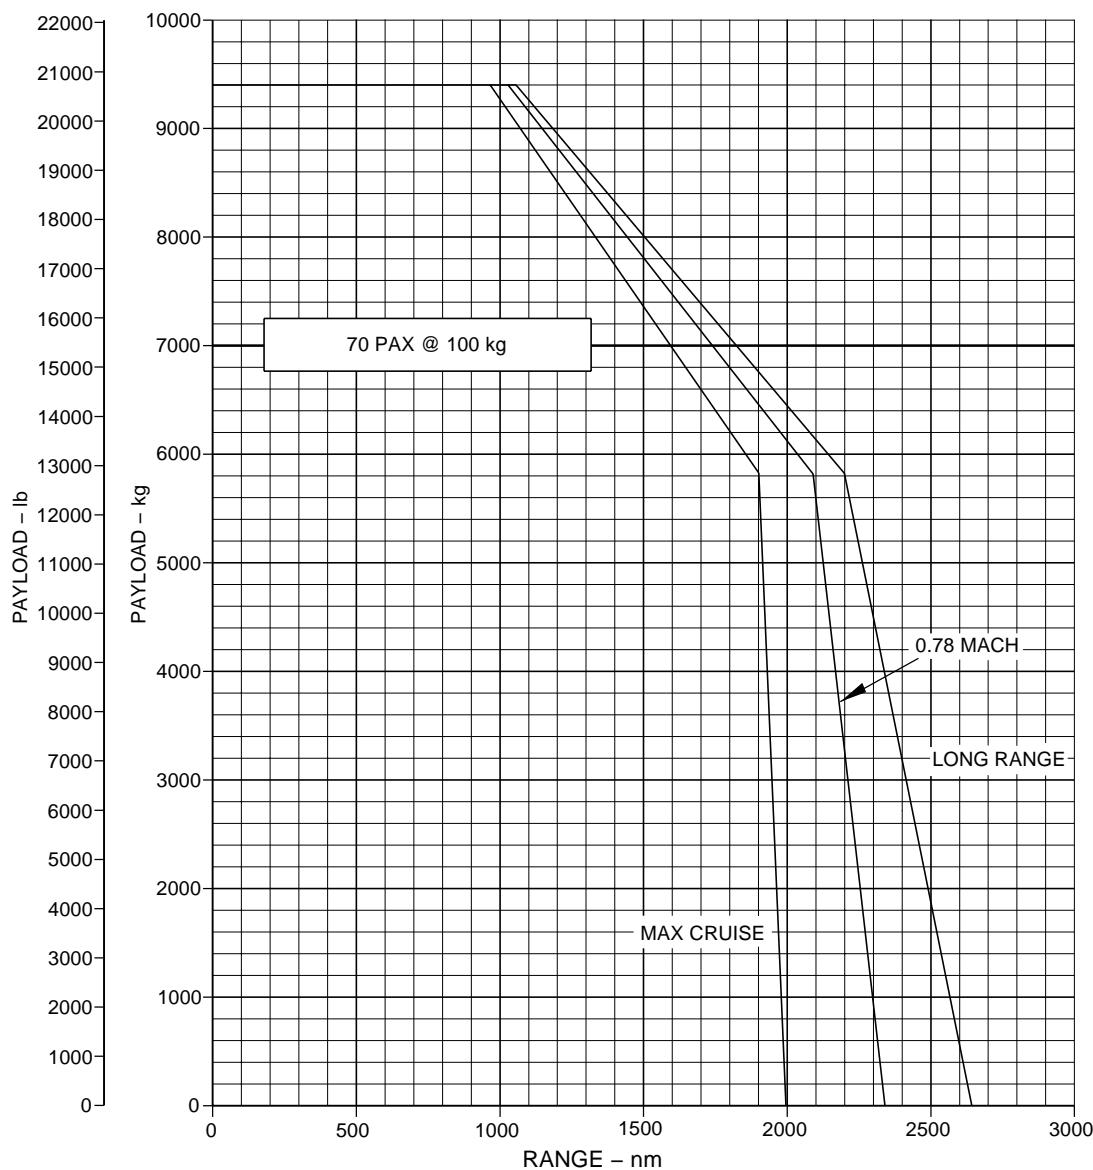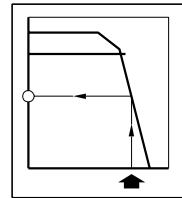

### NOTES:

MAX TAKEOFF WEIGHT	-----	35990 kg (79344 lb)
MAX ZERO FUEL WEIGHT	-----	30140 kg (66447 lb)
BASIC OPERATING WEIGHT	-----	20736 kg (45715 lb)
MAX USABLE FUEL	-----	9428 Kg (20785 lb)

Payload x Range - ISA Conditions  
Figure 3.1



# EMBRAER 170 AIRPORT PLANNING MANUAL

## PAYOUT VS RANGE



CF34 - 8E5A1 & - 8E5 ENGINES

FLIGHT LEVEL 350

ISA + 10°C

RESERVE : 100 nm ALTERNATE + 45 min FLIGHT

MTOW = 35990 kg (79344 lb)

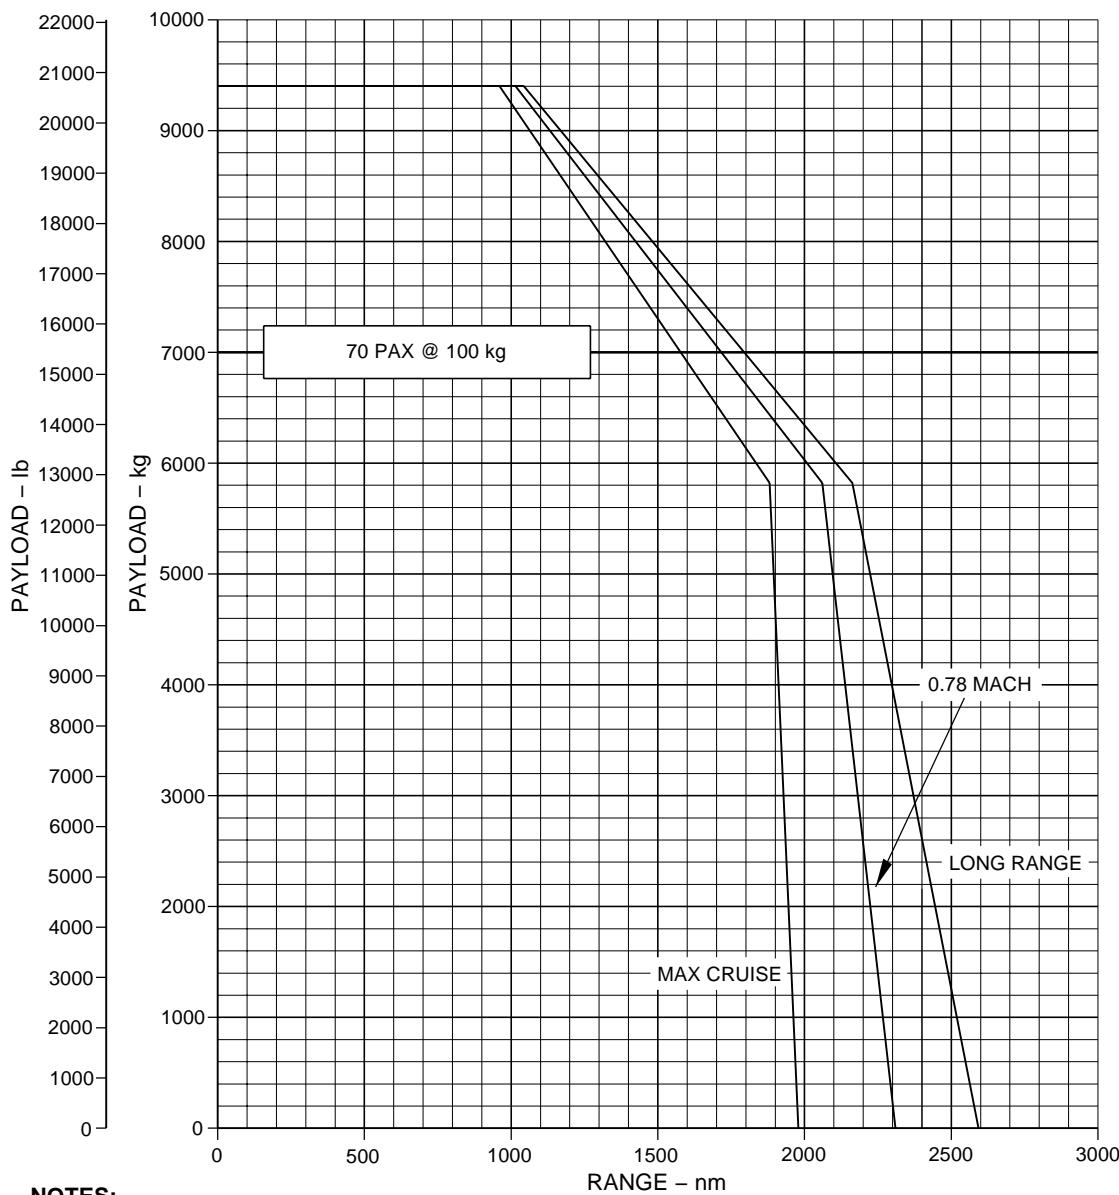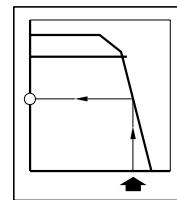

### NOTES:


MAX TAKEOFF WEIGHT	-	-	35990 kg (79344 lb)
MAX ZERO FUEL WEIGHT	-	-	30140 kg (66447 lb)
BASIC OPERATING WEIGHT	-	-	20736 kg (45715 lb)
MAX USABLE FUEL	-	-	9428 Kg (20785 lb)

Payload x Range - ISA + 10 °C Conditions  
Figure 3.2

EM170APM030004D DGN



# EMBRAER 170 AIRPORT PLANNING MANUAL

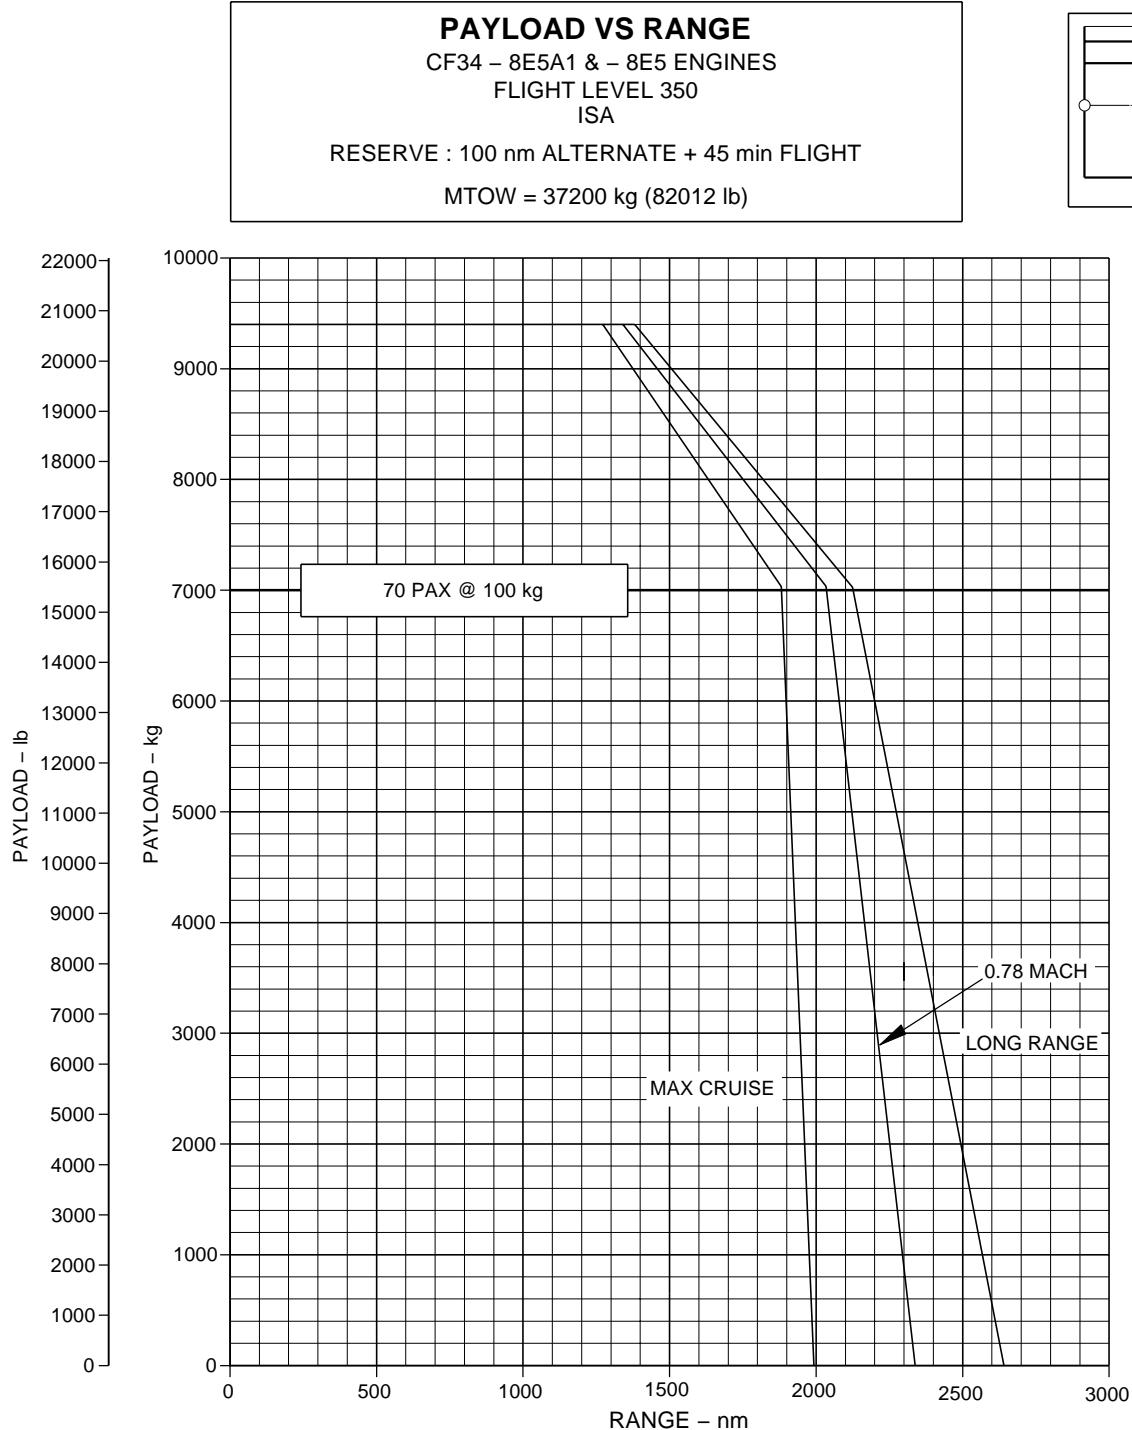


**NOTES:**

MAX TAKEOFF WEIGHT	37200 kg (82012 lb)
MAX ZERO FUEL WEIGHT	30140 kg (66447 lb)
BASIC OPERATING WEIGHT	20736 kg (45715 lb)
MAX USABLE FUEL	9428 Kg (20785 lb)

Payload x Range - ISA Conditions  
Figure 3.3



# EMBRAER 170 AIRPORT PLANNING MANUAL

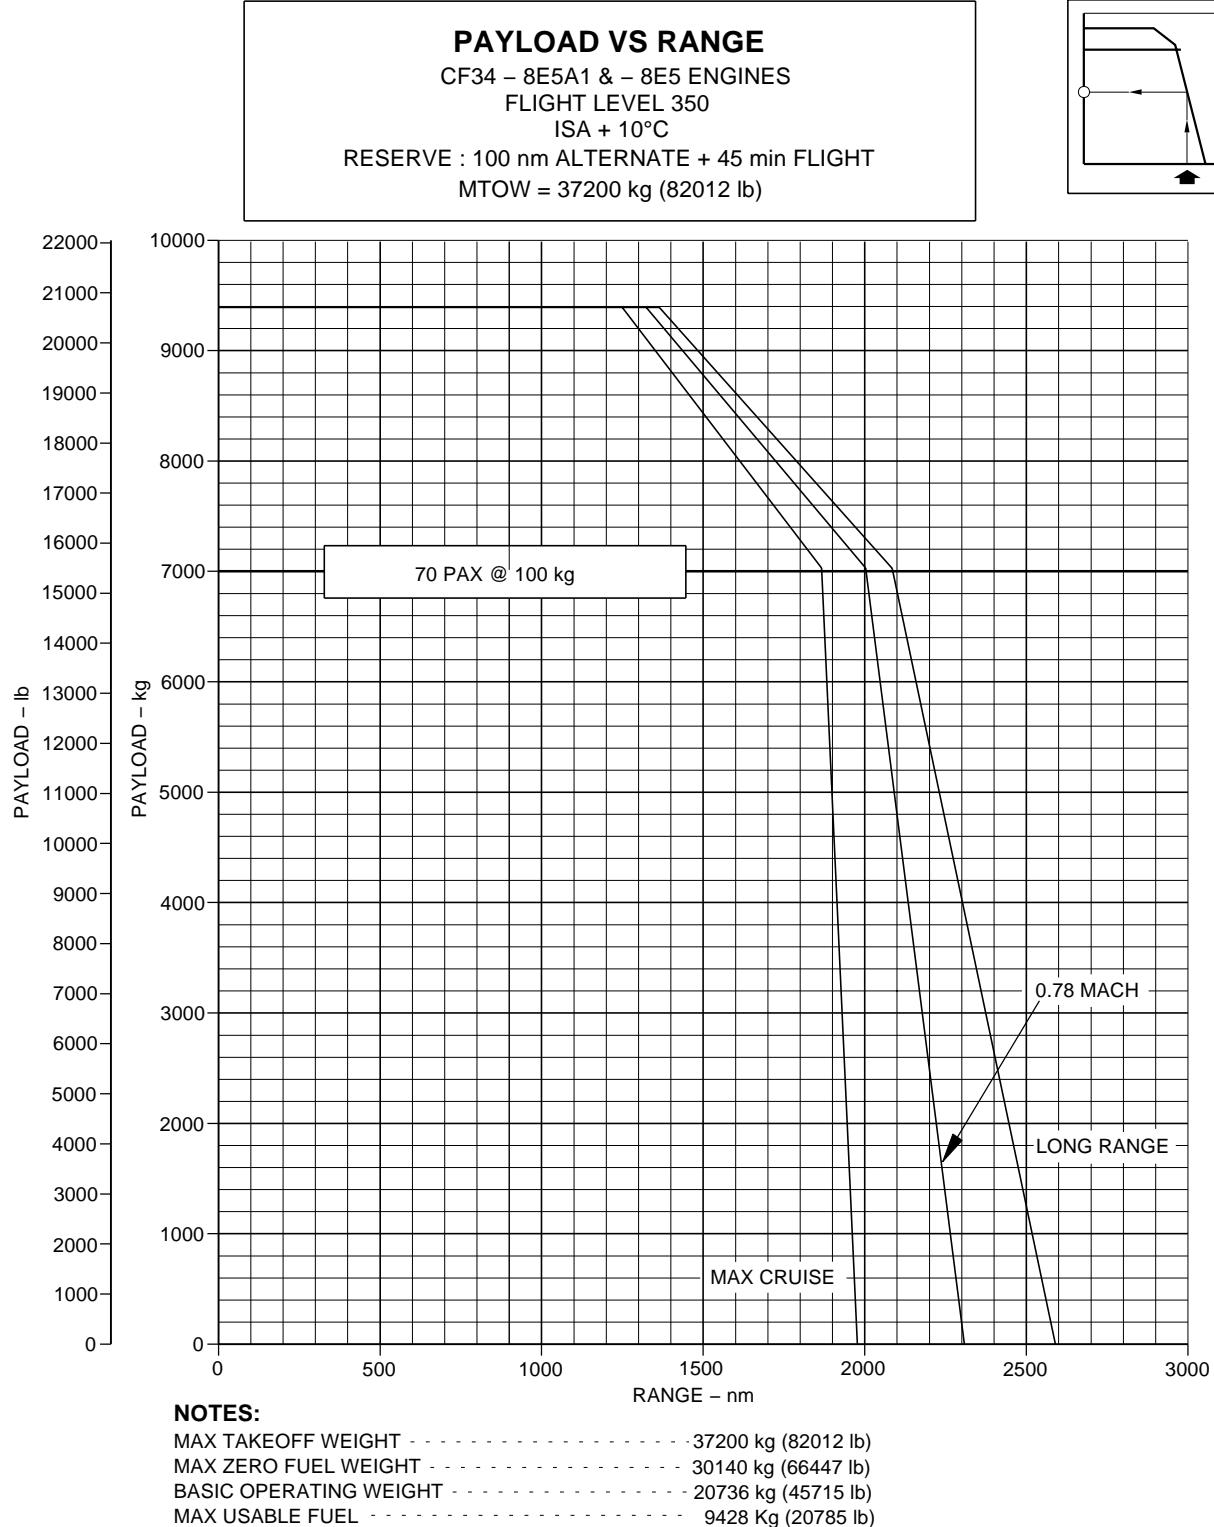

EM170APM030001C.DGN

Payload x Range - ISA + 10 °C Conditions  
Figure 3.4

EFFECTIVITY: EMBRAER 170 LR ACFT MODEL

**Section 3**  
Page 3-6  
Oct 31/12



# **EMBRAER 170 AIRPORT PLANNING MANUAL**

### **3.3. TAKEOFF FIELD LENGTHS**


The takeoff performance is based on the requirements of JAR 25, Change 14, plus amendment 25/96/1. The takeoff field length charts provide data about the maximum takeoff weights, for compliance with the operating regulations relating to takeoff field lengths.

Data are presented according to the following associated conditions:

- CF34 - 8E5 and CF34 - 8E5A1 engine models;
- Takeoff Mode: 1;
- ATTCS positioning: ON and OFF;
- Flaps setting position: 1, 2 and 4;
- Pavement conditions: dry, hard paved and level runway surface with no obstacles;
- Zero wind and atmosphere according to ISA or ISA + 15 °C conditions;
- Pack OFF: No engine bleed extraction for air conditioning packs was considered in the takeoff and landing charts.



# EMBRAER 170 AIRPORT PLANNING MANUAL

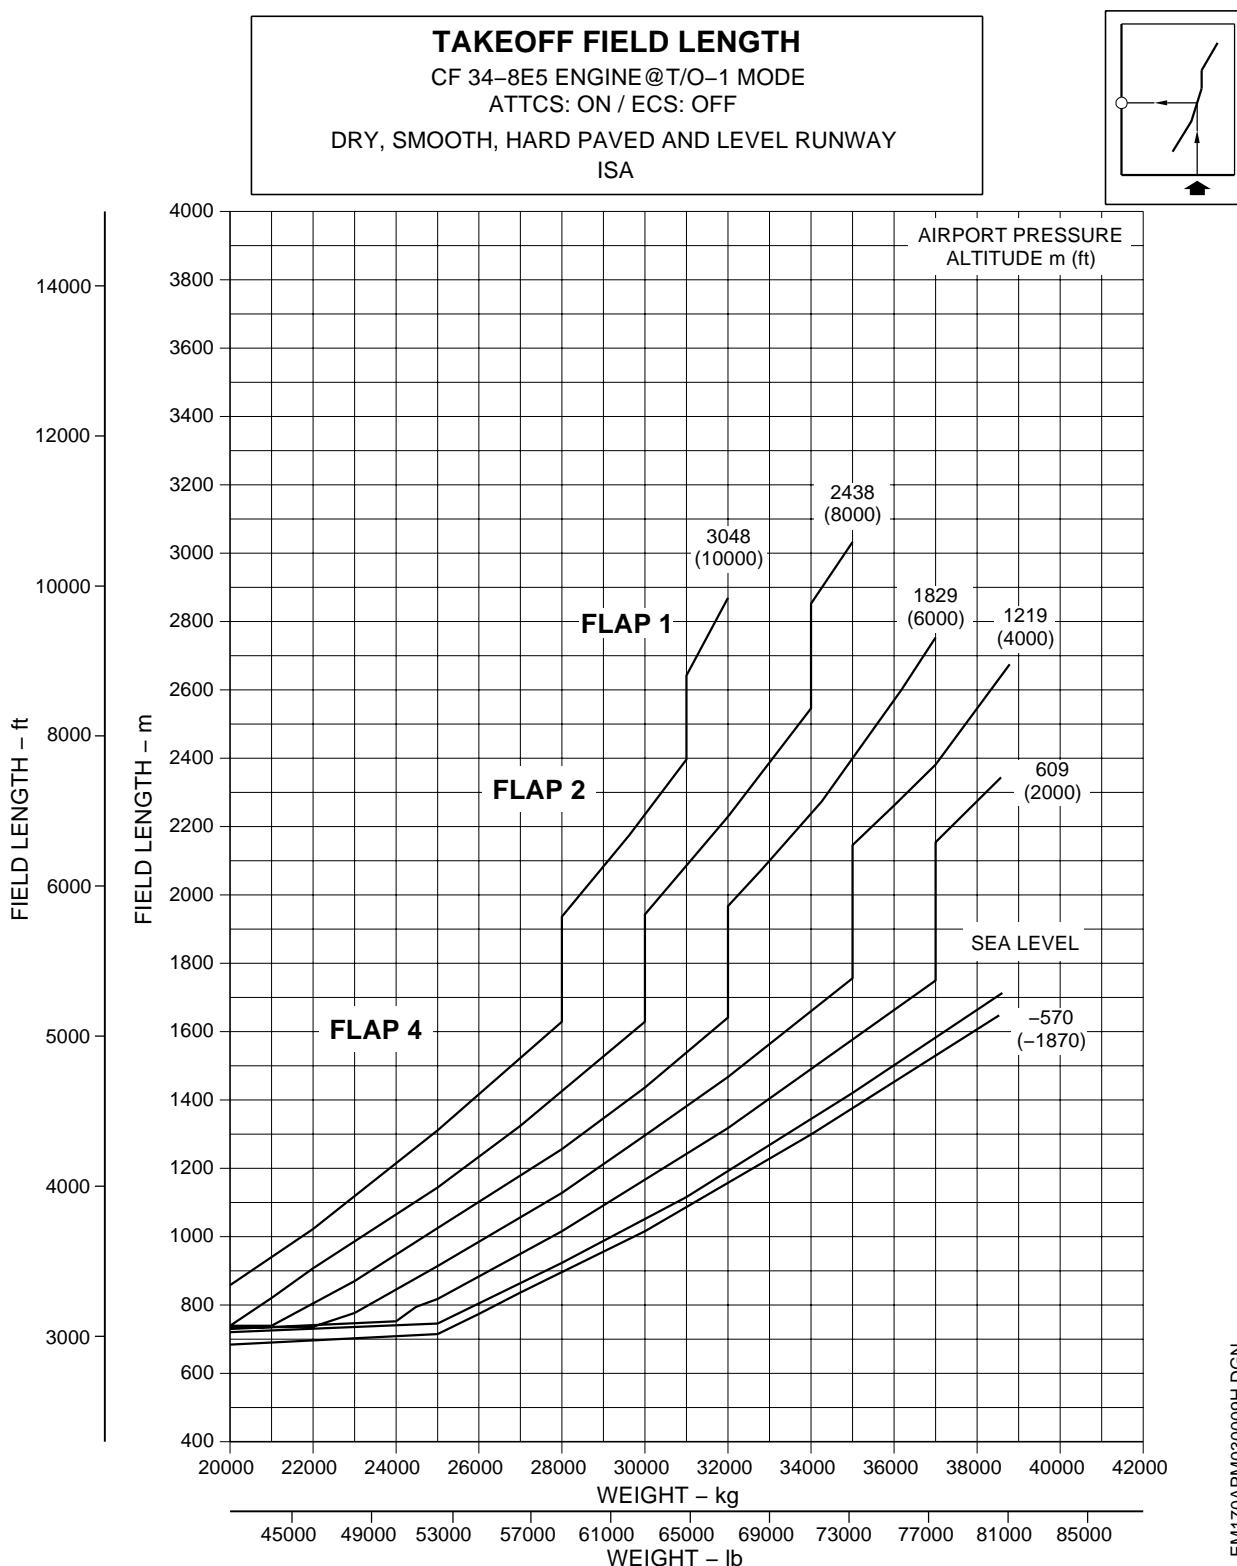


Takeoff Field Lengths - ISA Conditions  
Figure 3.5

EFFECTIVITY: ALL

Section 3  
Page 3-8  
Oct 07/14



# EMBRAER 170 AIRPORT PLANNING MANUAL

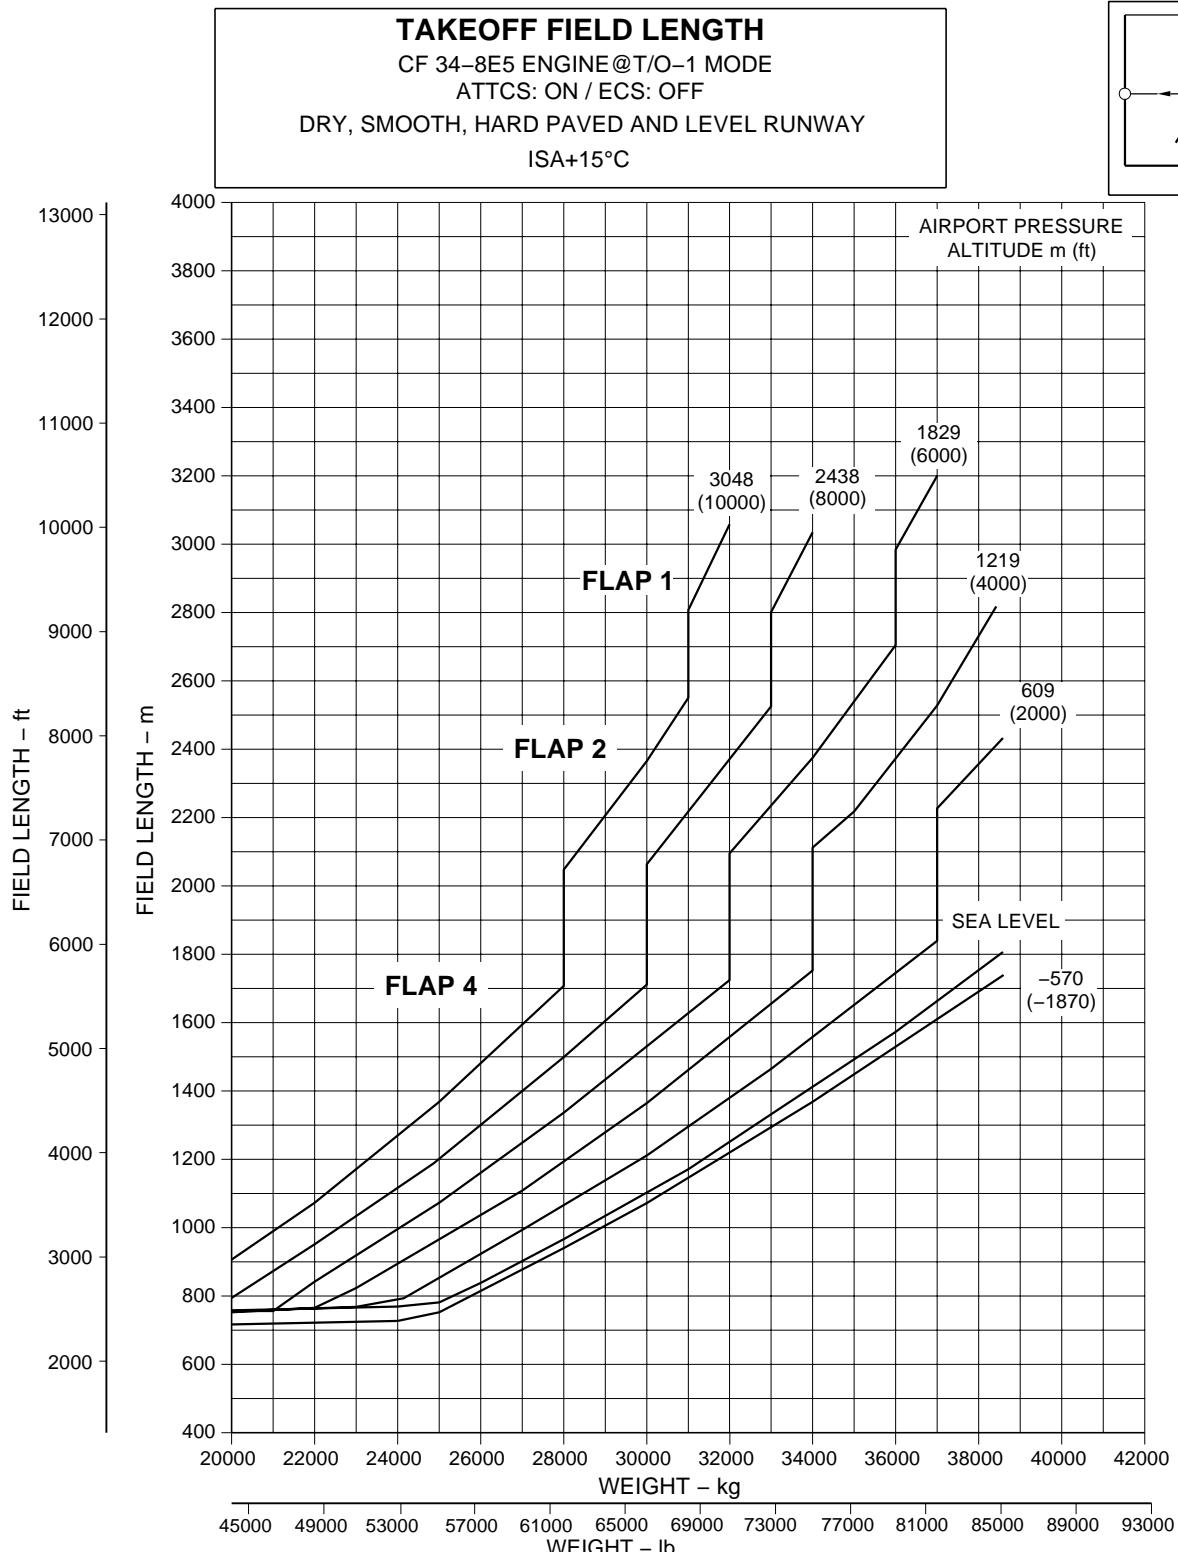


Takeoff Field Lengths - ISA + 15 °C Conditions  
Figure 3.6

EFFECTIVITY: ALL

Section 3  
Page 3-9  
Oct 07/14



# EMBRAER 170 AIRPORT PLANNING MANUAL

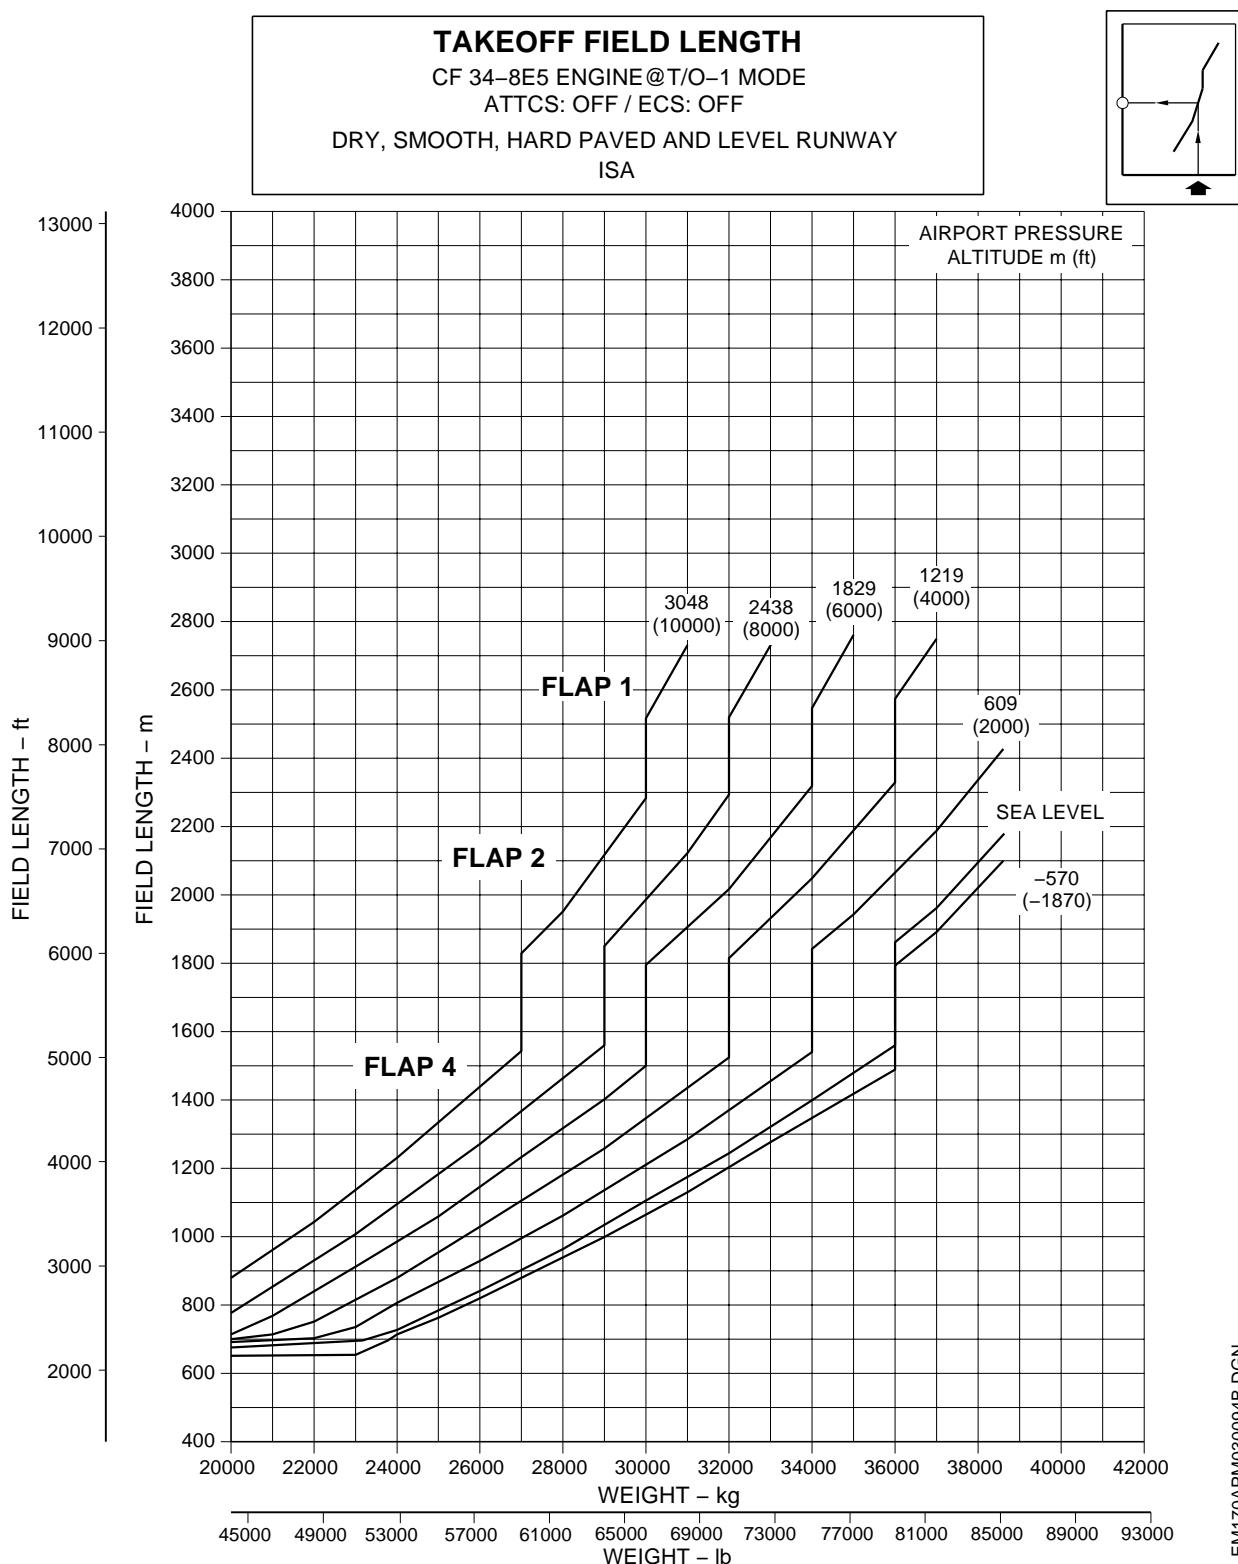


Takeoff Field Lengths - ISA Conditions  
Figure 3.7

EFFECTIVITY: ALL

Section 3  
Page 3-10  
Oct 07/14



# EMBRAER 170 AIRPORT PLANNING MANUAL

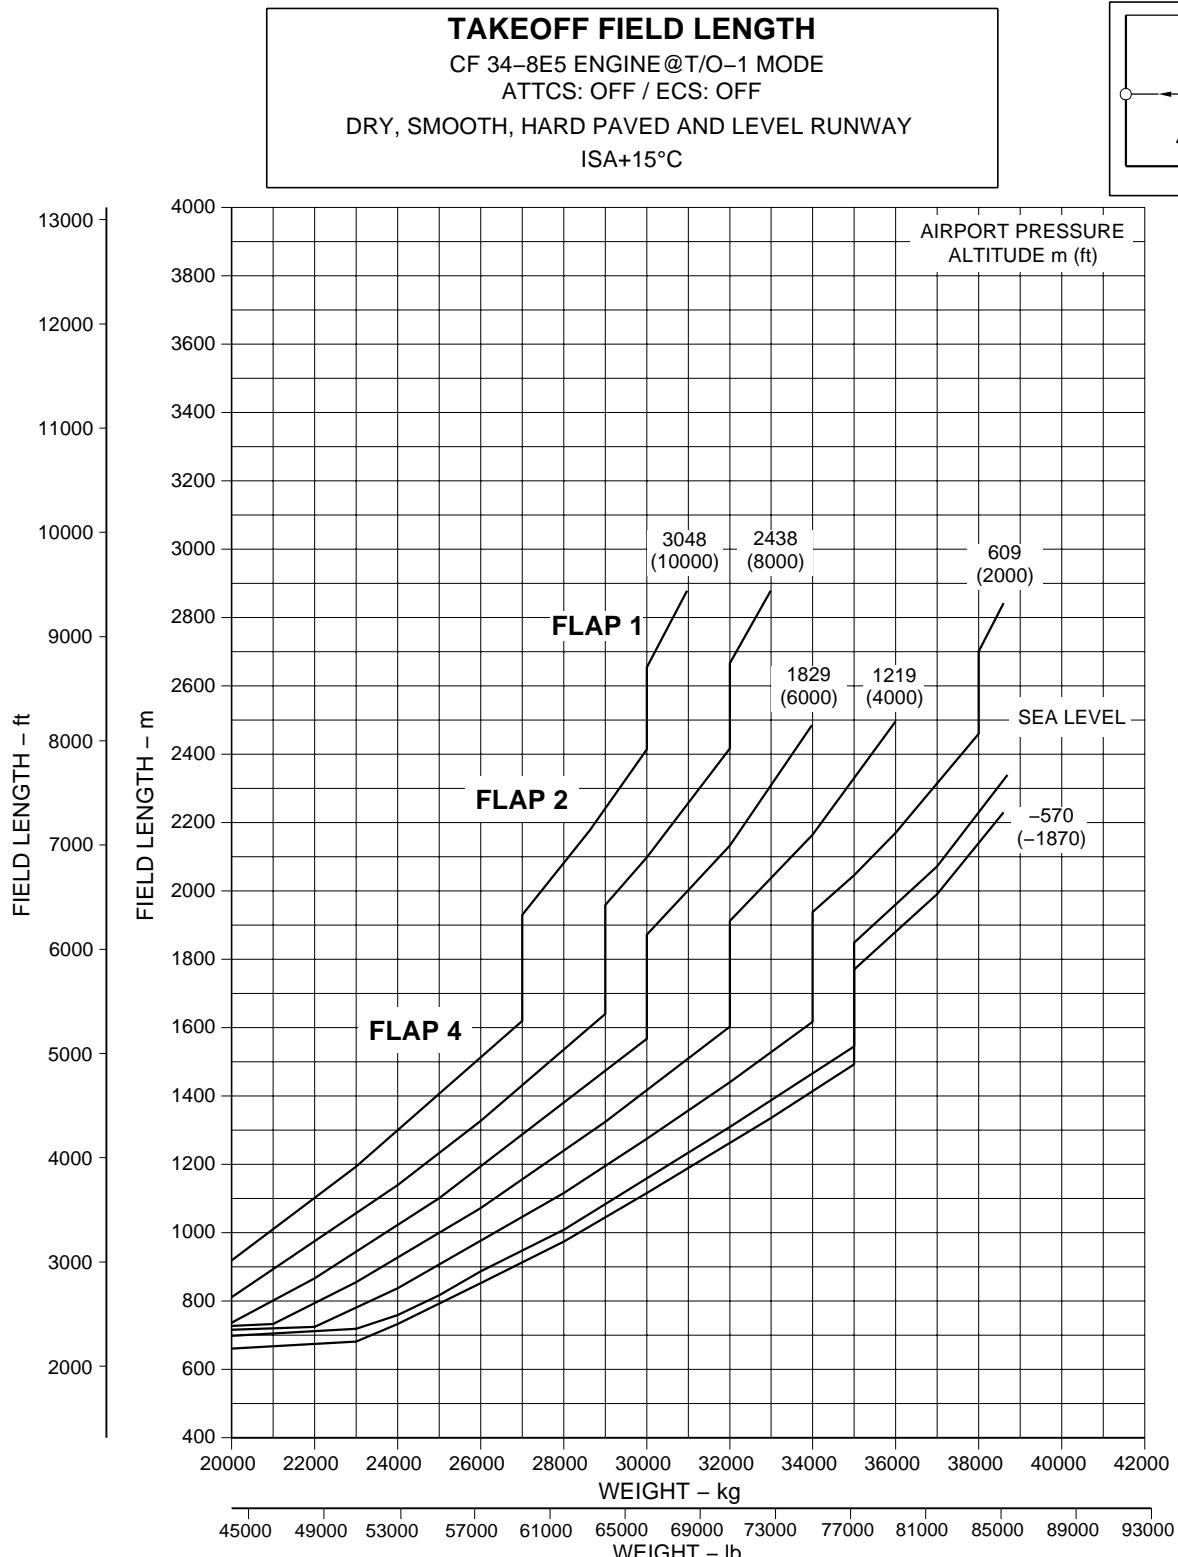


Takeoff Field Lengths - ISA + 15 °C Conditions  
Figure 3.8

EM170APM030095B.DGN



# EMBRAER 170 AIRPORT PLANNING MANUAL

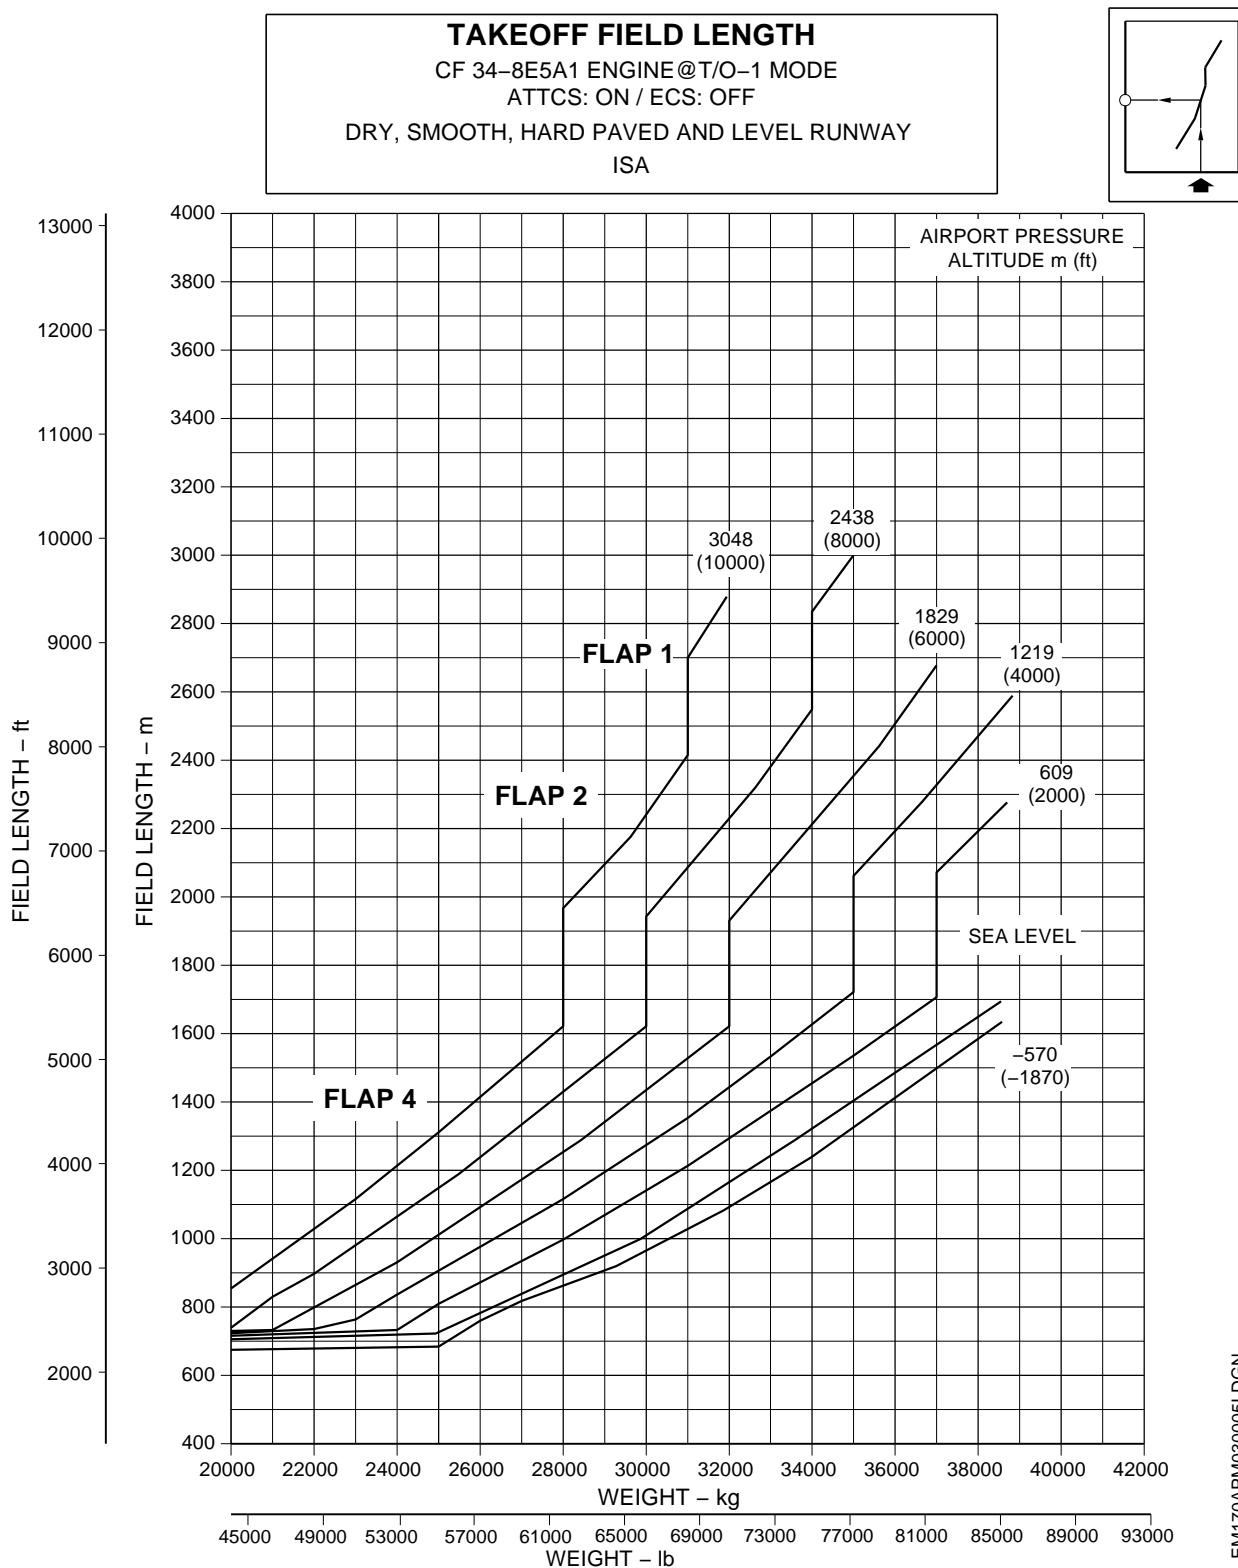


Takeoff Field Lengths - ISA Conditions  
Figure 3.9

EFFECTIVITY: ALL

Section 3  
Page 3-12  
Oct 07/14



# EMBRAER 170 AIRPORT PLANNING MANUAL

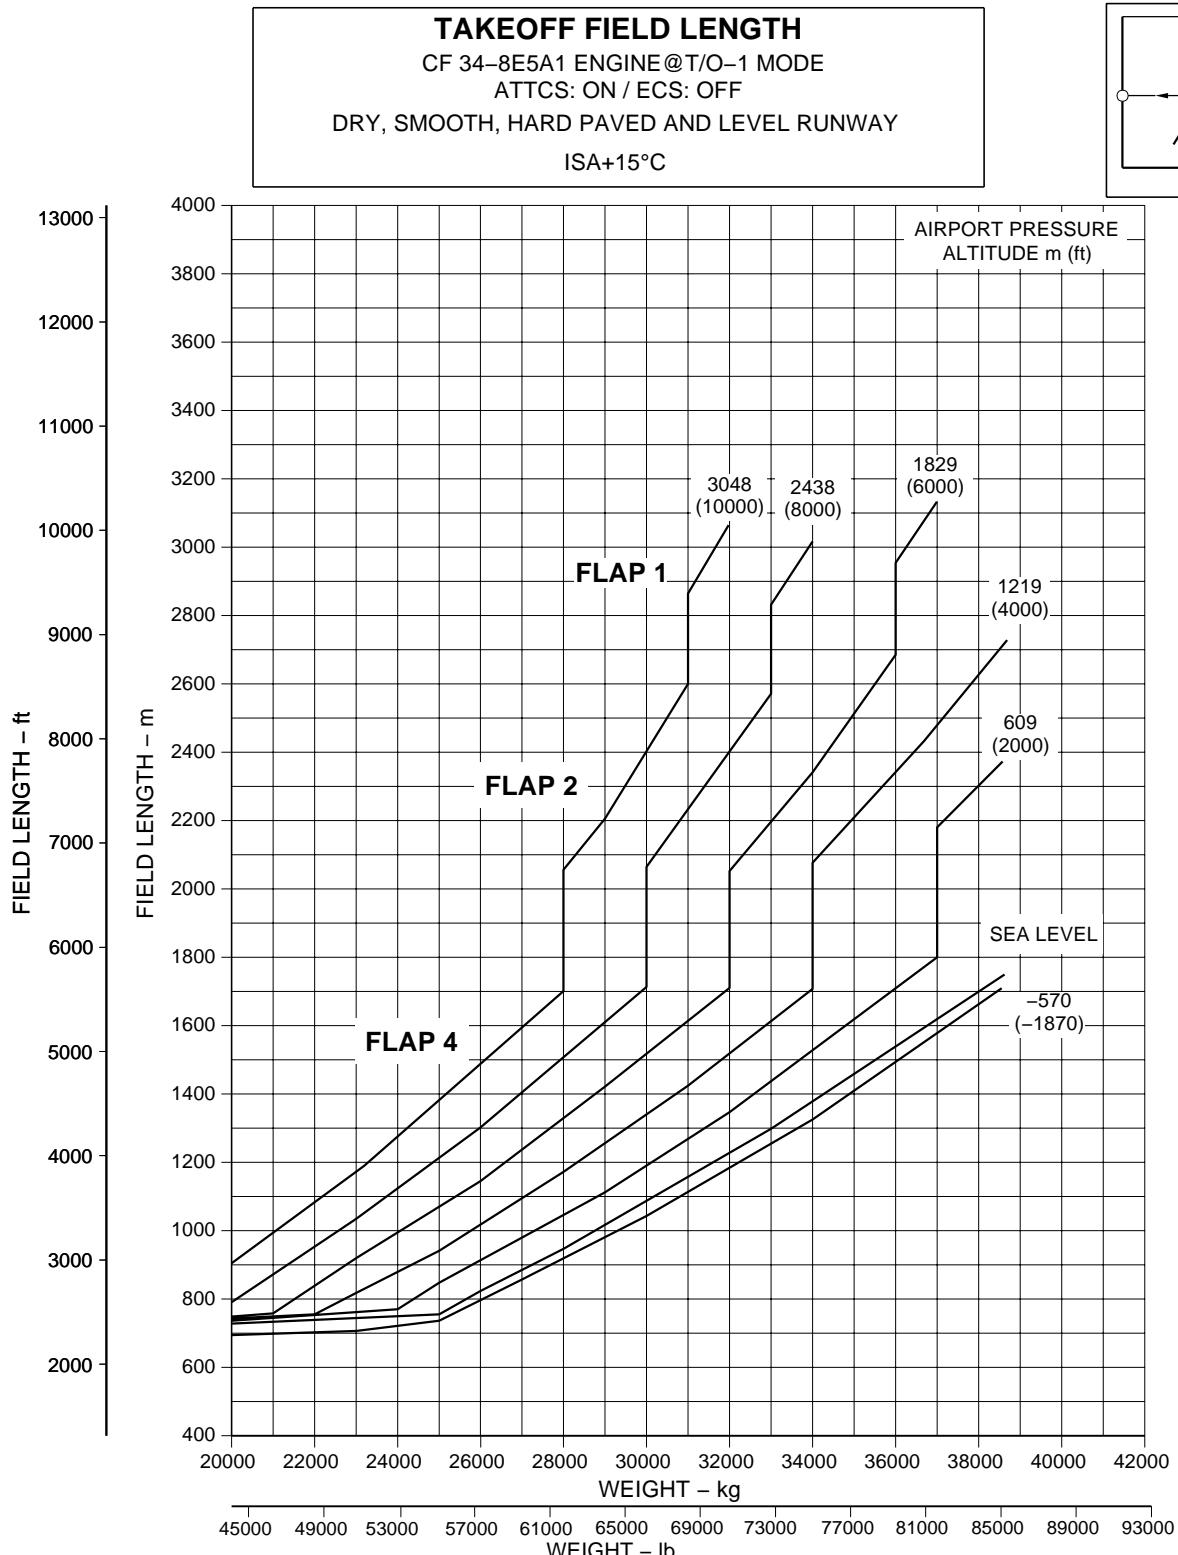

Takeoff Field Lengths - ISA + 15 °C Conditions  
Figure 3.10

EM170APM030006I.DGN

EFFECTIVITY: ALL


Section 3

Page 3-13

Oct 07/14



# **ER 170 AIRPORT PLANNING MANUAL**

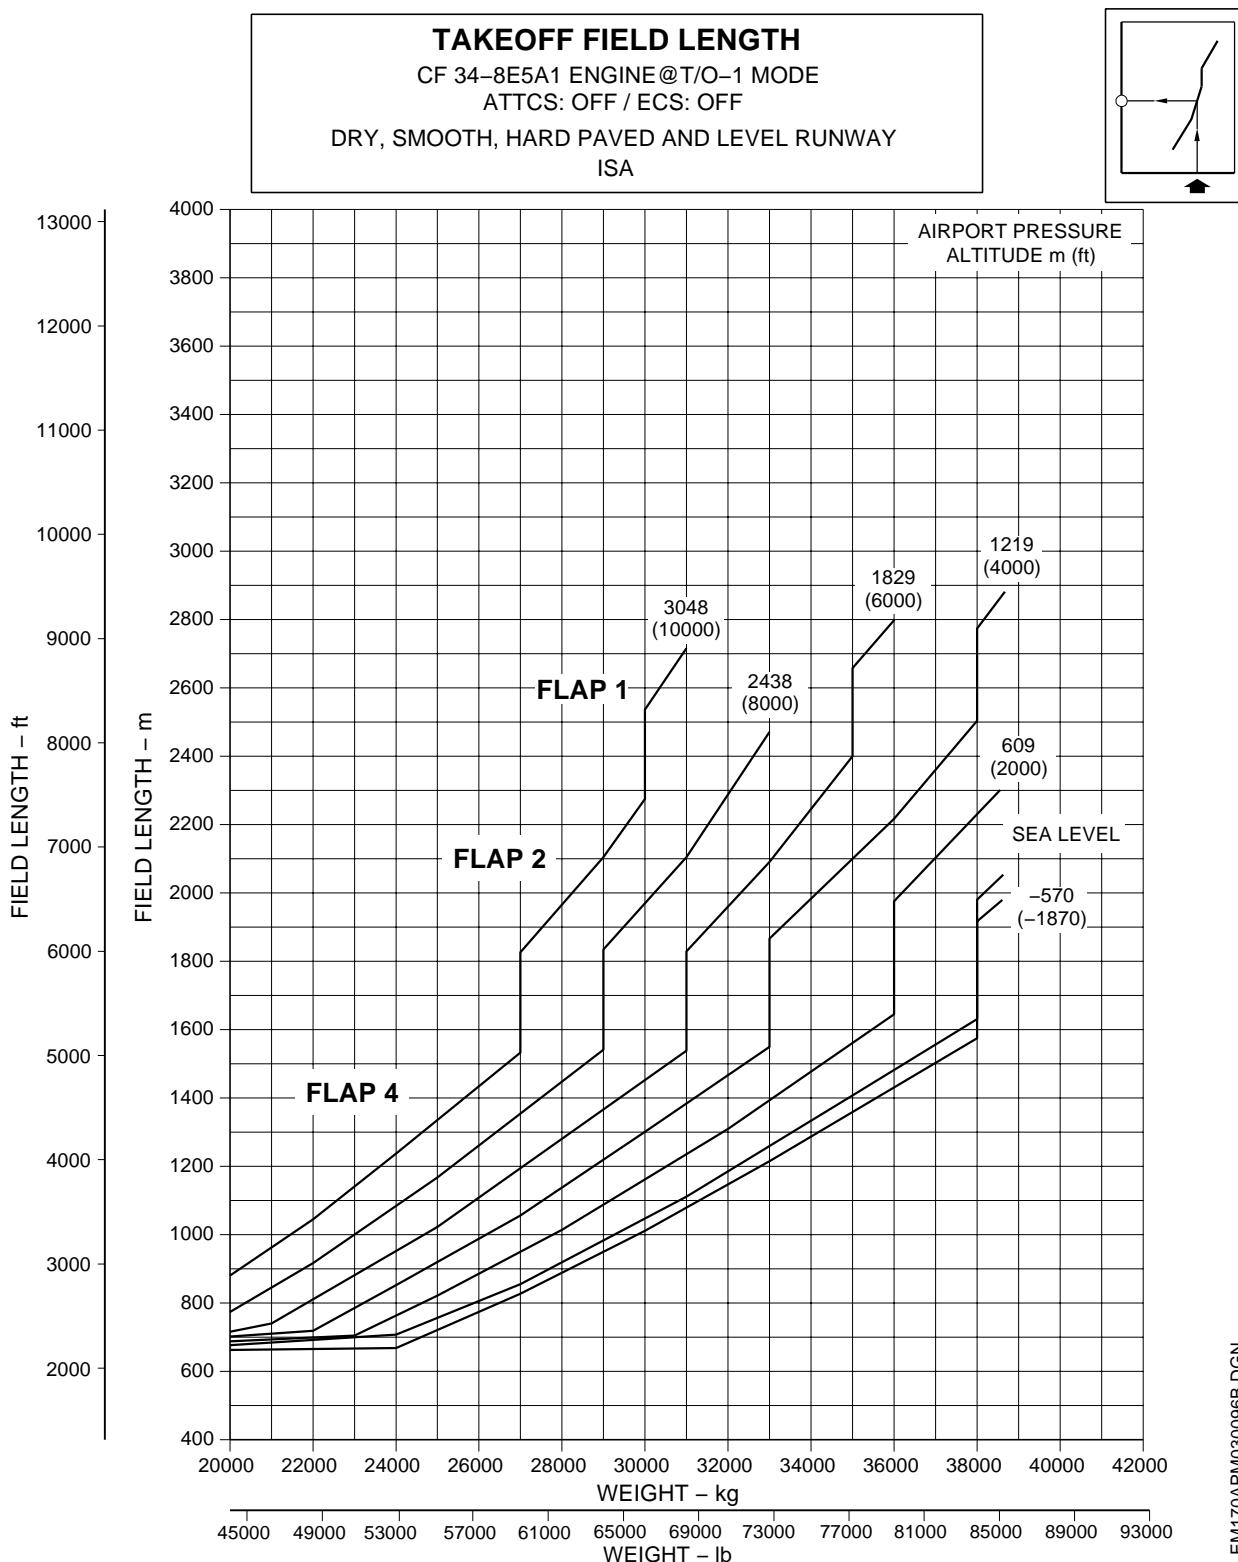

## Takeoff Field Lengths - ISA Conditions Figure 3.11


#### EFFECTIVITY: ALL

## Section 3

Page 3-14  
Oct 07/14



# EMBRAER 170 AIRPORT PLANNING MANUAL

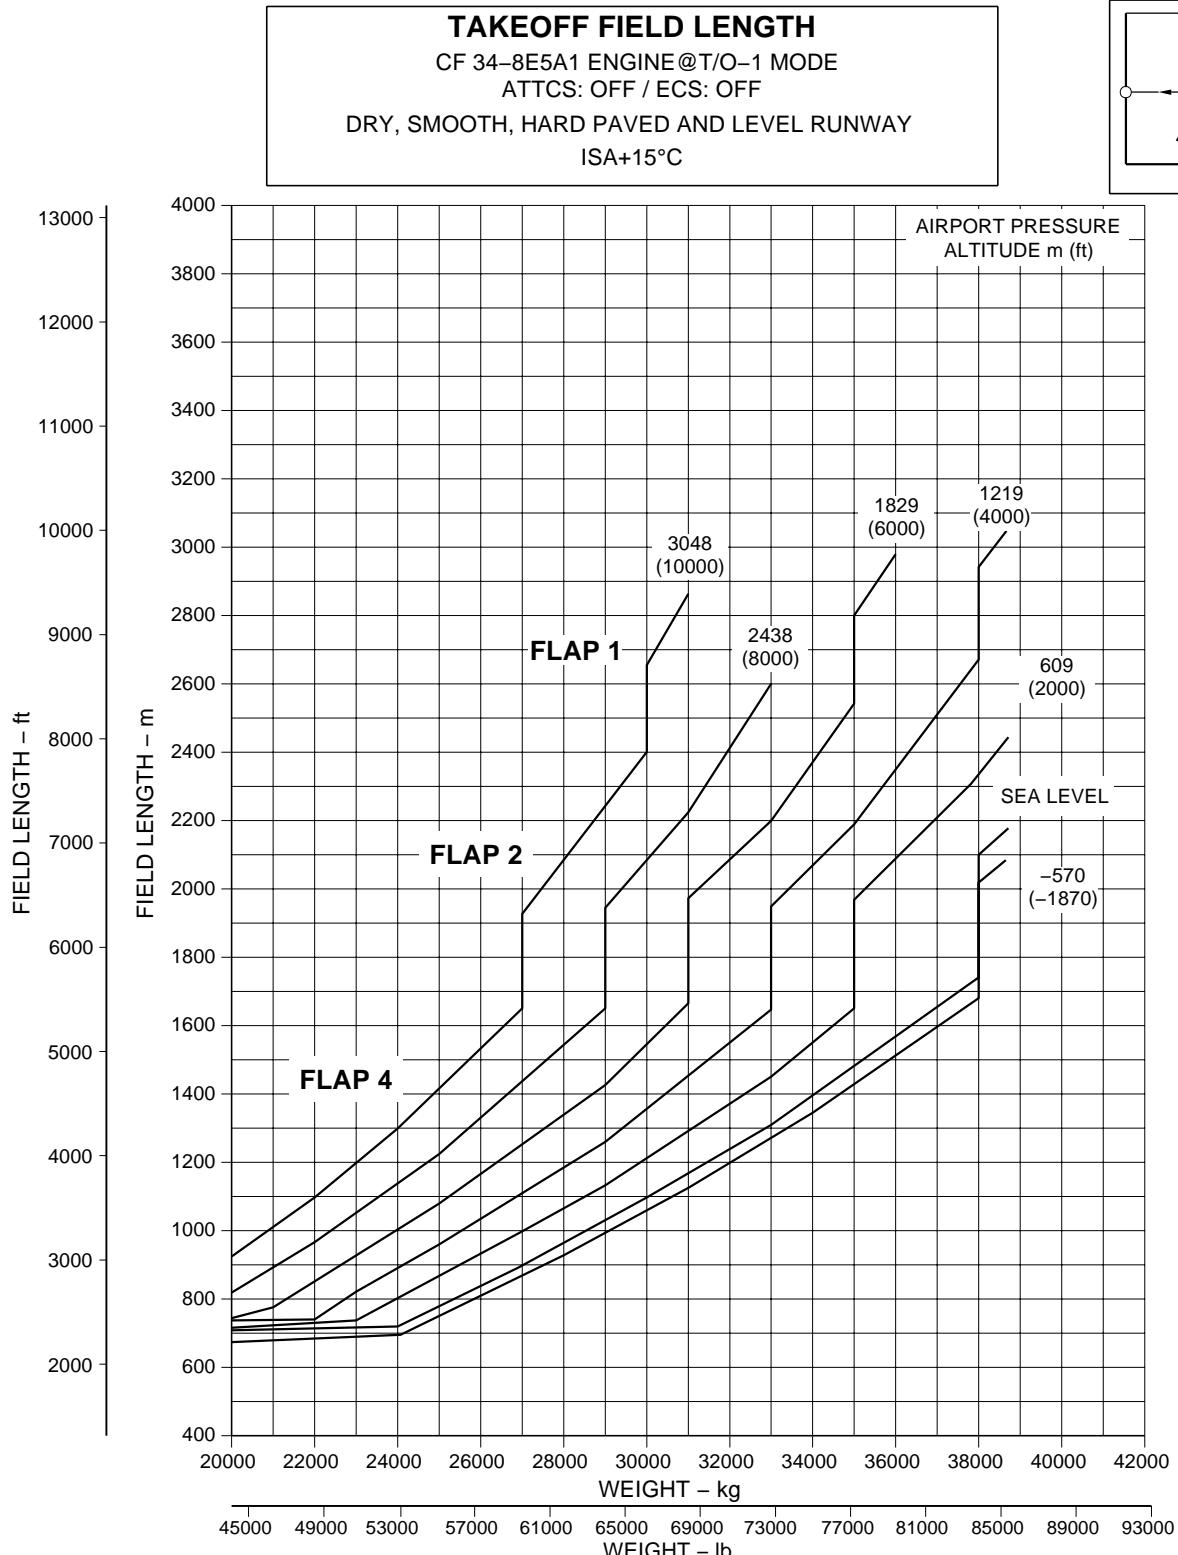

Takeoff Field Lengths - ISA + 15 °C Conditions  
Figure 3.12

EM170APM030097B.DGN



# **EMBRAER 170 AIRPORT PLANNING MANUAL**

## **3.4. LANDING FIELD LENGTHS**


The landing field length charts provide data about the maximum landing weights, for compliance with the operating regulations relating to landing field lengths.

Data are presented according to the following associated conditions:

- Landing gear: down;
- Flaps setting position: 5 and full;
- Pavement conditions: dry, hard paved and level runway surface with no obstacles;
- Zero wind and atmosphere according to ISA conditions;
- Pack OFF: No engine bleed extraction for air conditioning packs was considered in the takeoff and landing charts;
- For EASA Certification, Landing Field Lengths are factored as per EU OPS 1.515 (a) (1) - Landing;
- For FAA Certification, Landing Field Lengths are factored as per FAR Part 121, Paragraph 121.195 (b) - Airplanes.



# EMBRAER 170 AIRPORT PLANNING MANUAL

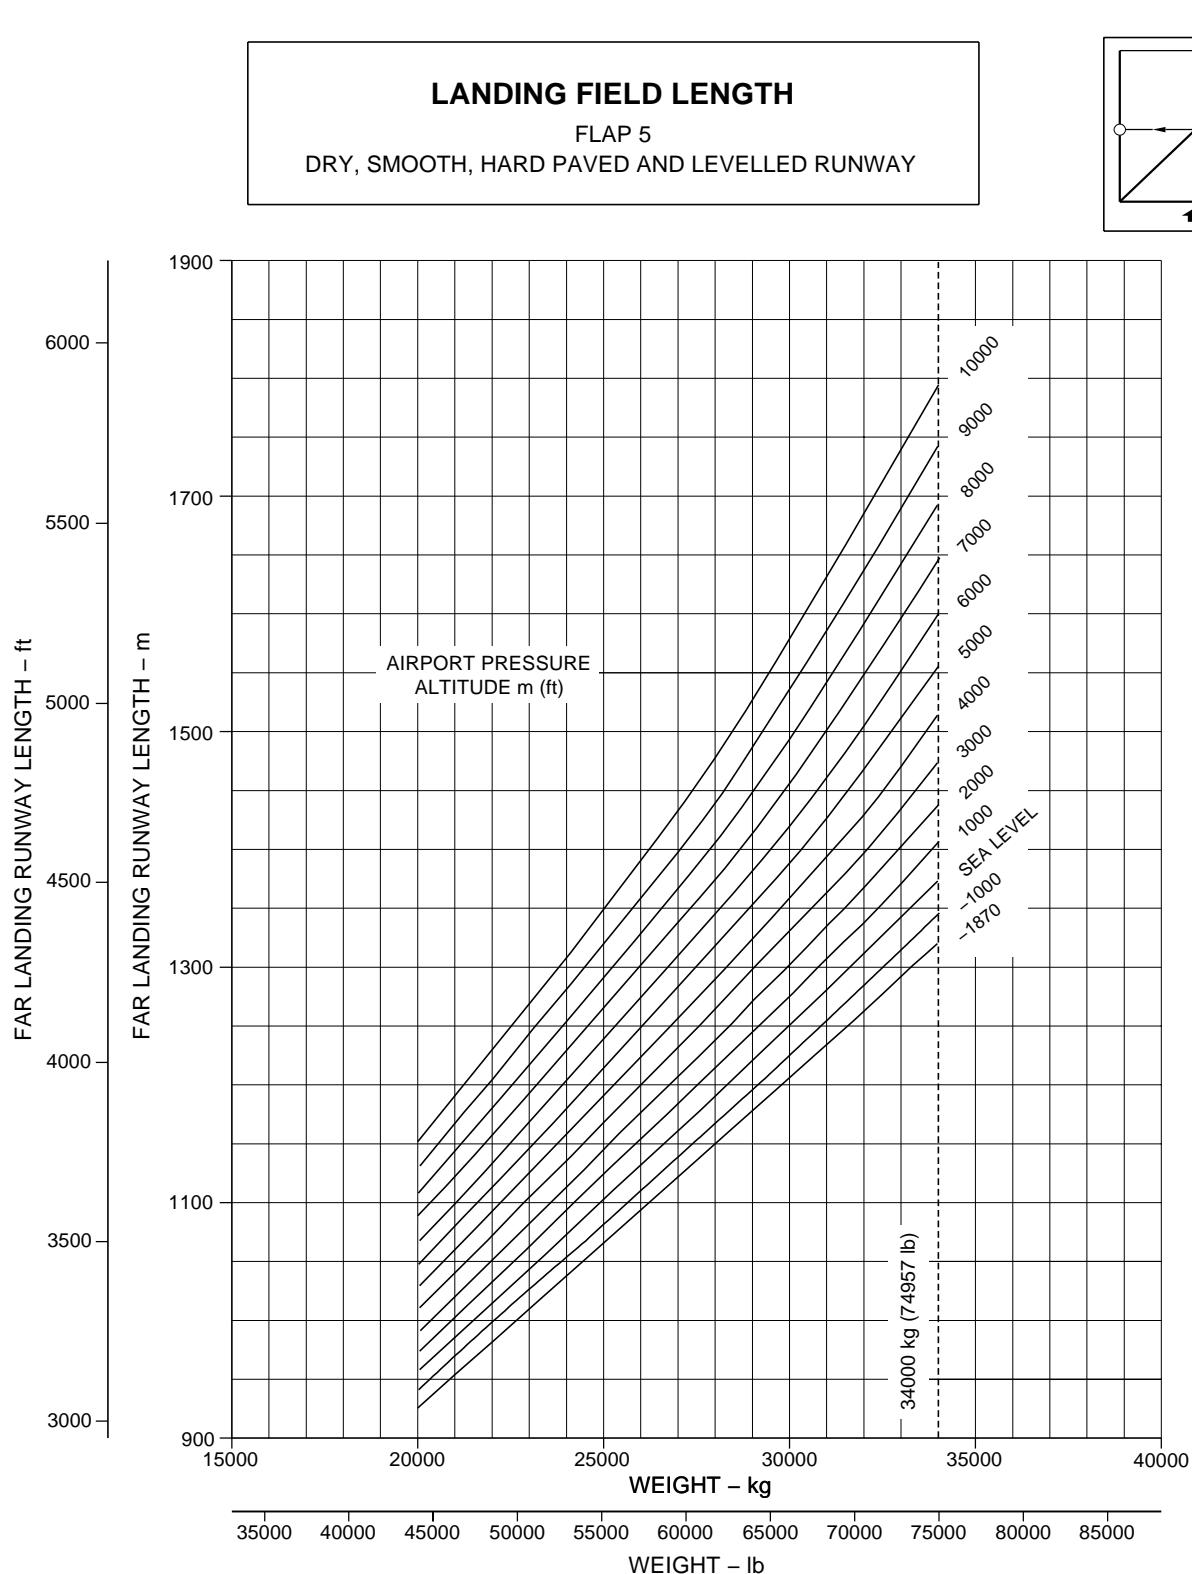


Landing Field Lengths - Flaps 5  
Figure 3.13

EFFECTIVITY: FAA-CERTIFIED ACFT

**Section 3**  
Page 3-17  
Oct 31/12



# EMBRAER 170 AIRPORT PLANNING MANUAL

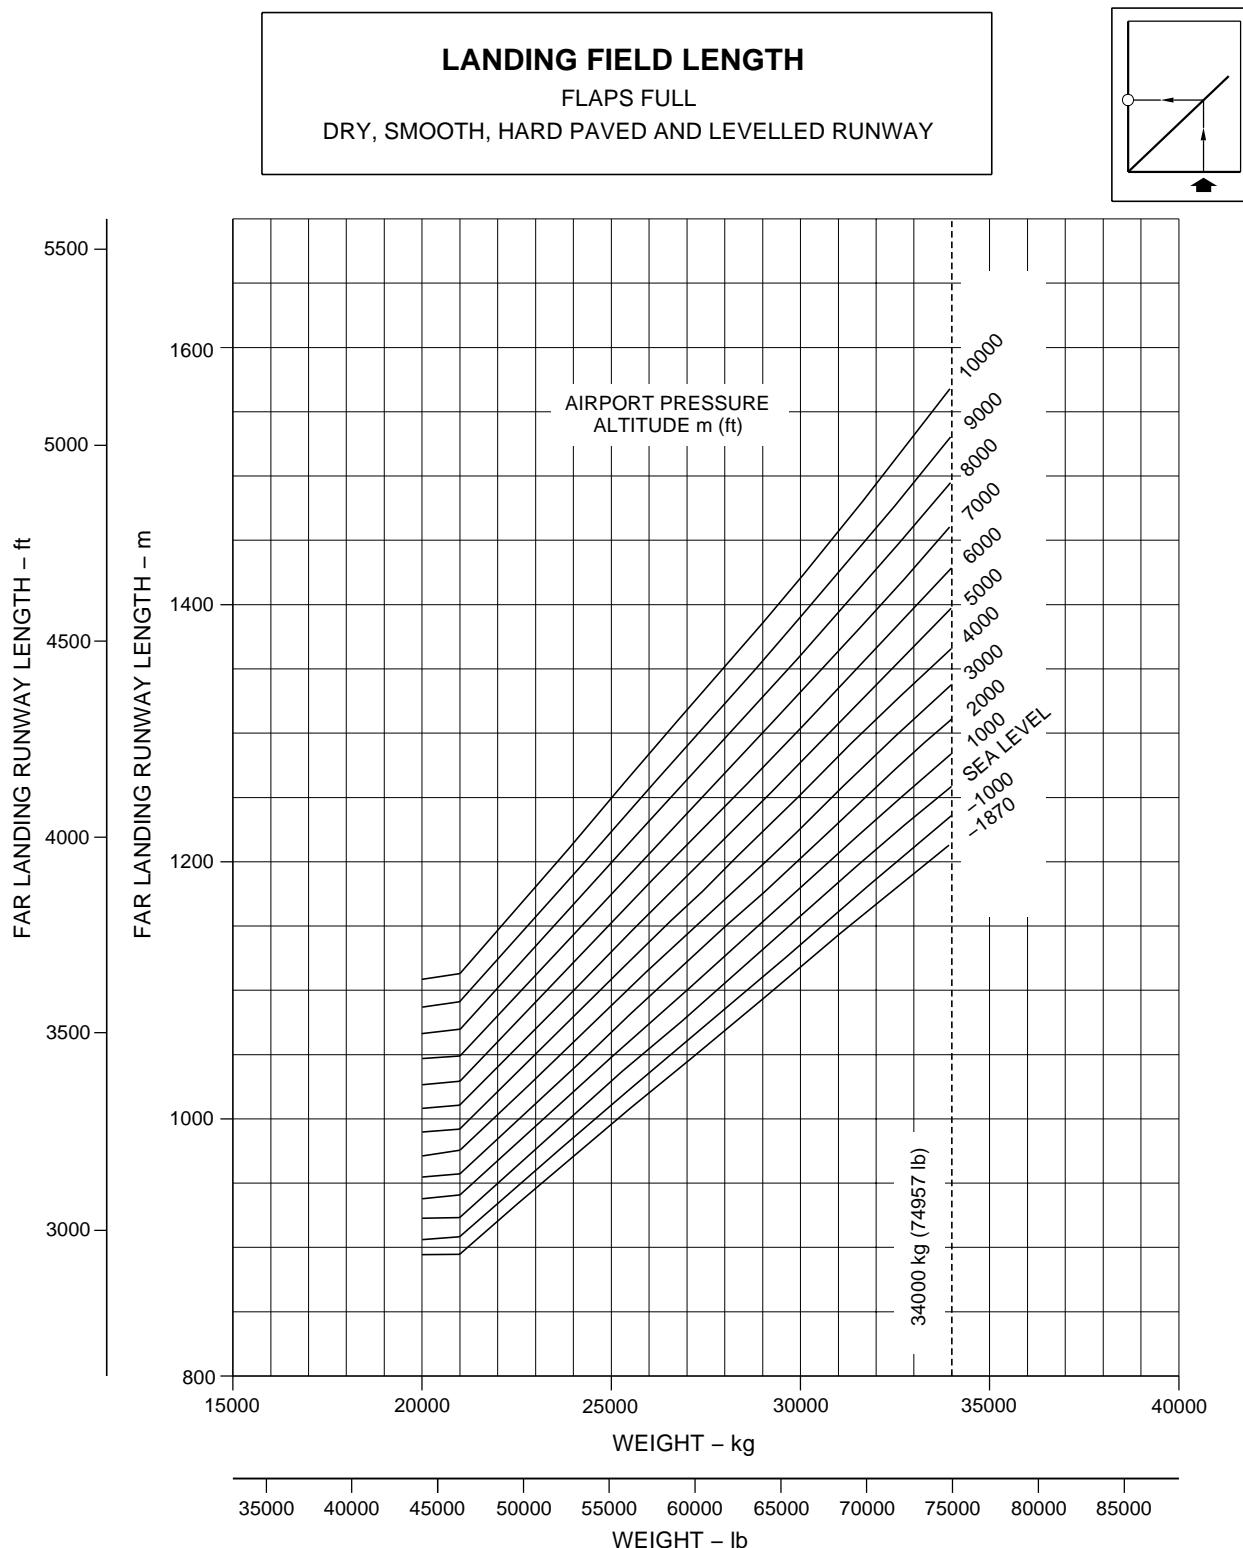


Landing Field Lengths - Flaps Full  
Figure 3.14

EM170APM030015G.DGN




# EMBRAER 170 AIRPORT PLANNING MANUAL

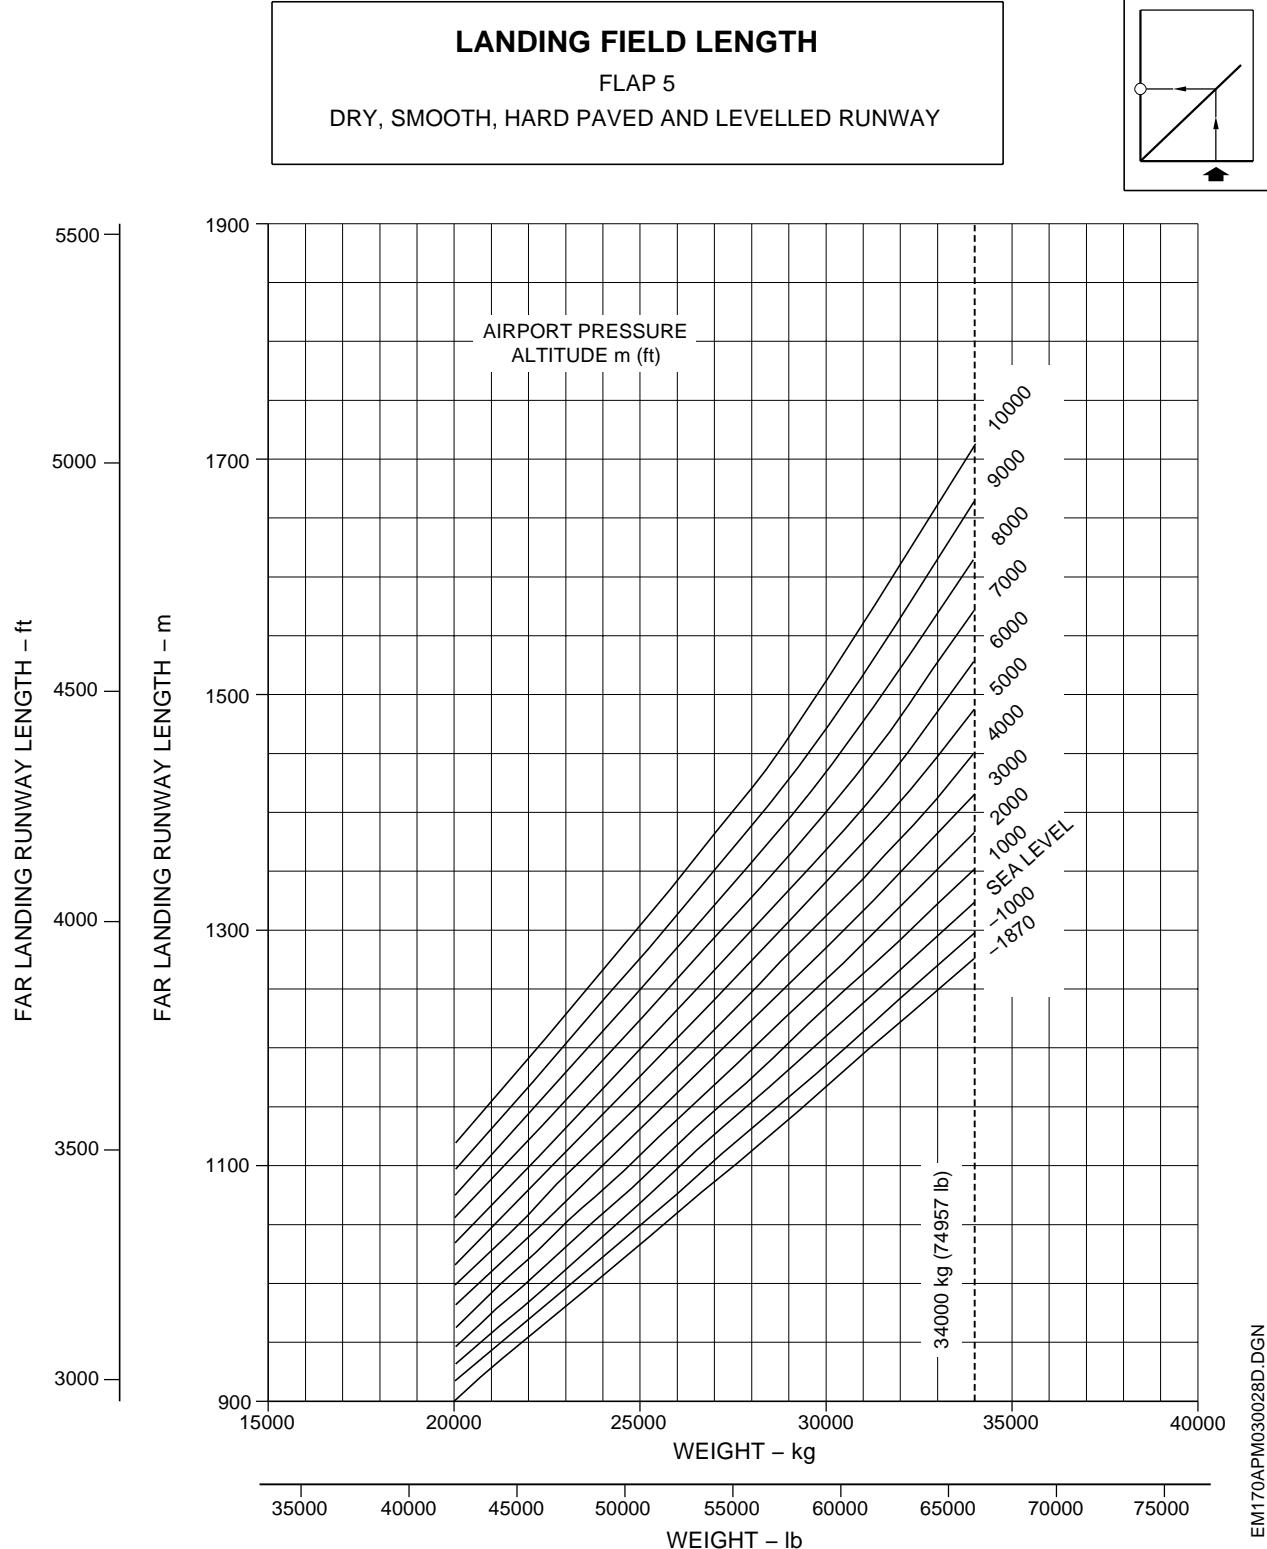

Landing Field Lengths - Flaps 5  
Figure 3.15



# EMBRAER 170 AIRPORT PLANNING MANUAL

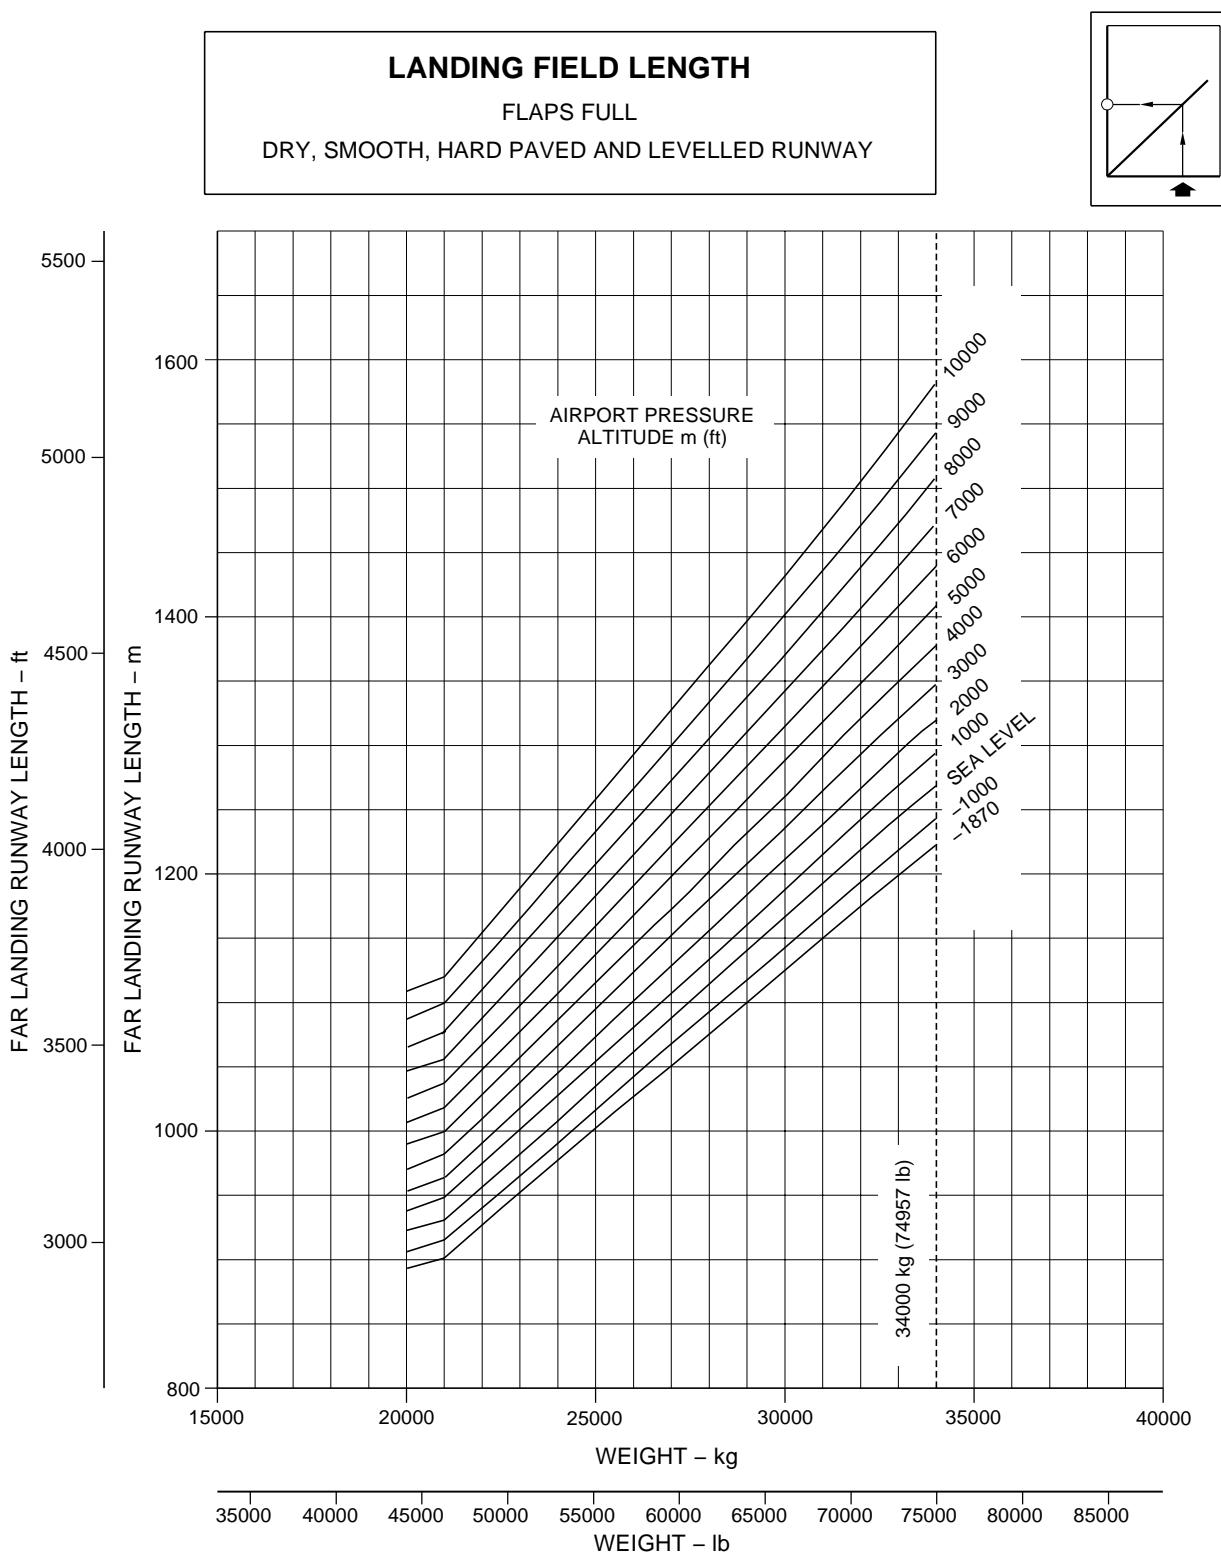

Landing Field Lengths - Flaps Full  
Figure 3.16



## **4. GROUND MANEUVERING**

### **4.1. GENERAL INFORMATION**

- This section provides the aircraft turning capability and maneuvering characteristics. To facilitate the presentation, the data have been determined from theoretical limits imposed by the geometry of the aircraft.  
As such, they reflect the turning capability of the aircraft in favorable operating circumstances. These data should be used only as a guideline for the method of determining such parameters and for the maneuvering characteristics of the aircraft.
- In the ground operating mode, varying airline practices may demand that more conservative turning procedures be adopted, to avoid excessive tire wear and reduce possible maintenance problems.
- Variations from standard aircraft operating patterns may be necessary to satisfy physical constraints within the maneuvering area, such as adverse grades, limited area, or high risk of jet blast damage. For these reasons, the ground maneuvering requirements should be coordinated with the airline before the layout is planned.

This section is presented as follows:

- The turning radii for nose landing gear steering angles.
- The pilot's visibility from the cockpit and the limits of ambinocular vision through the windows. Ambinocular vision is defined as the total field of vision seen by both eyes at the same time.
- The performance of the aircraft on runway-to-taxiway, taxiway-to-taxiway and runway holding bay dimensions.


### **4.2. TURNING RADII**

This subsection presents the following information:

- The turning radii for various nose landing gear steering angles. The minimum turning radius is determined, considering the maximum nose landing gear steering angle as 76 degrees left and right.
- Data on the minimum width of the pavement for a 180° turn.



# EMBRAER 170 AIRPORT PLANNING MANUAL

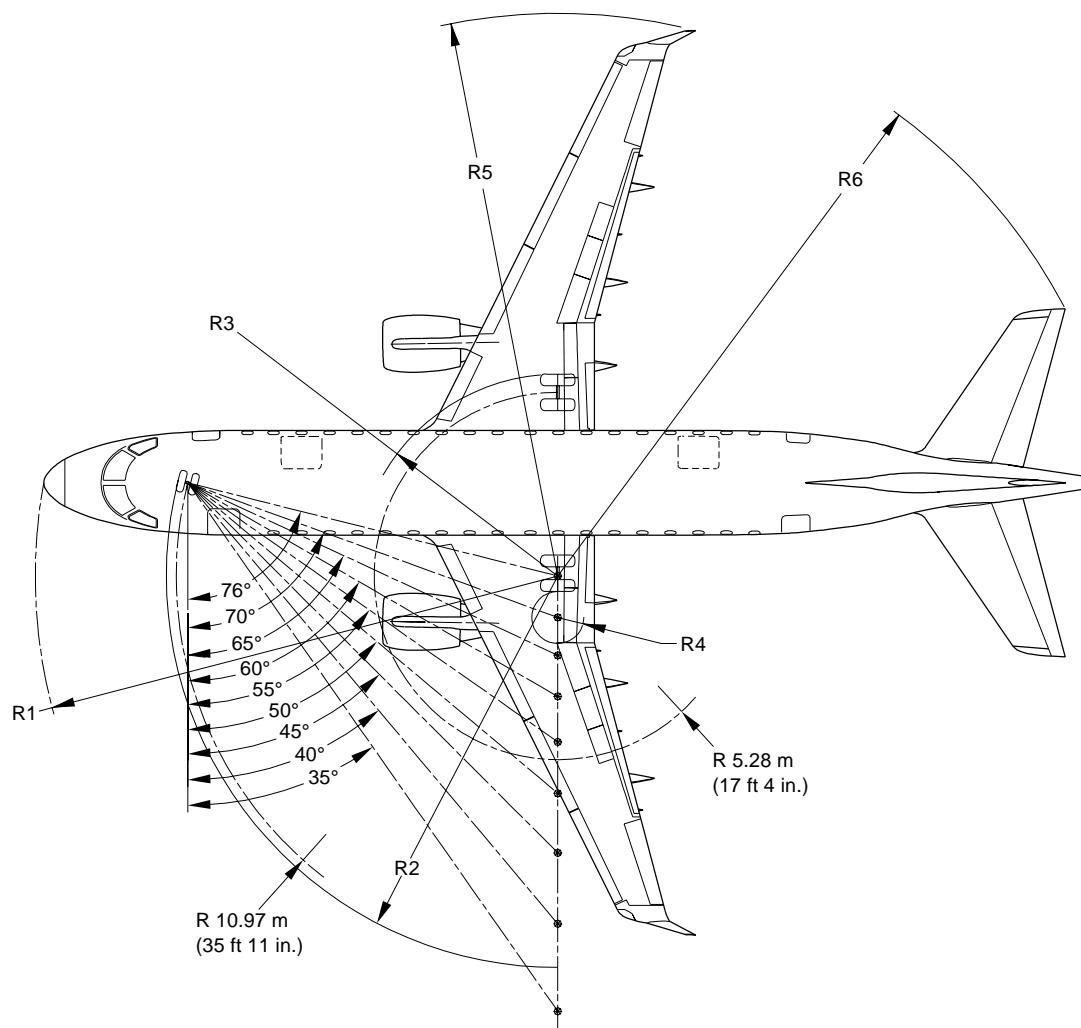

**NOTE:**

DATA PRESENTED IS BASED ON THEORETICAL CALCULATIONS.  
ACTUAL OPERATING DATA MAY BE GREATER THAN SHOWN SINCE  
TIRE SLIPPAGE IS NOT CONSIDERED IN THESE CALCULATIONS.

STEERING STEEL	NOSE		NOSE LANDING GEAR		OUTBOARD GEAR		INBOARD GEAR		RIGHT WINGLET		RIGHT TAILTIP	
	R1	R2	R3	R4	R5	R6						
35°	21.19 m 69 ft 6 in.	18.76 m 61 ft 6 in.	18.31 m 60 ft 1 in.	12.06 m 39 ft 7 in.	28.45 m 93 ft 5 in.	24.91 m 81 ft 9 in.						
40°	19.47 m 63 ft 10 in.	16.78 m 55 ft 0 in.	15.80 m 51 ft 10 in.	9.55 m 31 ft 4 in.	25.98 m 85 ft 3 in.	22.92 m 75 ft 2 in.						
45°	18.21 m 59 ft 9 in.	15.28 m 50 ft 2 in.	13.76 m 45 ft 2 in.	7.51 m 24 ft 8 in.	23.96 m 78 ft 7 in.	21.38 m 70 ft 2 in.						
50°	17.26 m 56 ft 8 in.	14.14 m 46 ft 5 in.	12.05 m 39 ft 6 in.	5.80 m 19 ft 0 in.	22.28 m 73 ft 1 in.	20.17 m 66 ft 2 in.						
55°	16.55 m 54 ft 3 in.	13.25 m 43 ft 6 in.	10.57 m 34 ft 8 in.	4.32 m 14 ft 2 in.	20.83 m 68 ft 4 in.	19.18 m 62 ft 11 in.						
60°	16.00 m 52 ft 6 in.	12.55 m 41 ft 2 in.	9.26 m 30 ft 5 in.	3.02 m 9 ft 11 in.	19.54 m 64 ft 1 in.	18.35 m 60 ft 3 in.						
65°	15.58 m 51 ft 2 in.	12.01 m 39 ft 5 in.	8.08 m 26 ft 6 in.	1.84 m 6 ft 0 in.	18.39 m 60 ft 4 in.	17.66 m 57 ft 11 in.						
70°	15.28 m 50 ft 1 in.	11.60 m 38 ft 1 in.	6.99 m 22 ft 11 in.	0.75 m 2 ft 5 in.	17.33 m 56 ft 10 in.	17.07 m 56 ft 0 in.						
76°	15.02 m 49 ft 3 in.	11.25 m 36 ft 11 in.	5.80 m 19 ft 0 in.	0.445 m 1 ft 5.5 in.	16.17 m 53 ft 1 in.	16.48 m 54 ft 1 in.						

EM170APM040007C.DGN

Turning Radii - No Slip Angle  
Figure 4.1


EFFECTIVITY: ALL

Section 4  
Page 4-2  
Oct 07/08



# EMBRAER 170 AIRPORT PLANNING MANUAL

## 4.3. MINIMUM TURNING RADII

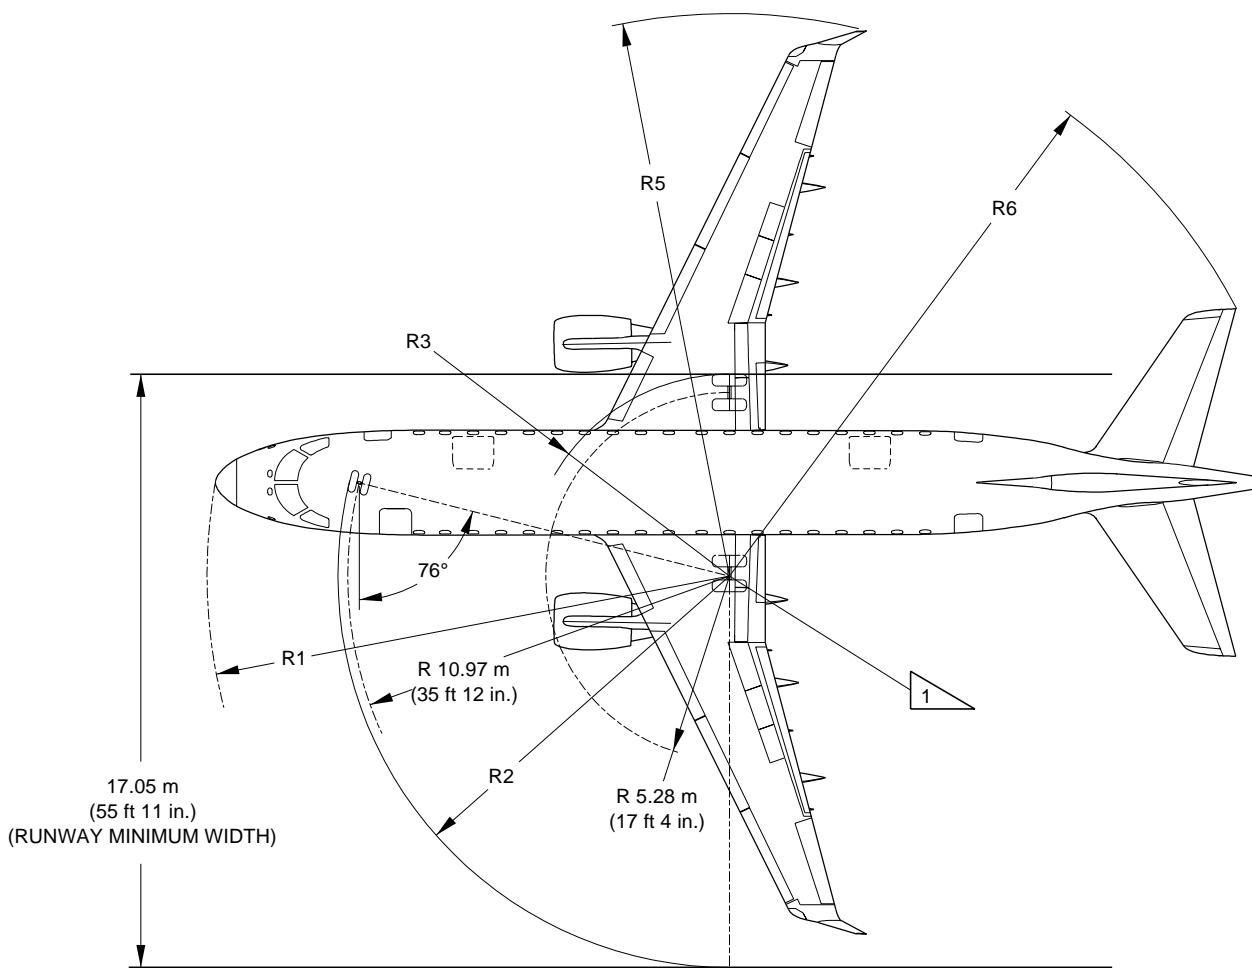

### NOTE:

ACTUAL OPERATING DATA MAY BE GREATER THAN VALUES SHOWN  
SINCE TIRE SLIPPAGE IS NOT CONSIDERED IN THESE CALCULATIONS.

STEERING ANGLE	NOSE		NOSE LANDING GEAR		OUTBOARD GEAR		RIGHT WINGLET		RIGHT TAILTIP	
	R1	R2	R3	R5	R6					
76°	15.02 m (49 ft 3 in.)	11.25 m (36 ft 11 in.)	5.80 m (19 ft 0 in.)	16.17 m (53 ft 1 in.)	16.48 m (54 ft 1 in.)					

1

THEORETICAL CENTER OF TURN FOR MINIMUM RADIUS.  
SHOWS CONTINUOUS TURNING WITH ENGINE THRUST AS REQUIRED.  
NO DIFFERENTIAL BRAKING.

Minimum Turning Radius  
Figure 4.2

EFFECTIVITY: ALL

Section 4  
Page 4-3  
Oct 07/08




# **EMBRAER 170 AIRPORT PLANNING MANUAL**


## 4.4.

### VISIBILITY FROM COCKPIT


VISUAL ANGLE IN PLANE  
PARALLEL TO LONGITUDINAL  
AXIS THROUGH PILOT'S EYE  
POSITION

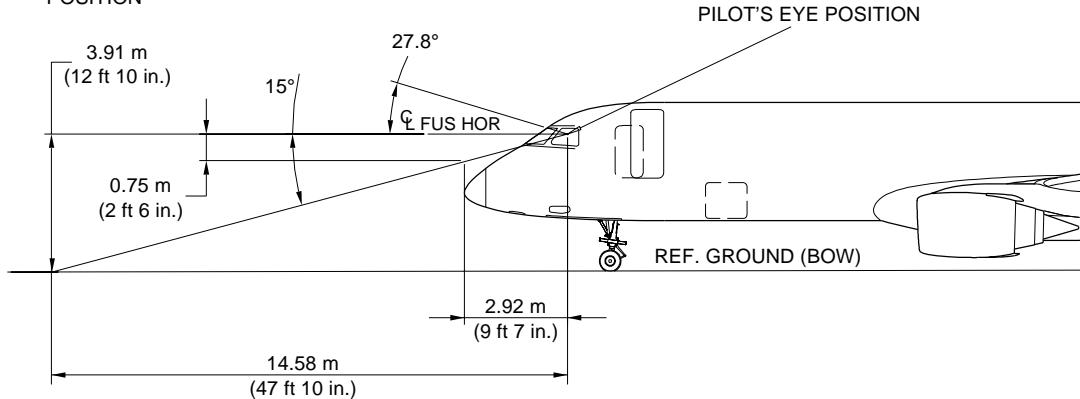

MAXIMUM AFT VISION  
WITH HEAD ROTATED  
ABOUT SPINAL COLUMN

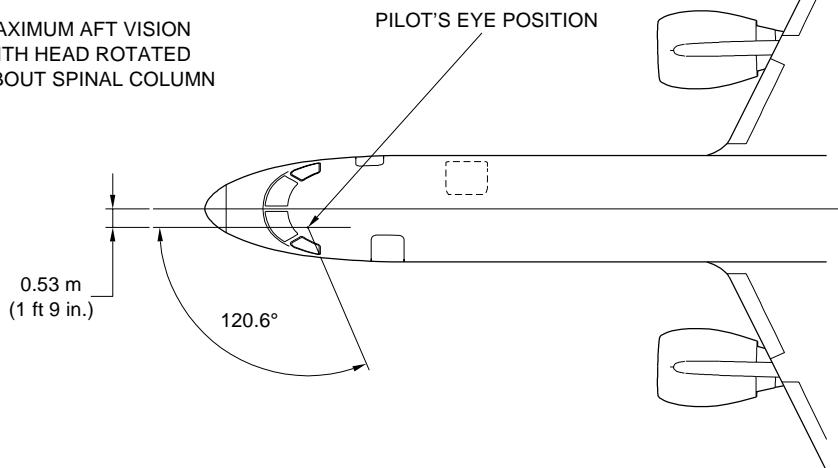

VISUAL ANGLE IN PLANE  
PERPENDICULAR TO LONGITUDINAL  
AXIS THROUGH PILOT'S EYE POSITION

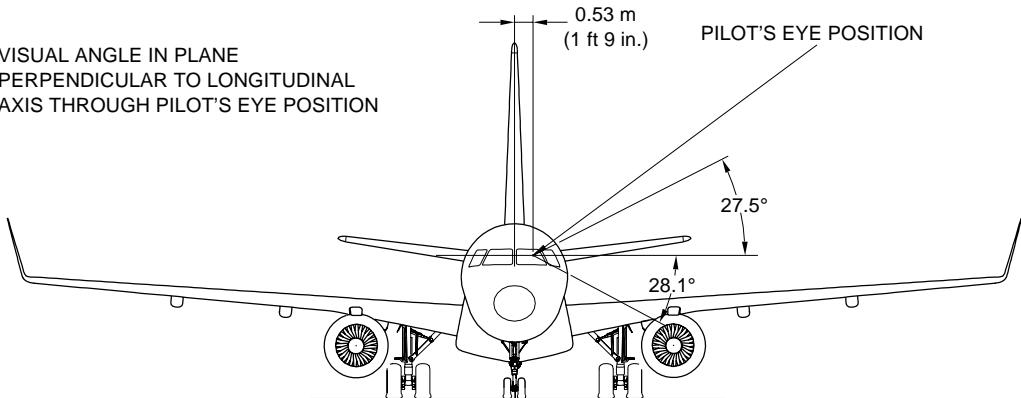

Visibility from Cockpit in Static Position  
Figure 4.3

EM170APM040006C.DGN

EFFECTIVITY: ALL

**Section 4**  
Page 4-4  
Jul 01/05



# EMBRAER 170 AIRPORT PLANNING MANUAL

## 4.5. RUNWAY AND TAXIWAY DIMENSIONS

To determine the minimum dimensions for runway and taxiway where the aircraft can be operated, the reference code of the aircraft must be determined.

The reference code of a specific aircraft is obtained in accordance with the Aerodrome Design and Operations - Volume 1, by the ICAO.

The code is composed of two elements which are related to the aircraft performance characteristics and dimensions:

- Element 1 is a number based on the aircraft reference field length.
- Element 2 is a letter based on the aircraft wingspan and outer main landing gear wheel span.

The table below shows the reference codes:

Table 4.1 - Reference Codes

CODE ELEMENT 1		CODE ELEMENT 2		
CODE NUMBER	AIRCRAFT REFERENCE FIELD LENGTH	CODE LETTER	WING SPAN	OUTER MAIN LANDING GEAR WHEEL SPAN
1	Less than 800 m (2624 ft 8 in)	A	Up to 15 m (49 ft 3 in)	Up to 4.5 m (14 ft 9 in)
2	800 m (2624 ft 8 in) up to 1200 m (3937 ft)	B	15 m (49 ft 3 in) to 24 m (78 ft 9 in)	4.5 m (14 ft 9 in) to 6 m (19 ft 8 in)
3	1200 m (3937 ft) up to 1800 m (5905 ft 6 in)	C	24 m (78 ft 9 in) to 36 m (118 ft 1 in)	6 m (19 ft 8 in) to 9 m (29 ft 6 in)
4	1800 m (5905 ft 6 in) and over	D	36 m (118 ft 1 in) to 52 m (170 ft 7 in)	9 m (29 ft 6 in) to 14 m (45 ft 11 in)
—	—	E	52 m (170 ft 7 in) to 65 m (213 ft 3 in)	9 m (29 ft 6 in) to 14 m (45 ft 11 in)

In accordance with the table, the reference code for the EMBRAER 170STD and 170LR is 3C.

### NOTE:


- Classification considering CF34-8E5A1 engines.
- This classification may change depending on aircraft engine model and takeoff weight.

With the reference code it is possible to obtain the limits of the runway and taxiway where the aircraft can be operated. For reference code 3C the limits are:

- The width of a runway should not be less than 30 m (98 ft 5 in).
- The width of a taxiway should not be less than 15 m (49 ft 2 in).
- The design of the curve in a taxiway should be such that, when the cockpit remains over the taxiway center line marking, the clearance distance between the outer main landing gear wheels of the aircraft and the edge of the taxiway should not be less than 3 m (9 ft 10 in).
- The clearance between a parked aircraft and one moving along the taxiway in a holding bay should not be less than 15 m (49 ft 3 in).



# EMBRAER 170 AIRPORT PLANNING MANUAL

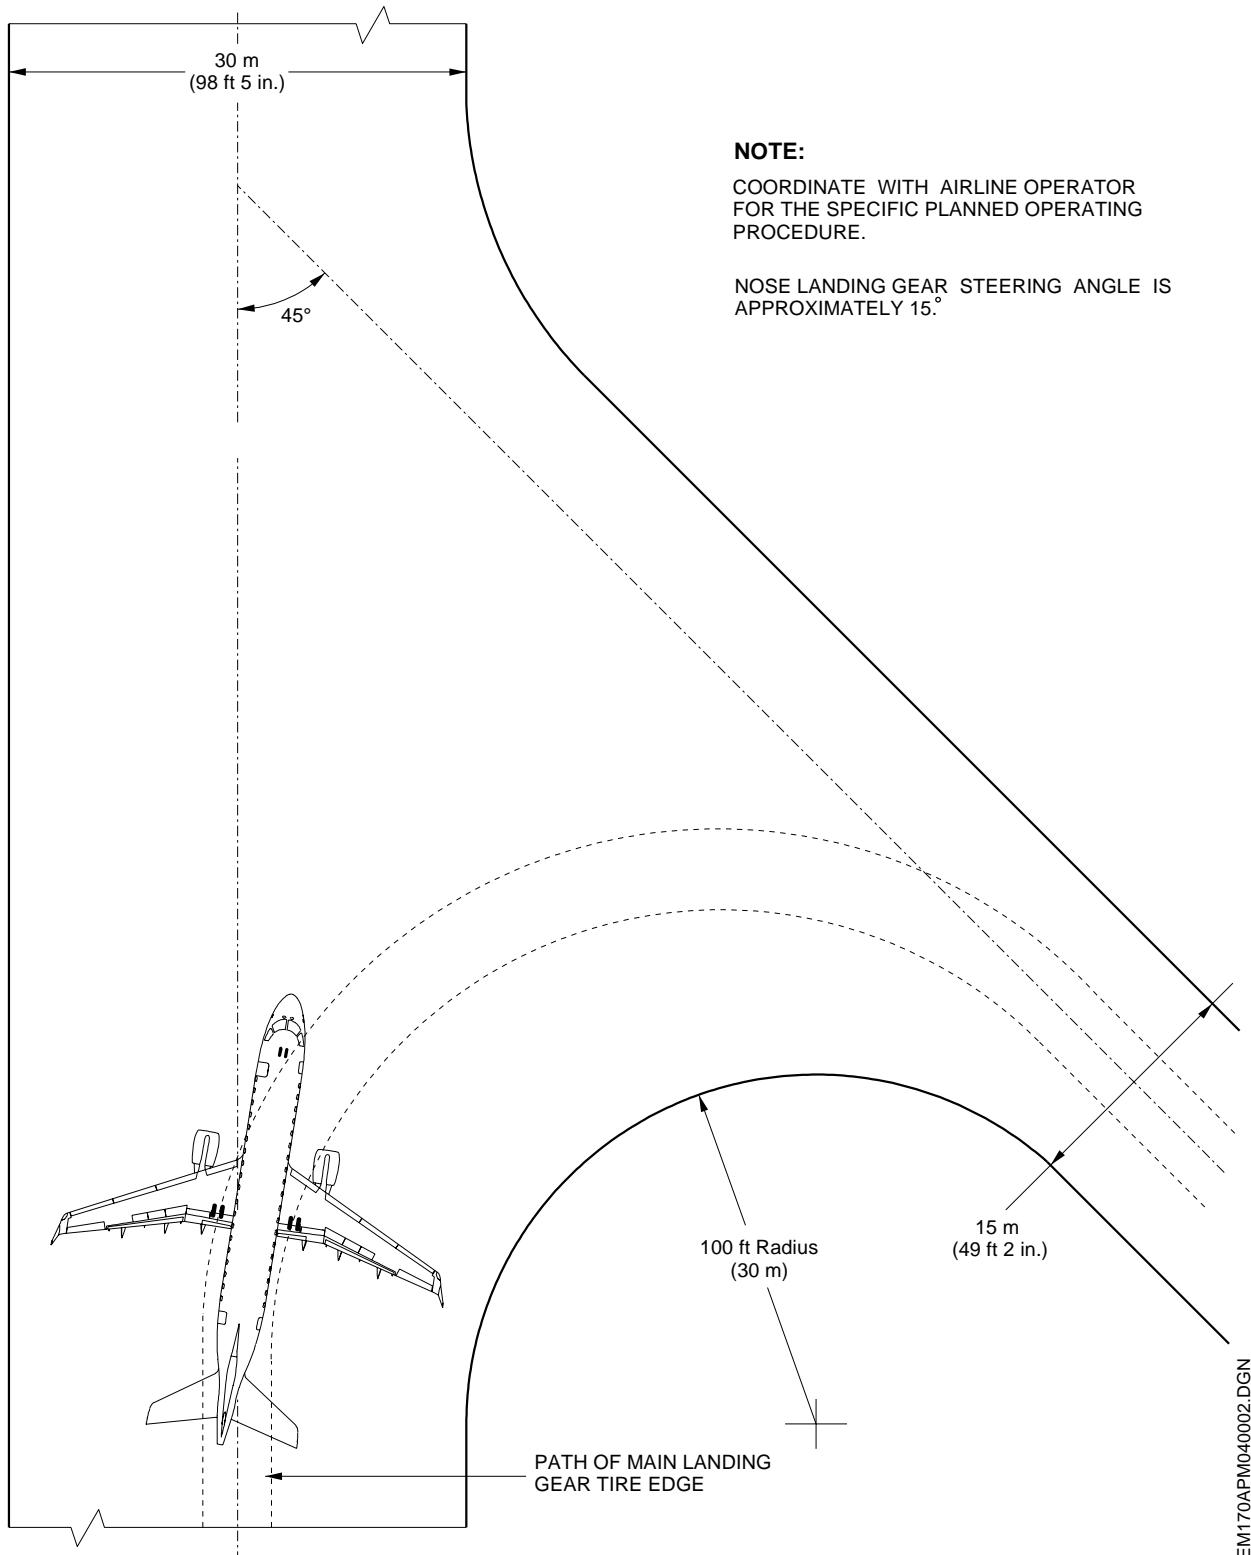


More than 90° Turn - Runway to Taxiway  
Figure 4.4

EFFECTIVITY: ALL

Section 4  
Page 4-6  
Dec 08/03



# EMBRAER 170 AIRPORT PLANNING MANUAL

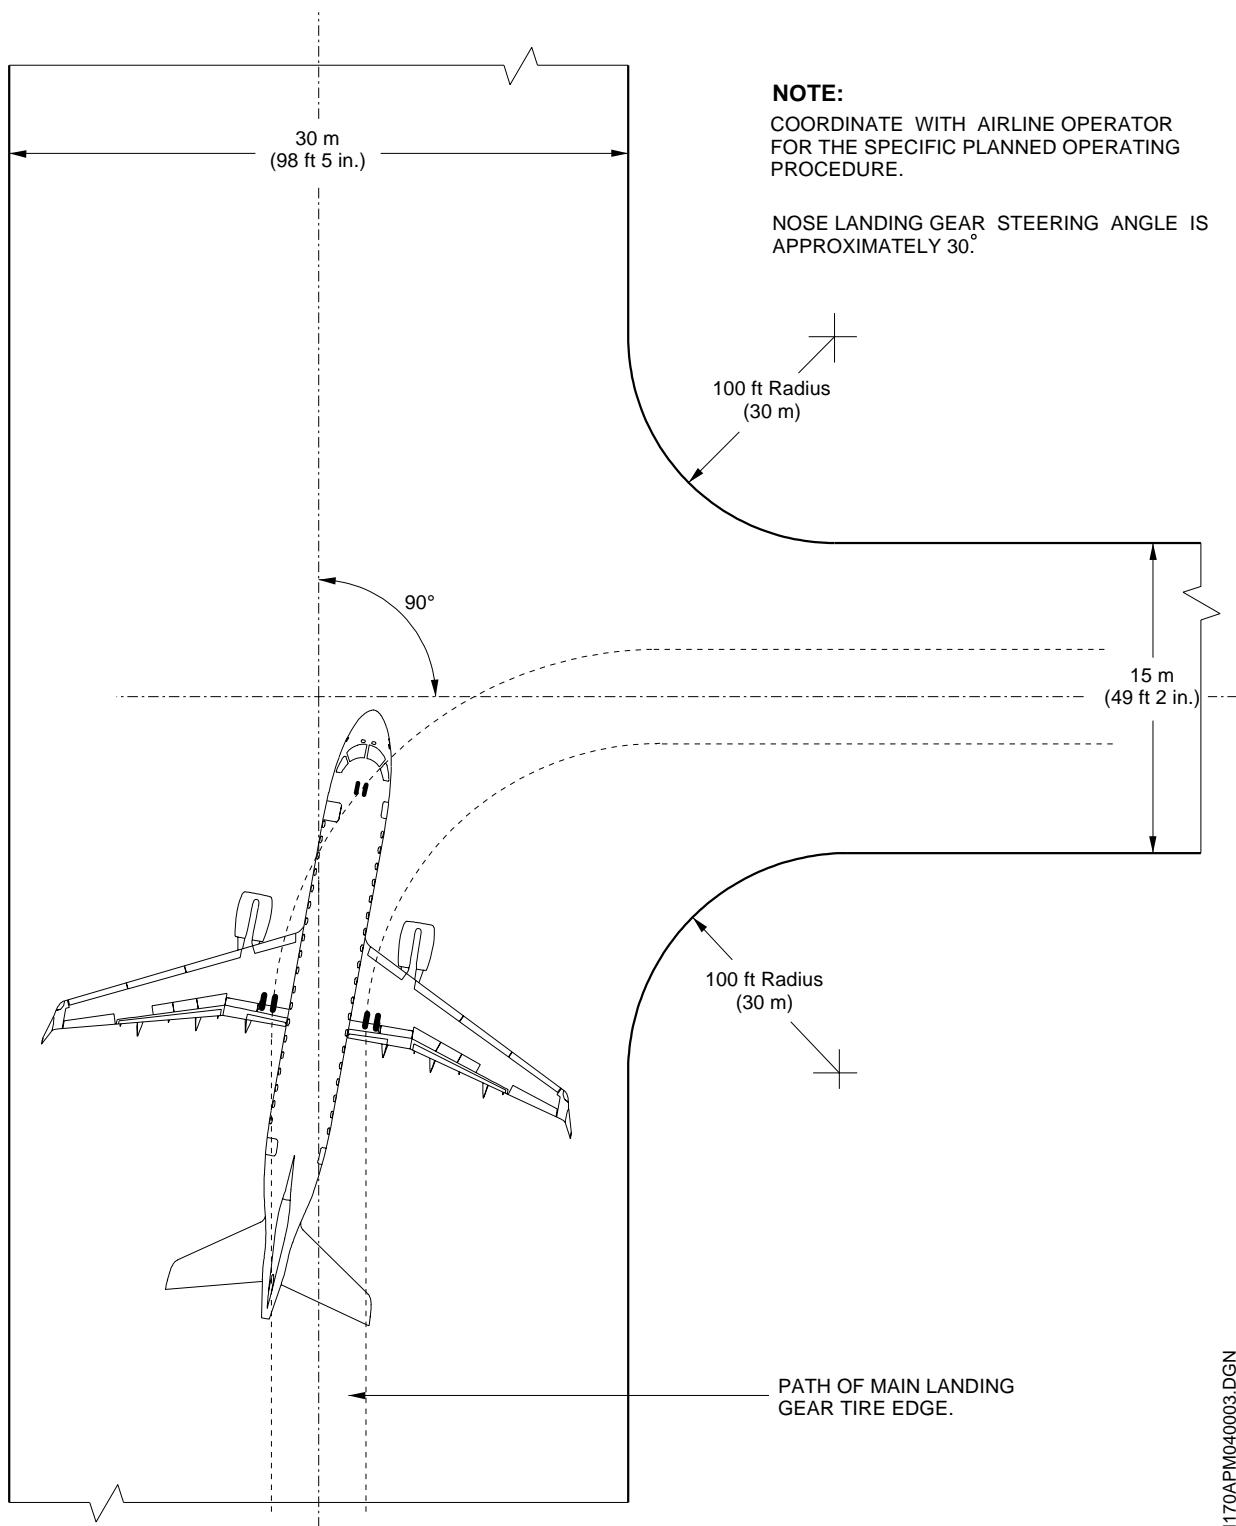

90° Turn - Runway to Taxiway  
Figure 4.5


EM170APM040003.DGN

EFFECTIVITY: ALL

**Section 4**  
Page 4-7  
Dec 08/03



# EMBRAER 170 AIRPORT PLANNING MANUAL

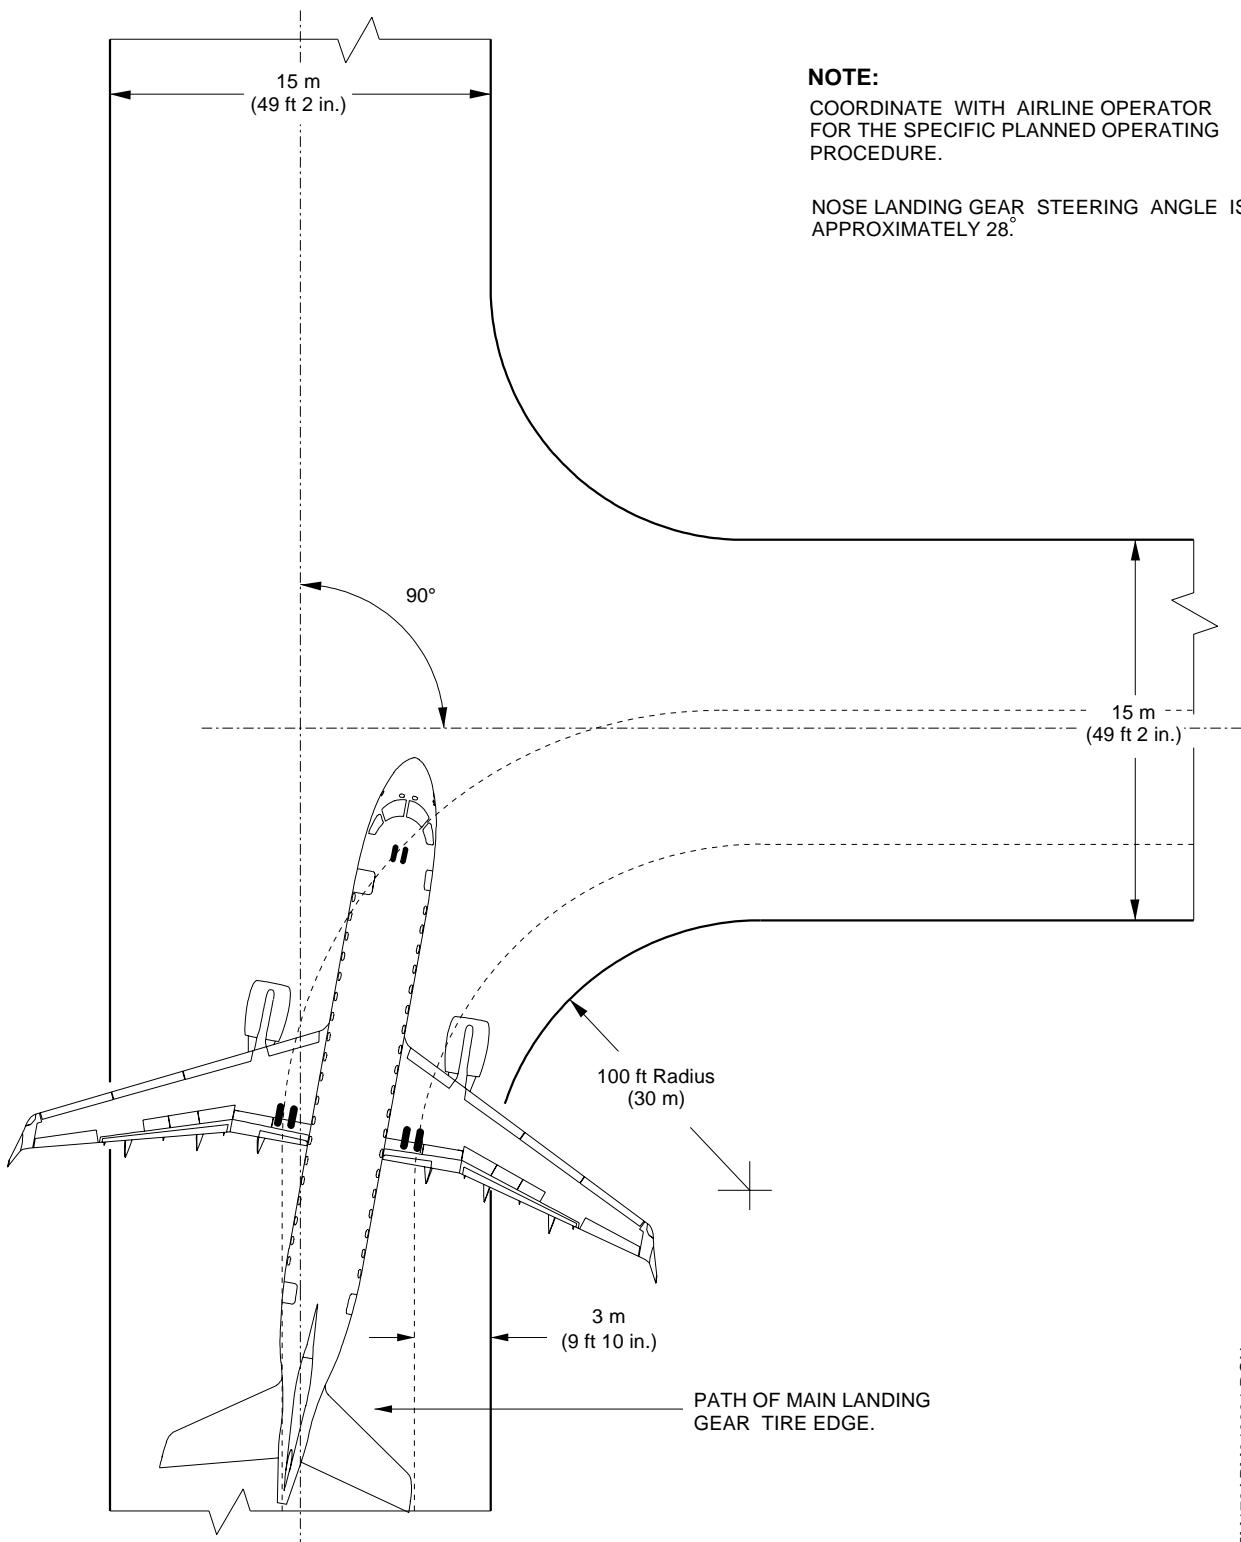

90° Turn - Taxiway to Taxiway  
Figure 4.6

EFFECTIVITY: ALL


**Section 4**  
Page 4-8  
Dec 08/03

EM170APM040004.DGN



# EMBRAER 170 AIRPORT PLANNING MANUAL

## 4.6. RUNWAY HOLDING BAY

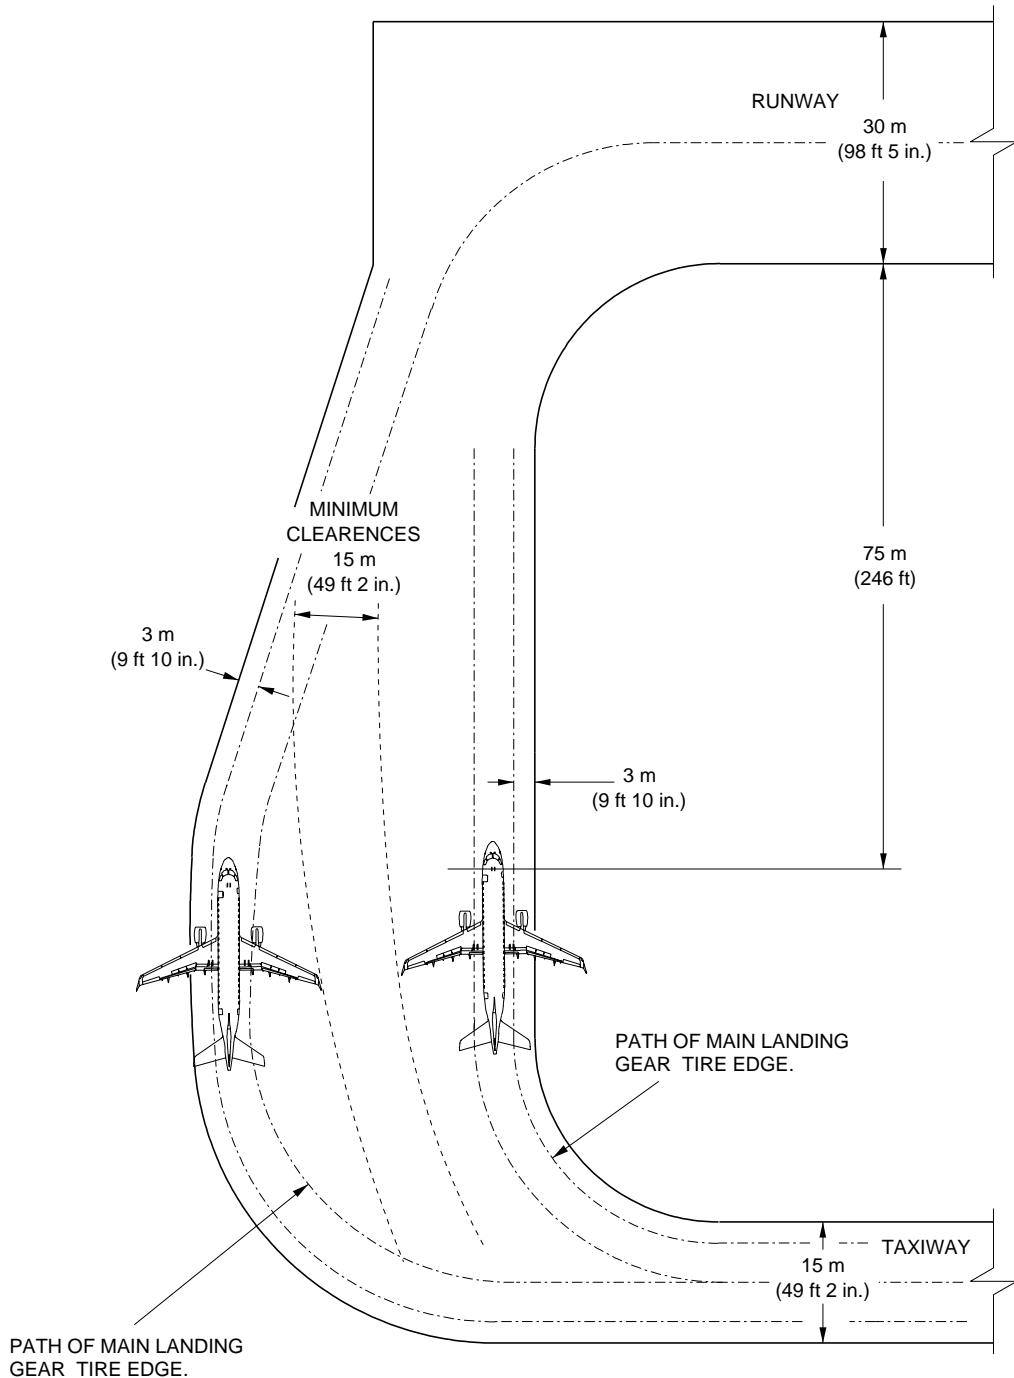

EM170APM040005.DGN

Runway Holding Bay  
Figure 4.7

EFFECTIVITY: ALL

Section 4

Page 4-9 / 10

Dec 08/03





# **EMBRAER 170 AIRPORT PLANNING MANUAL**

## **5. TERMINAL SERVICING**

During turnaround at the air terminal, certain services must be performed on the aircraft, usually within a given time to meet flight schedules. This section shows service vehicle arrangements, schedules, locations of servicing points, and typical servicing requirements. The data presented herein reflect ideal conditions for a single aircraft. Servicing requirements may vary according to the aircraft condition and airline operational (servicing) procedures.

This section provides the following information:


- The typical arrangements of equipment during turnaround;
- The typical turnaround servicing time at an air terminal;
- The locations of ground servicing connections in graphic and tabular forms;
- The typical sea level air pressure and flow requirements for starting the engine;
- The air conditioning requirements;
- The ground towing requirements for various towing conditions. Towbar pull and total traction wheel load may be determined by considering aircraft weight, pavement slope, coefficient of friction, and engine idle thrust.



# EMBRAER 170 AIRPORT PLANNING MANUAL

## 5.1.

### AIRCRAFT SERVICING ARRANGEMENT

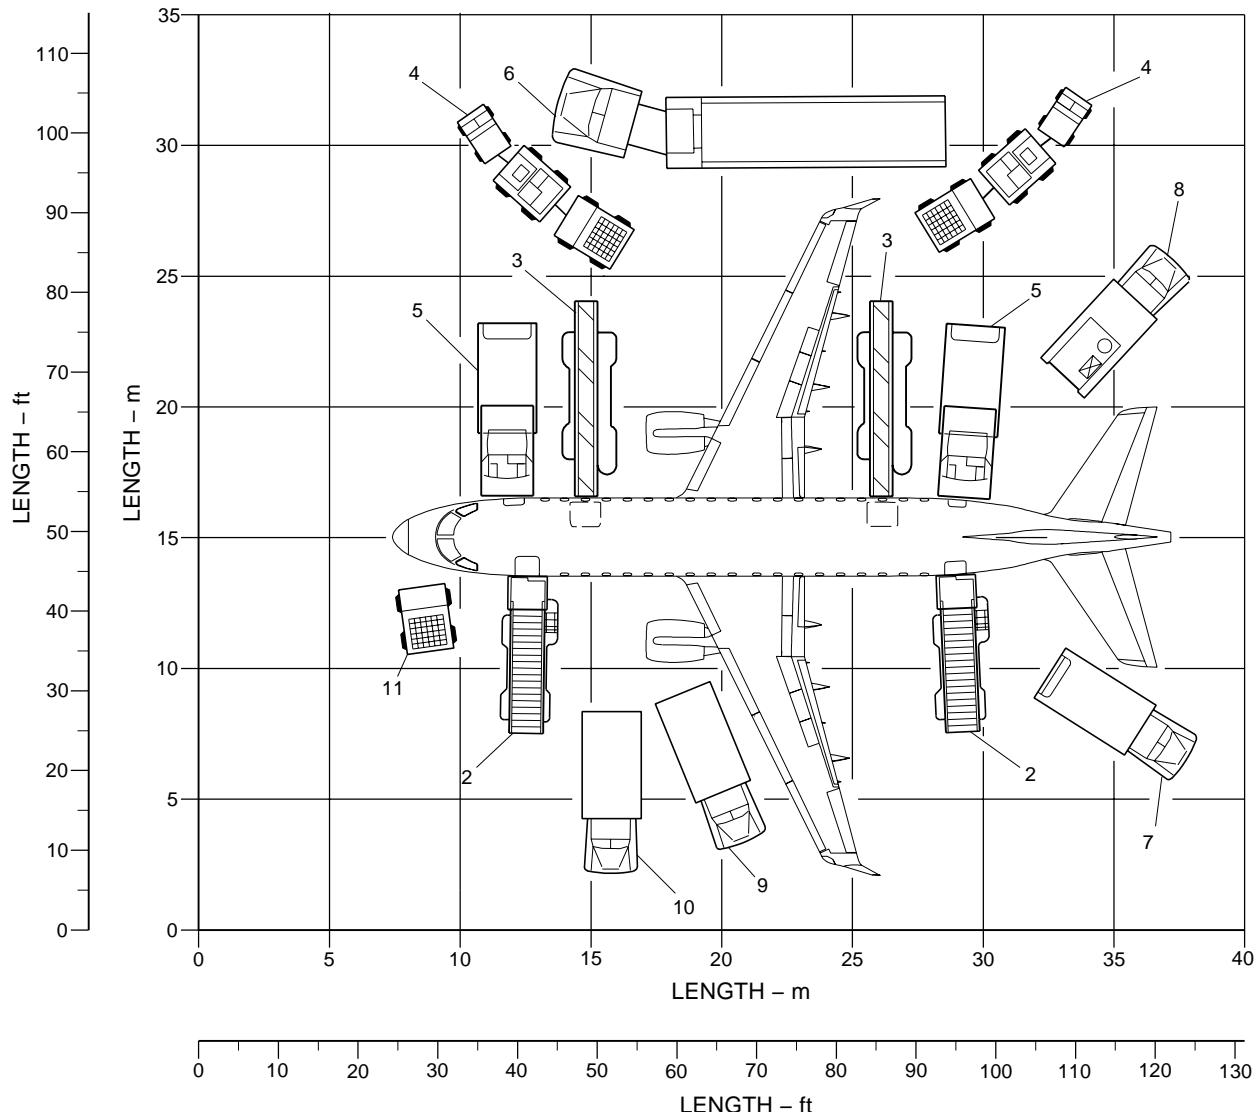

#### SERVICING ARRANGEMENT

- 02 - PASSENGER STAIRS
- 03 - CARGO LOADER
- 04 - BAGGAGE / CARGO TROLLEY AND TUG
- 05 - GALLEY SERVICE VEHICLE
- 06 - FUEL SERVICE
- 07 - POTABLE WATER
- 08 - LAVATORY SERVICE VEHICLE
- 09 - AIR CONDITIONING UNIT
- 10 - PNEUMATIC STARTER
- 11 - GROUND POWER UNIT

EM170APM050001.DGN


Aircraft Servicing Arrangement With Passenger Stairs  
Figure 5.1

EFFECTIVITY: ALL

**Section 5**  
Page 5-2  
Dec 08/03



# EMBRAER 170 AIRPORT PLANNING MANUAL

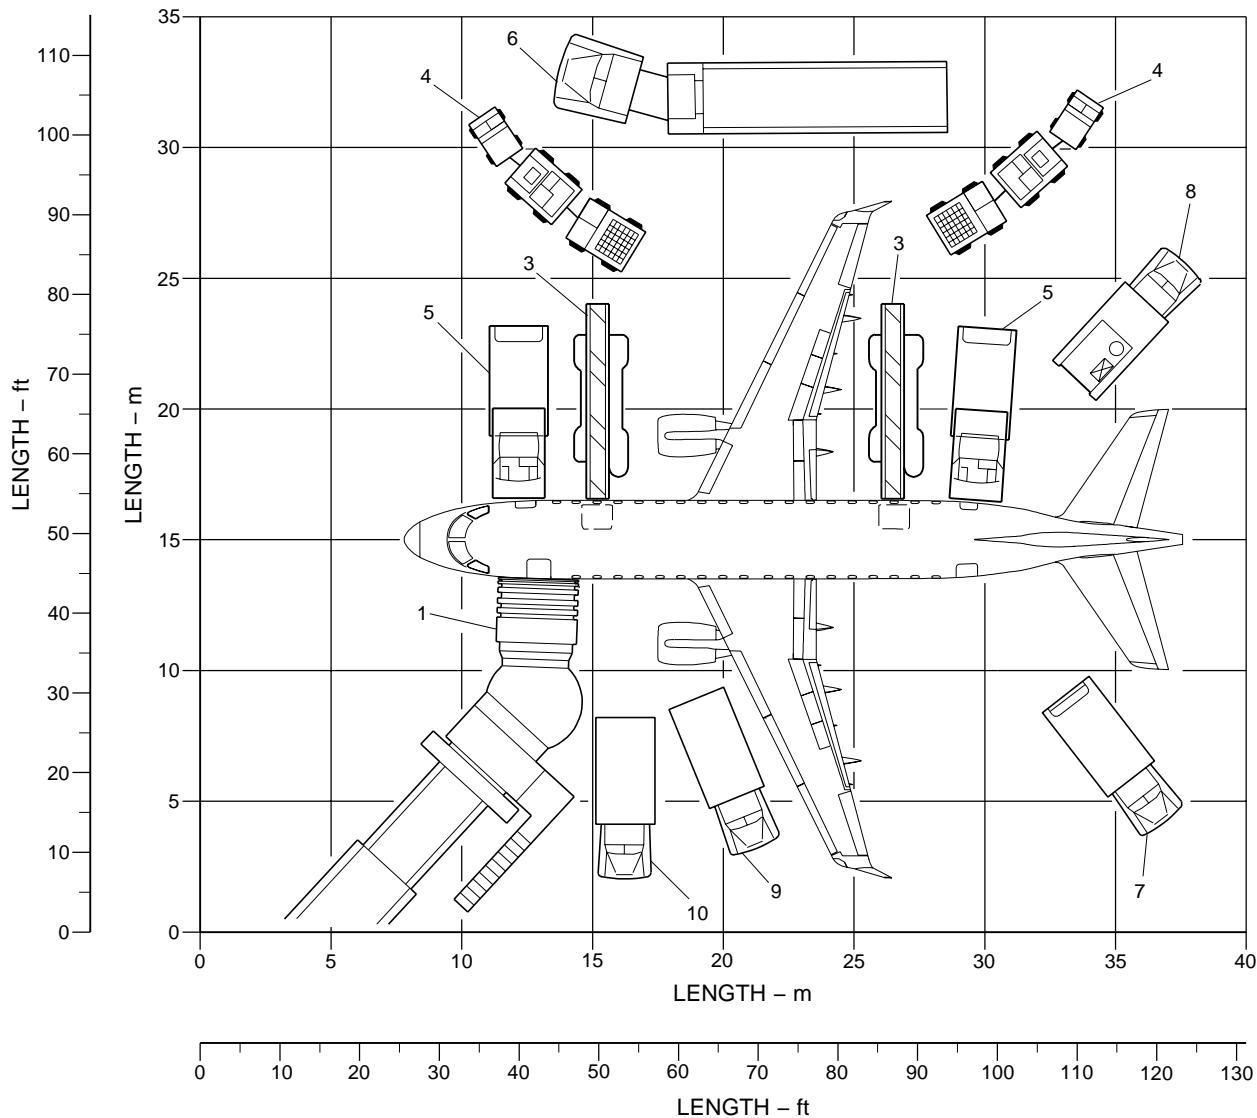

## SERVICING ARRANGEMENT

- 01 – PASSENGER BRIDGE
- 03 – CARGO LOADER
- 04 – BAGGAGE / CARGO TROLLEY AND TUG
- 05 – GALLEY SERVICE VEHICLE
- 06 – FUEL SERVICE
- 07 – POTABLE WATER
- 08 – LAVATORY SERVICE VEHICLE
- 09 – AIR CONDITIONING UNIT
- 10 – PNEUMATIC STARTER

EM170APM050002.DGN

Aircraft Servicing Arrangement With Passenger Bridge  
Figure 5.2

EFFECTIVITY: ALL

**Section 5**  
Page 5-3  
Dec 08/03



## **EMBRAER 170 AIRPORT PLANNING MANUAL**

### **5.2. TERMINAL OPERATIONS - TURNAROUND STATION**

This section presents the typical turnaround servicing time at an air terminal. The chart gives typical schedules for servicing the aircraft within a given time.

The time of each service in the chart was calculated taking the following into consideration:


- Load factor - 100%;
- Passenger deplane - 24 pax/min;
- Passenger enplane - 16 pax/min;
- Baggages checked per passenger - 1,2;
- Refuel (fuel quantity) - 80%;
- Flow - 290 gpm;
- Potable water - 70% to be refilled (56 ℥);
- Galley service FWD and aft sequence - in parallel;
- Toilet type - vacuum;
- Baggages unloading/loading FWD/aft sequence - in parallel;
- Only FWD passenger door to be used to deplane and enplane passengers.

Servicing times could be rearranged to suit availability of personnel, aircraft configuration, and degree of servicing required.

The data illustrates the general scope and tasks involving airport terminal operations. Airline particular practices and operating experience will result in different sequences and intervals.



**EMBRAER 170 AIRPORT  
PLANNING MANUAL**

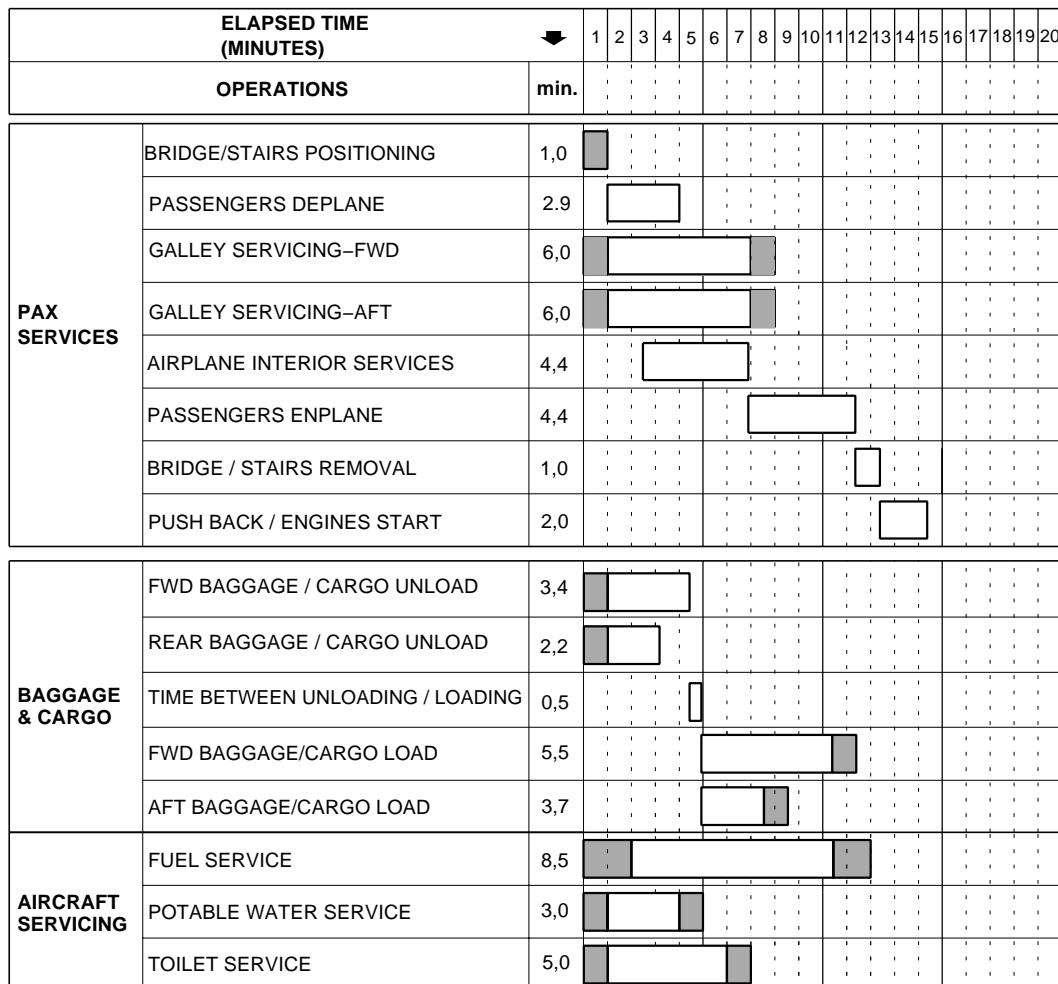

**LEGEND:**

[Solid] TRUCK POSITIONING/REMOVAL/SETTINGS

**NOTE:**

THIS DATA ILLUSTRATES THE GENERAL SCOPE AND TASKS INVOLVING AIRPORT TERMINAL OPERATIONS.  
AIRLINE PARTICULAR PRACTICES AND OPERATING EXPERIENCE WILL RESULT IN DIFFERENT SEQUENCES AND INTERVALS.

Air Terminal Operation - Turnaround Station  
Figure 5.3

EFFECTIVITY: ALL

**Section 5**

Page 5-5

May 11/07



## **EMBRAER 170 AIRPORT PLANNING MANUAL**

### **5.3. TERMINAL OPERATIONS - EN ROUTE STATION**


Not Applicable

EFFECTIVITY: ALL

**Section 5**  
Page 5-6  
Dec 08/03


**EMBRAER 170 AIRPORT  
PLANNING MANUAL**

#### 5.4. GROUND SERVICING CONNECTIONS

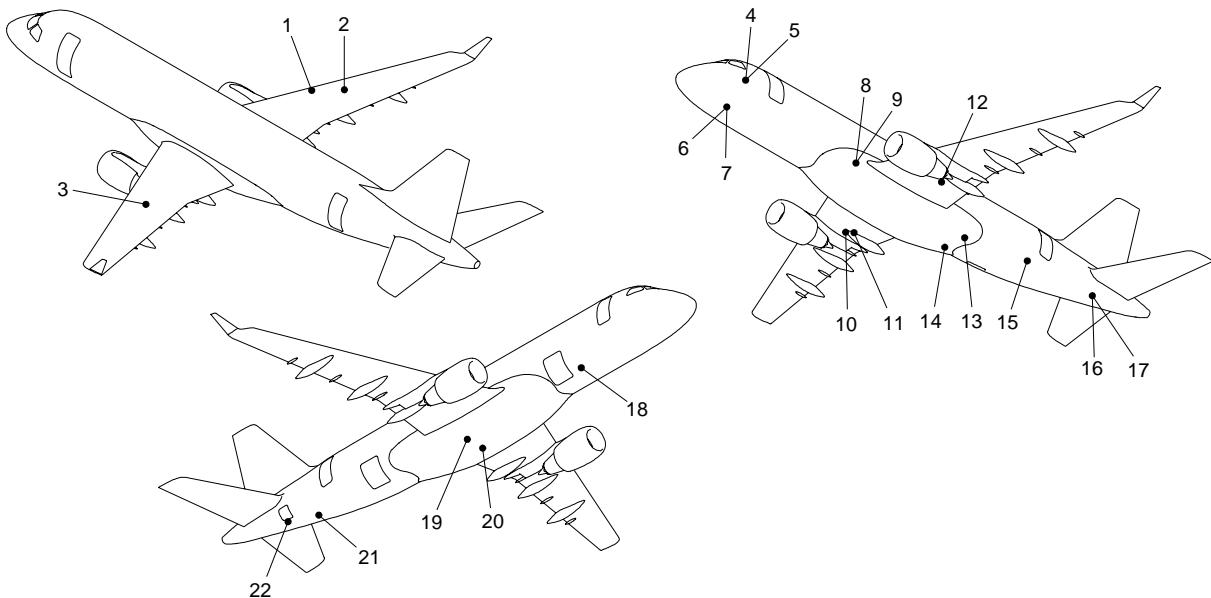

ITEM	DESCRIPTION	COORD. X (mm)	COORD. Y (mm)	COORD. Z (mm)	HEIGHT ABOVE GROUND (mm)
1	PRESSURE REFUELING PANEL	13491.27	5702.96	-623.30	2469.26
2	GRAVITY REFUELING PORT (RH)	14789.49	7413.99	-243.75	2848.49
3	GRAVITY REFUELING PORT (LH)	14789.49	-7413.99	-243.75	2848.49
4	EXTERNAL POWER SUPPLY 115 VAC	4146.90	-810.70	-1339.53	1755.33
5	FORWARD RAMP HEADSET	4164.44	-936.13	-1262.71	1832.15
6	STEERING SWITCH DISENGAGE	4136.97	-951.46	-1279.29	1815.58
7	WHEEL JACK POINT - NLG	4121.90	0.00	-2877.81	217.06
8	AIR COND. GROUND CONNECTION	10487.32	80.00	-1979.71	1113.60
9	ENGINE AIR STARTING (LOW PRESSURE UNIT)	10778.80	4.28	-2010.20	1083.03
10	GROUNDING POINT (ELECTRICAL)	14592.10	2560.25	-1343.60	1748.70
11	WHEEL JACK POINT- MLG (RH)	14476.67	2600.00	-2679.11	413.20
12	WHEEL JACK POINT- MLG (LH)	14476.67	-2600.00	-2679.11	413.20
13	HYD. SYS # 1 SERVICE PANEL	16560.17	-808.01	-1602.04	1489.76
14	HYD. SYS # 2 SERVICE PANEL	16560.17	808.01	-1602.04	1489.76
15	WATER SERVICING PANEL	21524.83	-329.37	-1178.74	1911.84
16	EXTERNAL POWER SUPPLY 28 VDC	24084.65	-471.73	-605.30	2484.65
17	AFT RAMP HEADSET	24225.26	-449.47	-585.54	2504.39
18	OXYGEN SERVICING PANEL / BOTTLE	6562.14	1159.87	-961.05	2133.22
19	FUEL TANK DRAIN VALVE (RH)	13352.80	398.47	-1413.71	1678.89
20	FUEL TANK DRAIN VALVE (LH)	13352.80	-398.47	-1413.71	1678.89
21	WASTE SERVICING PANEL	22447.01	349.20	-991.80	2098.55
22	HYD. SYS # 3 SERVICE PANEL	24061.86	519.15	-590.09	2499.87

**NOTE:**

THE GROUND CLEARANCES IN THE TABLE REFER TO THE AIRCRAFT WITH THE MINIMUM OPERATING WEIGHT (MOW) = 21800 kg (CG FWD 7.0% CMA)

EM170APM050005D.DGN

Ground Servicing Connections  
Figure 5.4

EFFECTIVITY: ALL


**Section 5**

Page 5-7

May 11/07



# EMBRAER 170 AIRPORT PLANNING MANUAL

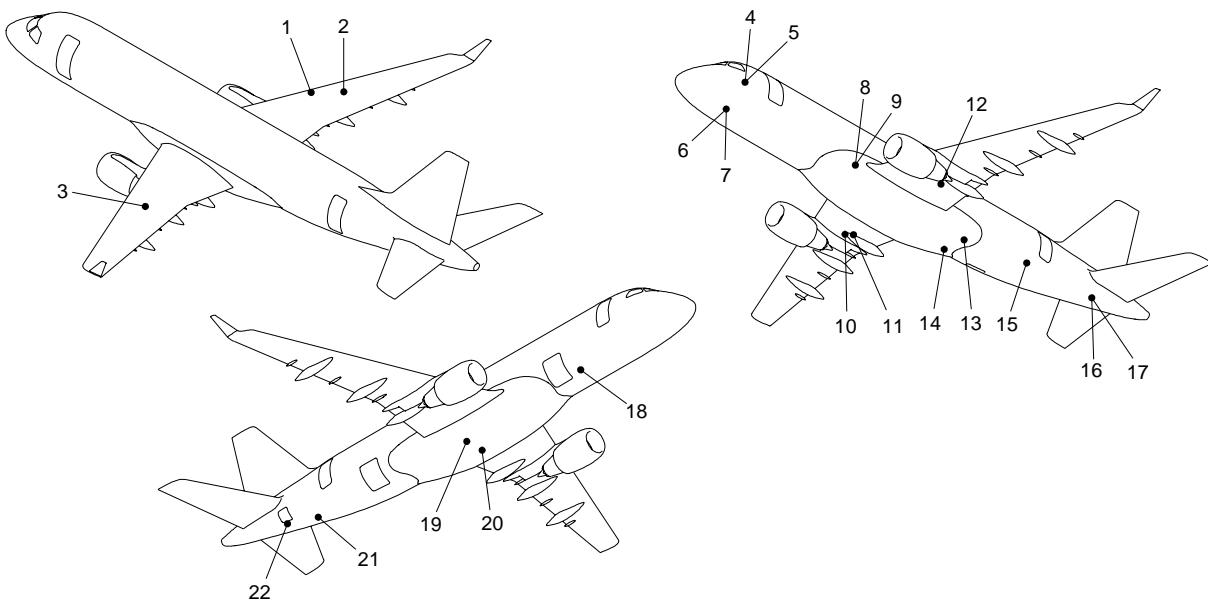

ITEM	DESCRIPTION	COORD. X (mm)	COORD. Y (mm)	COORD. Z (mm)	HEIGHT ABOVE GROUND (mm)
1	PRESSURE REFUELING PANEL	13491.27	5702.96	-623.30	2461.54
2	GRAVITY REFUELING PORT (RH)	14789.49	7413.99	-243.75	2830.76
3	GRAVITY REFUELING PORT (LH)	14789.49	-7413.99	-243.75	2830.76
4	EXTERNAL POWER SUPPLY 115 VAC	4146.90	-810.70	-1339.53	1819.58
5	FORWARD RAMP HEADSET	4164.44	-936.13	-1262.71	1896.25
6	STEERING SWITCH DISENGAGE	4136.97	-951.46	-1279.29	1879.90
7	WHEEL JACK POINT – NLG	4112.77	0.00	-2942.27	217.16
8	AIR COND. GROUND CONNECTION	10487.32	80.00	-1979.71	1129.04
9	ENGINE AIR STARTING (LOW PRESSURE UNIT)	10778.80	4.28	-2010.20	1096.23
10	GROUNDS POINT (ELECTRICAL)	14592.10	2560.25	-1343.60	1732.52
11	WHEEL JACK POINT- MLG (RH)	14475.49	2600.00	-2662.17	414.90
12	WHEEL JACK POINT- MLG (LH)	14475.49	-2600.00	-2662.17	414.90
13	HYD. SYS # 1 SERVICE PANEL	16560.17	-808.01	-1602.04	1458.44
14	HYD. SYS # 2 SERVICE PANEL	16560.17	808.01	-1602.04	1458.44
15	WATER SERVICING PANEL	21524.83	-329.37	-1178.74	1842.28
16	EXTERNAL POWER SUPPLY 28 VDC	24084.65	-471.73	-605.30	2395.36
17	AFT RAMP HEADSET	24225.26	-449.47	-585.54	2414.01
18	OXYGEN SERVICING PANEL / BOTTLE	6562.14	1159.87	-961.05	2178.86
19	FUEL TANK DRAIN VALVE (RH)	13352.80	398.47	-1413.71	1672.25
20	FUEL TANK DRAIN VALVE (LH)	13352.80	-398.47	-1413.71	1672.25
21	WASTE SERVICING PANEL	22447.01	349.20	-991.80	2021.88
22	HYD. SYS # 3 SERVICE PANEL	24061.86	519.15	-590.09	2410.75

**NOTE:**

THE GROUND CLEARANCES IN THE TABLE REFER TO THE AIRCRAFT WITH THE MINIMUM OPERATING WEIGHT (MOW) = 21800 kg (CG REAR 27.0% CMA)

EM170APM050006A.DGN

Ground Servicing Connections  
Figure 5.5

EFFECTIVITY: ALL

**Section 5**  
Page 5-8  
May 11/07



# **EMBRAER 170 AIRPORT PLANNING MANUAL**

## **5.5.**

### **ENGINE STARTING PNEUMATIC REQUIREMENTS**

**TABLE 1 – PNEUMATIC ENGINE START REQUIREMENTS**

Altitude ft	Ambient Temp °F	Minimum Pressure psia	Minimum Temp °F	Minimum Flow lb/min
SL	-40	48.0	349	95.1
SL	59	43.7	443	82.0
SL	120	40.7	505	73.7
9000	-40	37.7	350	74.5
9000	23	30.0	409	57.3
9000	86	28.9	474	53.4
13,000	-40	36.0	352	71.3
13,000	12	27.2	399	52.2
13,000	71	26.7	458	49.6
15,000	-40	32.9	352	66.6
15,000	5	25.3	392	49.0
15,000	59	24.4	446	46.1

EM170APM050030A.DGN

Engine Starting Pneumatic Requirements  
Figure 5.6

EFFECTIVITY: ALL


**Section 5**  
Page 5-9  
Oct 06/11



# EMBRAER 170 AIRPORT PLANNING MANUAL

## 5.6.


### GROUND PNEUMATIC POWER REQUIREMENTS

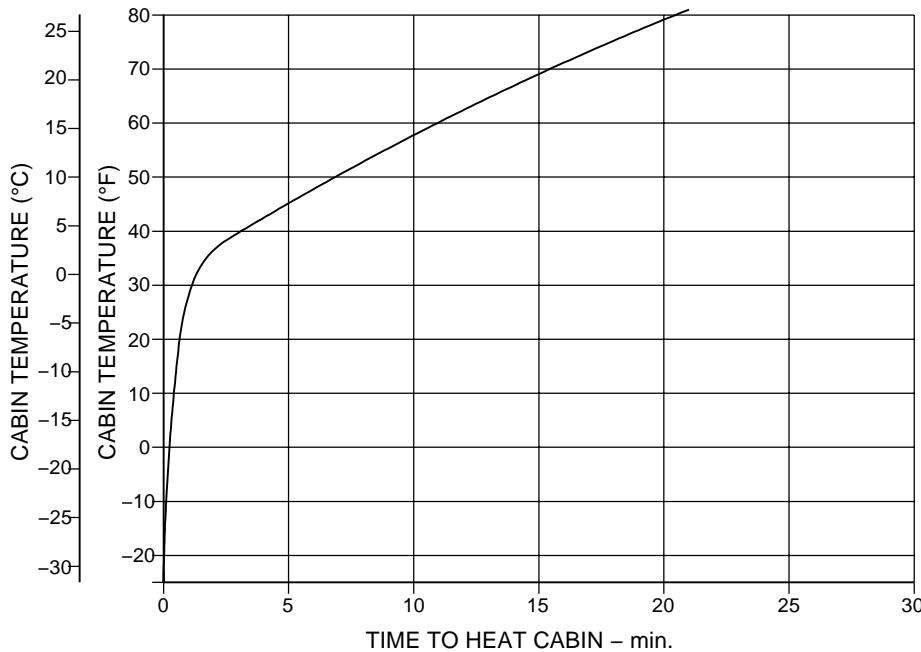

#### HEATING

Initial cabin temp:  $-32^{\circ}\text{C}$  ( $-25^{\circ}\text{F}$ )  
Outside air temp:  $-40^{\circ}\text{C}$  ( $-40^{\circ}\text{F}$ )  
Relative Humidity: 0%  
No crew or passengers  
No other heat load

Bleed air from APU:  
87 kg/min. (192.0 lb/min.)  
452 kPa (65.5 psia)  
2 operating packs (ECS)

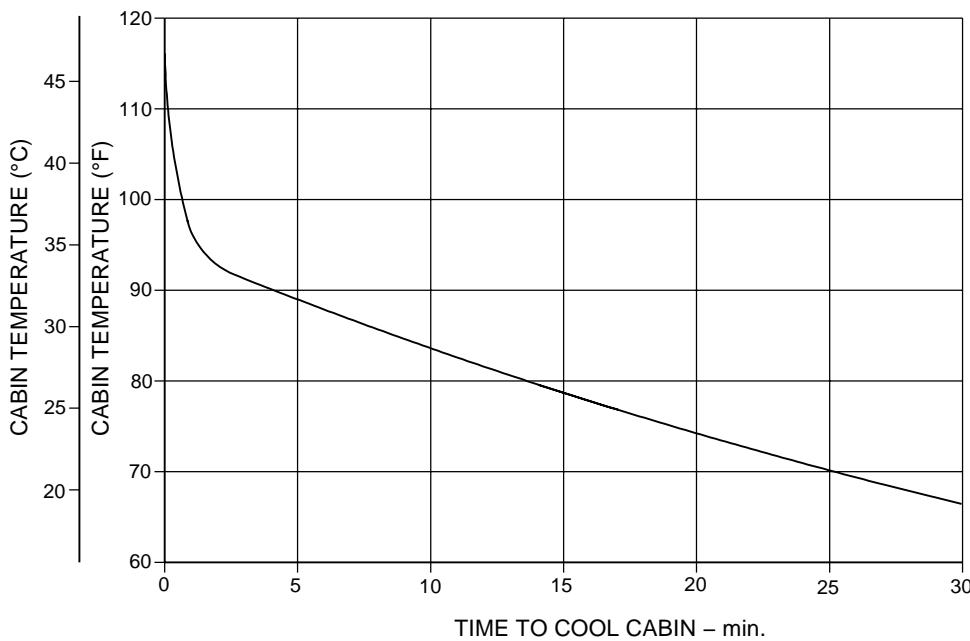

#### COOLING

Initial cabin temp:  $47^{\circ}\text{C}$  ( $116^{\circ}\text{F}$ )  
Outside air temp:  $40^{\circ}\text{C}$  ( $104^{\circ}\text{F}$ )  
Relative Humidity: 40%  
No crew or passengers  
No other heat load

Bleed air from APU:  
56 kg/min. (122.9 lb/min.)  
413 kPa (59.9 psia)  
2 operating packs (ECS)

EM170APM050007B.DGN

Ground Pneumatic Power Requirements  
Figure 5.7

EFFECTIVITY: ALL

**Section 5**  
Page 5-10  
Oct 06/11



# **EMBRAER 170 AIRPORT PLANNING MANUAL**


## **5.7. PRECONDITIONED AIRFLOW REQUIREMENTS**

This subsection presents the following information:

- The air conditioning requirements for heating and cooling using ground conditioned air. The curves show airflow requirements to heat or cool the aircraft at ambient conditions within a given time.
- The air conditioning heating and cooling requirements to maintain a constant cabin air temperature using low-pressure conditioned air. This conditioned air is supplied through a ground air connection directly to the passenger cabin, bypassing the air cycle machines.



# EMBRAER 170 AIRPORT PLANNING MANUAL

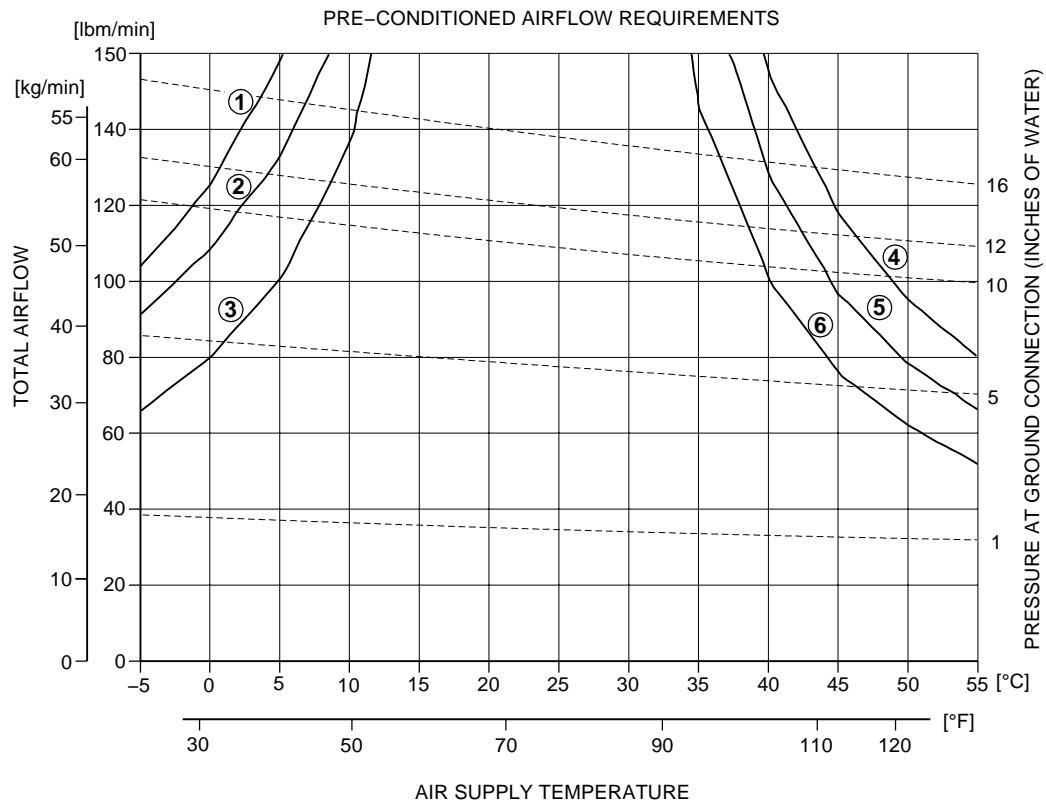

EM170MFEP040069B.DGN

Preconditioned Airflow Requirements  
Figure 5.8


EFFECTIVITY: ALL

**Section 5**  
Page 5-12  
Oct 06/11

## 5.8.

### GROUND TOWING REQUIREMENTS

#### GROUND TOWING REQUIREMENTS

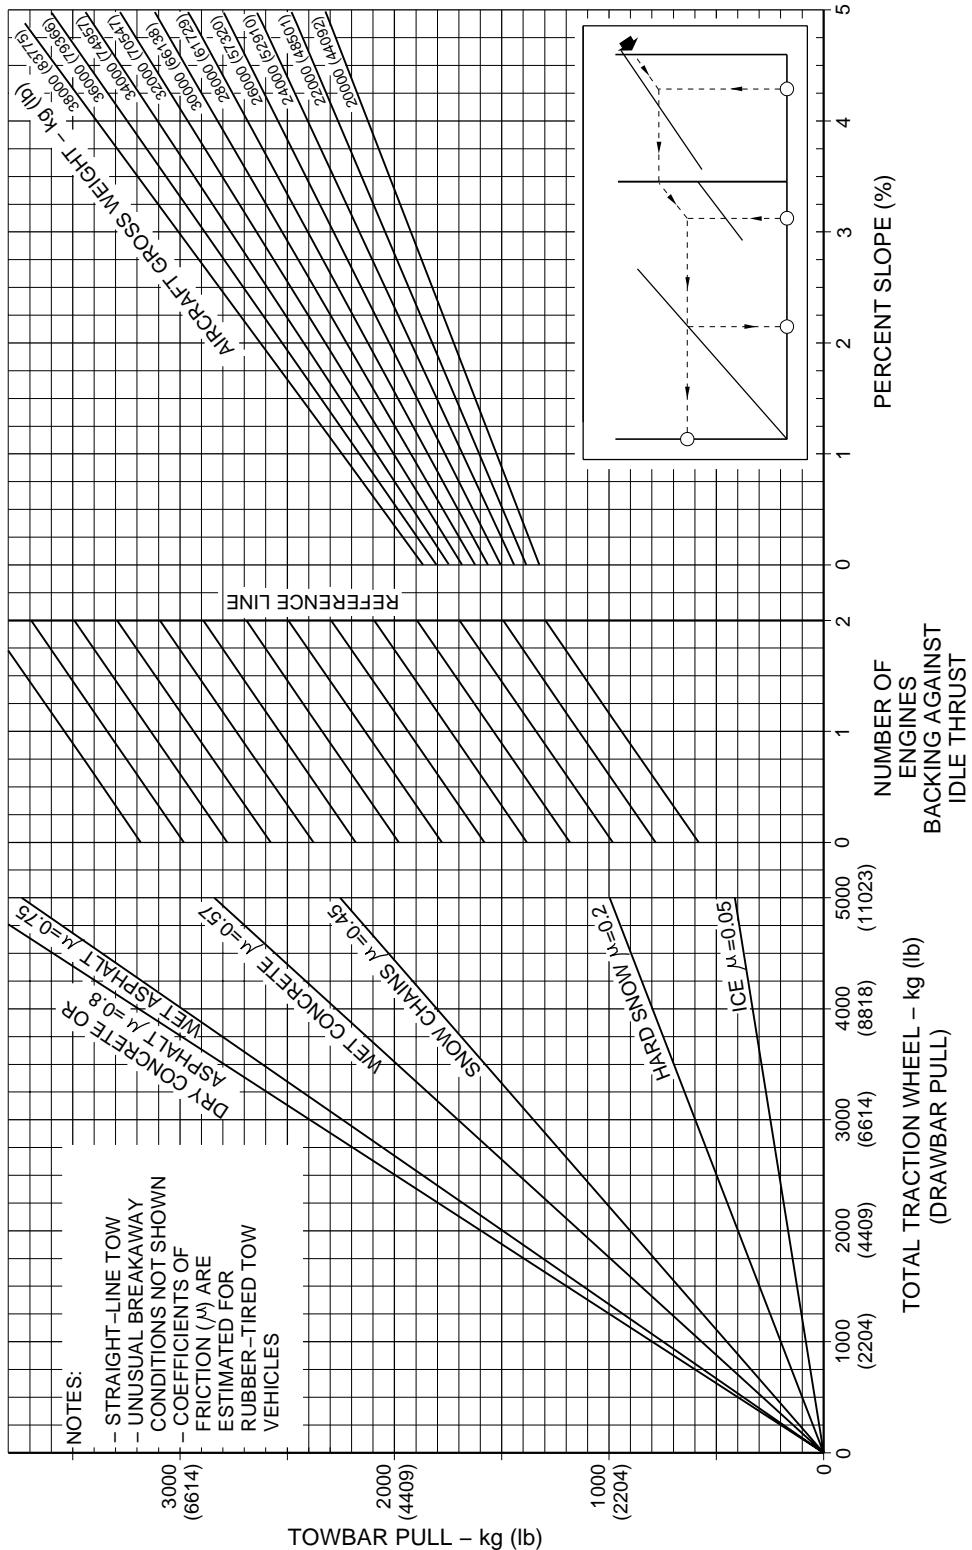

Ground Towing Requirements  
Figure 5.9

EFFECTIVITY: ALL

**Section 5**

Page 5-13 / 14

Oct 06/11





# **EMBRAER 170 AIRPORT PLANNING MANUAL**

## **6. OPERATING CONDITIONS**

This section provides the following information:

- The jet engine exhaust velocities and temperatures.
- The airport and community noise levels.
- The hazard areas.

EFFECTIVITY: ALL

**Section 6**  
Page 6-1  
Dec 08/03




# EMBRAER 170 AIRPORT PLANNING MANUAL

## 6.1.

### ENGINE EXHAUST VELOCITIES AND TEMPERATURES

TAKEOFF POWER, SEA LEVEL, Tamb = ISA +16.7°C, FNIN1 = 63685 N (14317 lbf)

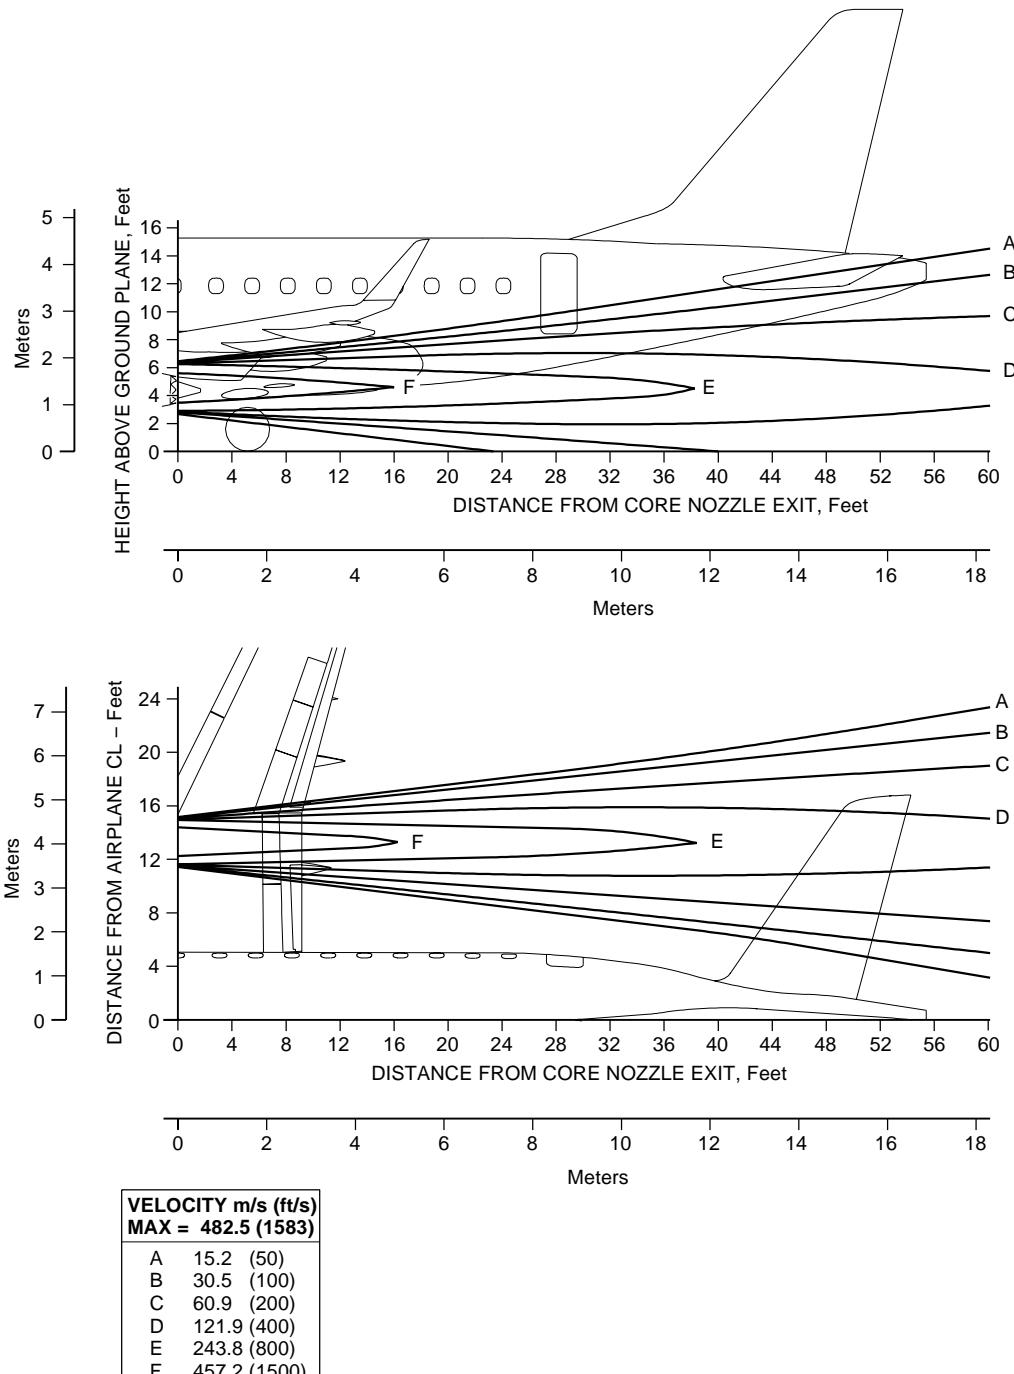

**NOTE:**

EXHAUST VELOCITY CONTOURS INCLUDE WORST CASE 20 kn HEADWIND WITH GROUND EFFECTS.

EM170MFEPO10005.DGN

Jet Wake Velocity Profile - Takeoff Power  
Figure 6.1


EFFECTIVITY: ALL

**Section 6**  
Page 6-2  
Dec 08/03



# EMBRAER 170 AIRPORT PLANNING MANUAL

TAKEOFF POWER, SEA LEVEL, Tamb = ISA +16.7°C, FNIN1 = 63685 N (14317 lbf)

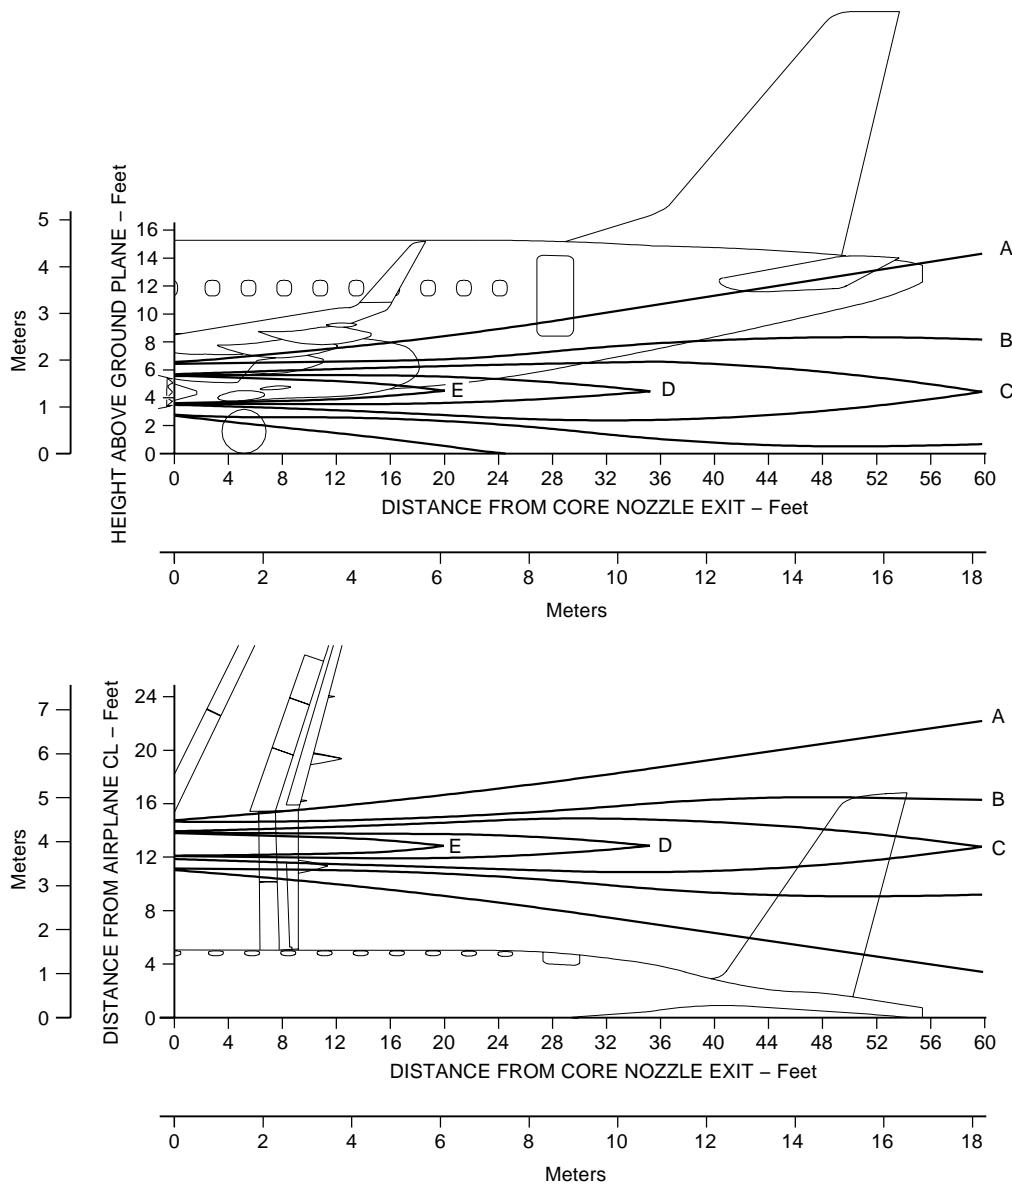

TOTAL TEMPERATURE MAX = 689°C (1273°F)	
	°C      °F
A	38      100
B	66      150
C	93      200
D	204      400
E	582      900

**NOTE:**

EXHAUST TEMPERATURE CONTOURS INCLUDE WORST CASE 20 kn HEADWIND.

Jet Wake Temperature Profile - Takeoff Power  
Figure 6.2

EFFECTIVITY: ALL

## Section 6


Page 6-3

Dec 08/03



# EMBRAER 170 AIRPORT PLANNING MANUAL

GROUND IDLE, SEA LEVEL, Tamb = ISA +16.7°C, FNIN1 = 3785 N (851 lbf)

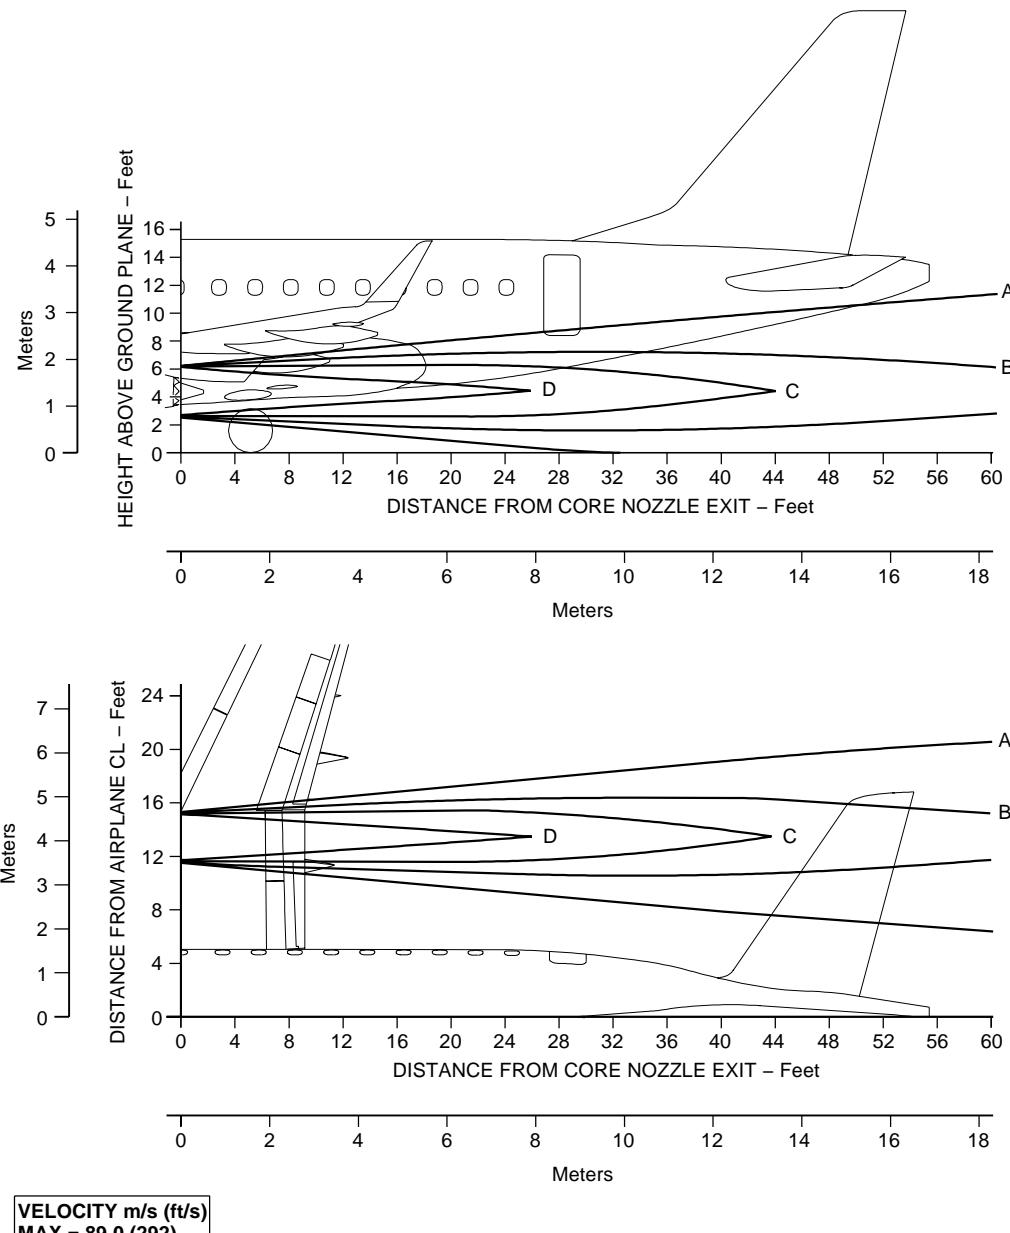

VELOCITY m/s (ft/s)	
MAX = 89.0 (292)	
A	15.2 (50)
B	30.5 (100)
C	45.7 (150)
D	76.2 (250)

## NOTE:

EXHAUST VELOCITY CONTOURS INCLUDE WORST CASE 20 kn HEADWIND WITH GROUND EFFECTS.

EM170MFEP010007.DGN

Jet Wake Velocity Profile - Ground Idle  
Figure 6.3

EFFECTIVITY: ALL

## Section 6


Page 6-4

Dec 08/03



# EMBRAER 170 AIRPORT PLANNING MANUAL

GROUND IDLE, SEA LEVEL, Tamb = ISA +16.7°C, FNIN1 = 3785 N (851 lbf)

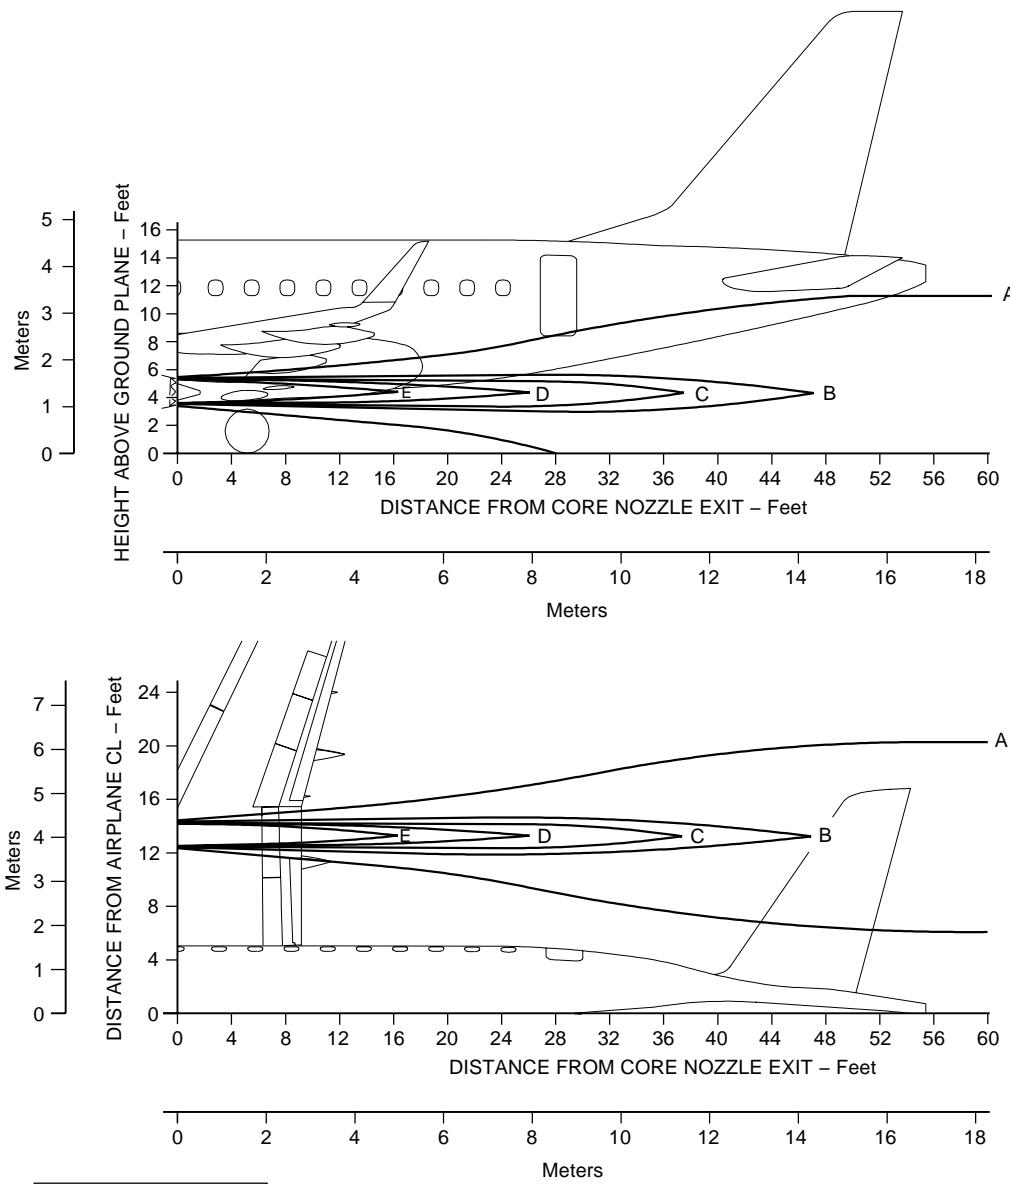

TOTAL TEMPERATURE MAX = 519°C (966°F)		
	°C	°F
A	38	100
B	66	150
C	93	200
D	204	400
E	582	900

**NOTE:**

EXHAUST TEMPERATURE CONTOURS INCLUDE WORST CASE 20 kn HEADWIND.


Jet Wake Temperature Profile - Ground Idle  
Figure 6.4

EFFECTIVITY: ALL

**Section 6**  
Page 6-5  
Dec 08/03



# EMBRAER 170 AIRPORT PLANNING MANUAL

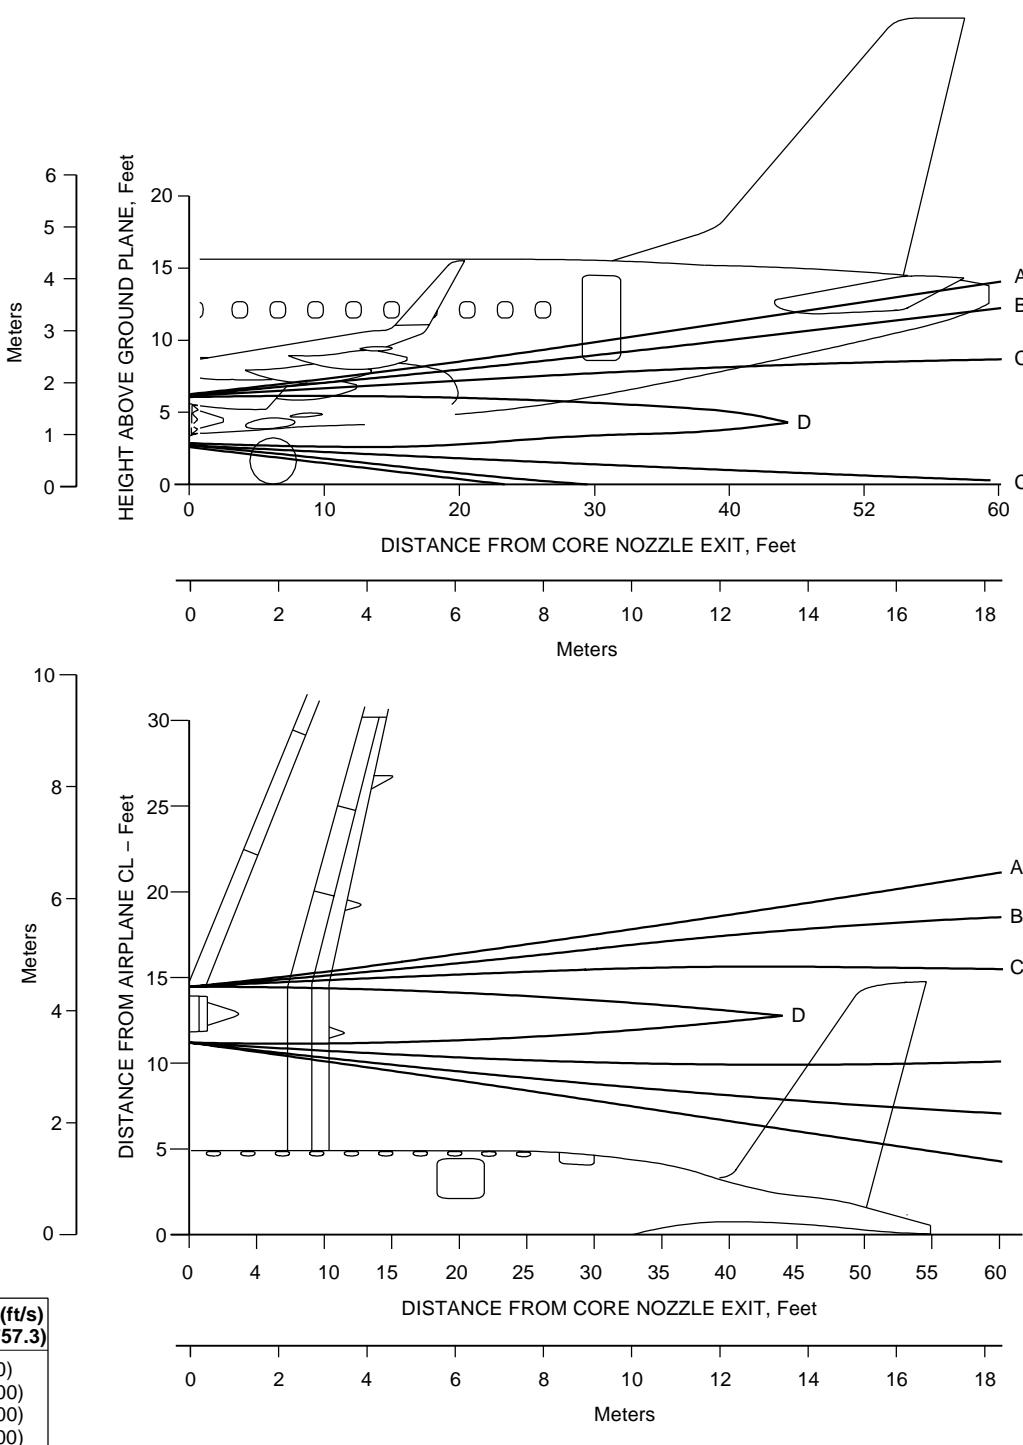

## NOTE:

EXHAUST VELOCITY CONTOURS INCLUDE WORST CASE 20 kn HEADWIND WITH GROUND EFFECTS.

Jet Wake Velocity Profile - Breakaway Power  
Figure 6.5


EM170APM060006A.DGN

EFFECTIVITY: ALL

Section 6  
Page 6-6  
Jan 09/06



# EMBRAER 170 AIRPORT PLANNING MANUAL

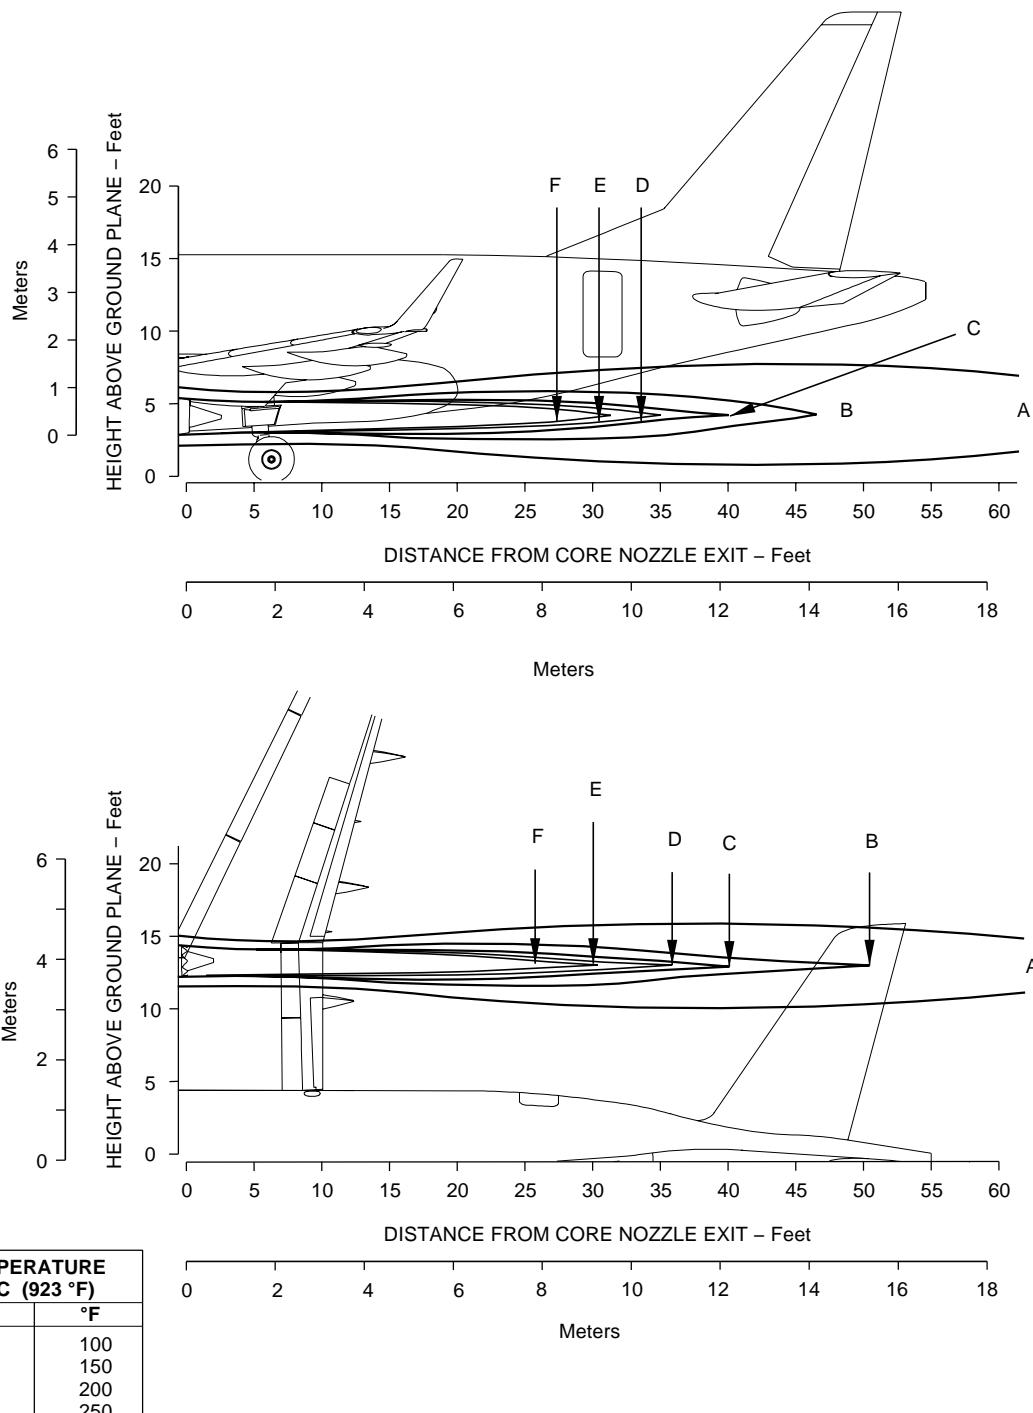

TOTAL TEMPERATURE MAX = 495 °C (923 °F)		
	°C	°F
A	38	100
B	66	150
C	93	200
D	121	250
E	149	300
F	177	350

**NOTE:**

EXHAUST TEMPERATURE CONTOURS INCLUDE WORST CASE 20 kn HEADWIND WITH GROUND EFFECTS.

Jet Wake Temperature Profile - Breakaway Power  
Figure 6.6

EFFECTIVITY: ALL

## Section 6

Page 6-7

Jan 09/06



# **EMBRAER 170 AIRPORT PLANNING MANUAL**

## **6.2. AIRPORT AND COMMUNITY NOISE**

Aircraft noise is a major concern for the airport and community planner. The airport is a basic element in the community's transportation system and, thus, is vital to its growth. However, the airport must also be a good neighbor, and this can only be accomplished with proper planning. Since aircraft noise extends beyond the boundaries of the airport, it is vital to consider the noise impact on the surrounding communities.

Many means have been devised to provide the planner with a tool to estimate the impact of airport operations. Too often they oversimplify noise to the point where the results become erroneous. Noise is not a simple matter; therefore, there are no simple answers.

The cumulative noise contour is an effective tool. However, care must be exercised to ensure that the contours, used correctly, estimate the noise resulting from aircraft operations conducted at an airport. The size and shape of the single-event contours, which are inputs into the cumulative noise contours, are dependent upon numerous factors. They include operational factors (aircraft weight, engine power setting, airport altitude), atmospheric conditions (wind, temperature, relative humidity, surface condition), and terrain.

### **6.2.1. External Certification Noise Levels**

The aircraft comply with the Stage 3 / Chapter 3 noise limits set forth in 14 CFR Part 36, ICAO Annex 16, Volume 1, Chapter 3, Amendment 7 and CTA RBHA 36.

### **6.2.2. Ramp Noise Levels**


The ramp noise will not exceed 80 dBA (maximum) and 77 dBA (average) on the rectangular perimeter of 20 m (65 ft 7 in) from the aircraft centerline, nose and tail, 90 dBA on the service positions and 80 dBA on the passenger entrance positions resulting from operation of the APU (if fitted), ECS, equipment cooling fans and vent fans, in any combination.



# EMBRAER 170 AIRPORT PLANNING MANUAL

## 6.3. HAZARD AREAS

TAKEOFF POWER, SEA LEVEL, Tamb = ISA +16.7° C, FNIN1 = 63685 N (14317 lbf)

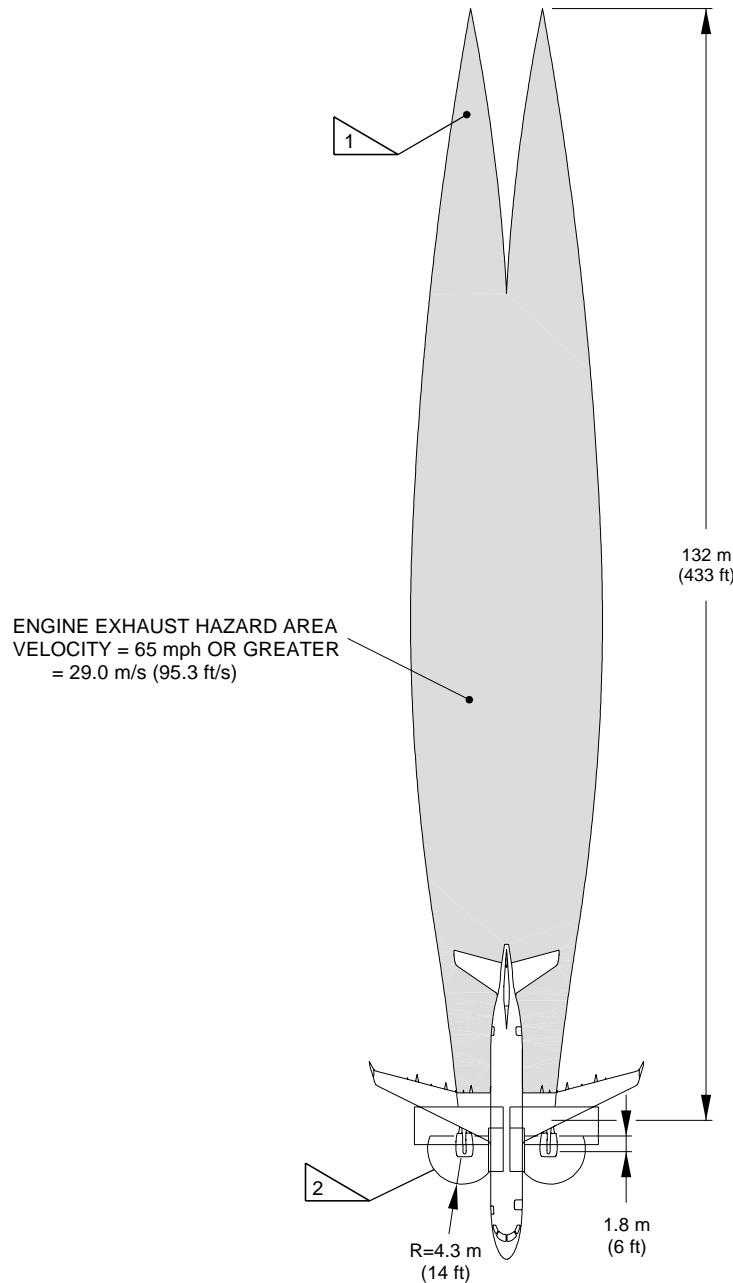

**NOTE:**

NO ACCESS TO ENGINE ACCESSORIES AT TAKEOFF POWER.



EXHAUST HAZARD AREA – CONDITION: 20 kn HEADWIND WITH GROUND EFFECTS.



INLET HAZARD AREA – CONDITION: 20 kn HEADWIND/CROSSWIND BASED ON 12.2 m/s (40 ft/s) CRITICAL VELOCITY WITH 0.9 m (3 ft) CONTINGENCY FACTOR.

EM170MFEPO10001A.DGN

Hazard Areas - Takeoff Power  
Figure 6.7

EFFECTIVITY: ALL

## Section 6


Page 6-9

Jan 09/06



# EMBRAER 170 AIRPORT PLANNING MANUAL

GROUND IDLE, SEA LEVEL, Tamb = ISA+16.7° C, FNIN1 = 3785 N (851 lbf)

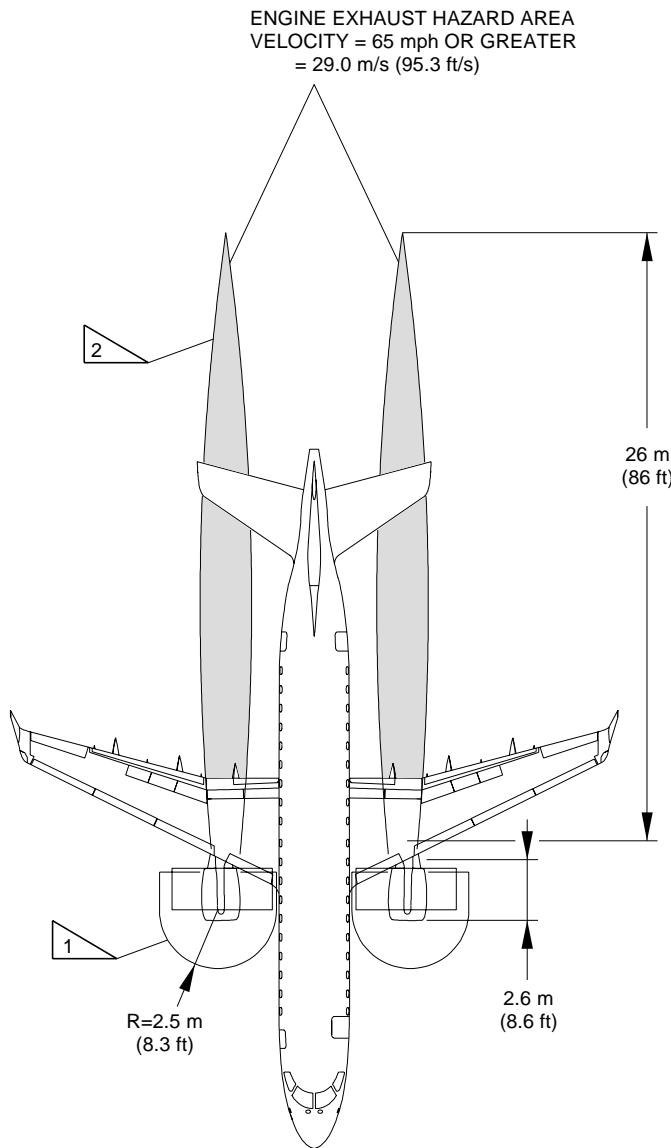

1 INLET HAZARD AREA – CONDITION: 20 kn HEADWIND/CROSSWIND/TAILWIND BASED ON 12.2 m/s (40 ft/s) CRITICAL VELOCITY WITH 0.9 m (3 ft) CONTINGENCY FACTOR.

2 EXHAUST HAZARD AREA – CONDITION: 20 kn HEADWIND WITH GROUND EFFECTS.

Hazard Areas - Ground Idle  
Figure 6.8

EM170MFEP010002A.DGN


EFFECTIVITY: ALL

**Section 6**  
Page 6-10  
Oct 07/10



# EMBRAER 170 AIRPORT PLANNING MANUAL

BREAKAWAY POWER, SEA LEVEL, Tamb = ISA +16.7° C, FNIN1 = 2328 DAN (5233 lbf)

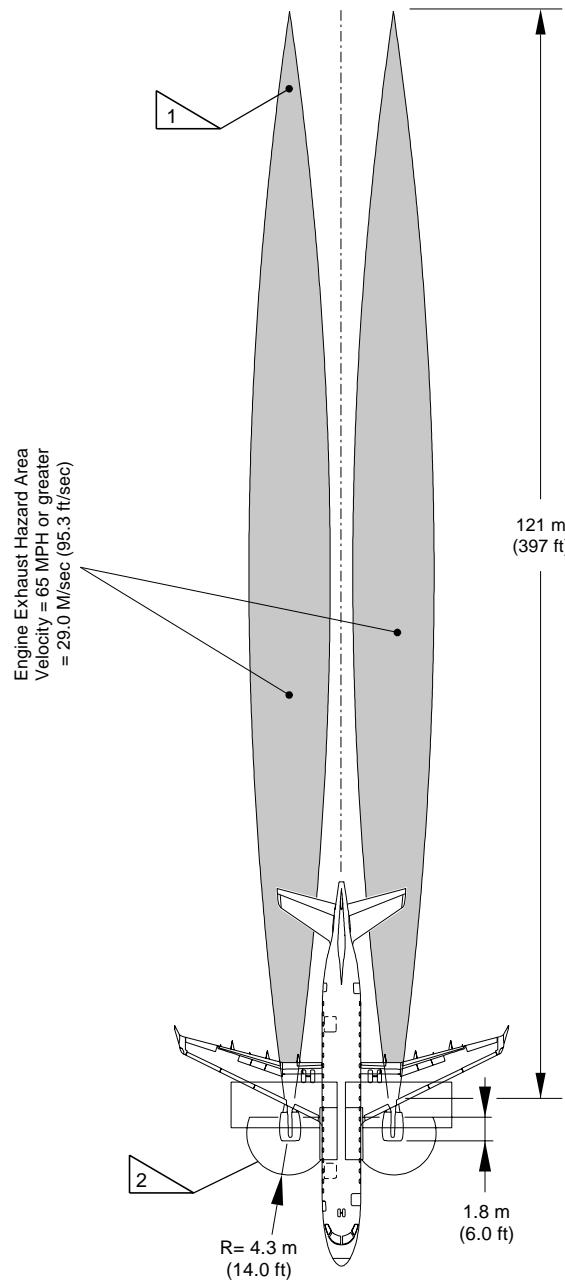

**NOTE:**

NO ACCESS TO ENGINE ACCESSORIES AT BREAKAWAY POWER.



1 EXHAUST HAZARD AREA – CONDITION: 20 knot HEADWIND WITH GROUND EFFECTS.



2 INLET HAZARD AREA – CONDITION: 20 knot HEADWIND/CROSSWIND BASED ON 40 ft/sec CRITICAL VELOCITY WITH 0.9 m (3 ft) CONTINGENCY FACTOR.

Hazard Areas - Breakaway Power  
Figure 6.9

EFFECTIVITY: ALL

## Section 6

Page 6-11 / 12

Oct 07/10





## **7. PAVEMENT DATA**

### **7.1. GENERAL INFORMATION**

Pavement is defined as a structure consisting of one or more layers of processed materials. The primary function of a pavement is to distribute concentrated loads so that the supporting capacity of the subgrade soil is not exceeded. The subgrade soil is defined as the material on which the pavement rests, whether embankment or excavation.

Several methods for design of airport pavements have been developed that differ considerably in their approach.

The design methods are derived from observation of pavements in service or experimental pavements. Thus, the reliability of any method is proportional to the amount of experimental verification behind the method, and all methods require a considerable amount of common sense and judgment on the part of the engineer who applies them.

A brief description of the following pavement charts will be helpful in their use for airport planning. Each aircraft configuration is depicted with a minimum range of five loads imposed on the main landing gear to aid in the interpolation between the discrete values shown. The tire pressure used for the aircraft charts will produce the recommended tire deflection with the aircraft loaded to its maximum ramp weight and with center of gravity position. The tire pressure, where specifically designated in tables and charts, are values obtained under loaded conditions as certified for commercial use.

This section is presented as follows:

- The basic data on the landing gear footprint configuration, maximum design ramp loads, and tire sizes and pressures.
- The maximum pavement loads for certain critical conditions at the tire-ground interfaces.
- A chart in order to determine the loads throughout the stability limits of the aircraft at rest on the pavement. Pavement requirements for commercial aircraft are customarily derived from the static analysis of loads imposed on the main landing gear struts. These main landing gear loads are used to enter the pavement design charts which follow, interpolating load values where necessary.
- The flexible pavement curves prepared in accordance with the US Army Corps of Engineers Design Method and the LCN Method.
- The rigid pavement design curves in accordance with the Portland Cement Association Design Method and the LCN Method.
- The aircraft ACN values for flexible and rigid pavements.




# EMBRAER 170 AIRPORT PLANNING MANUAL

## 7.2.

### FOOTPRINT

AIRCRAFT MODELS		
	STD	LR, SU OR SE
MAXIMUM RAMP WEIGHT	36150 kg (79697 lb)	37360 kg (82365 lb)
NOSE GEAR TIRE SIZE	24 x 7.7	
NOSE GEAR TIRE PRESSURE	$7.24 \pm 0.21 \text{ kg/cm}^2$ (103 ± 3 psi)	
MAIN GEAR TIRE SIZE	H38 x 13-18	
MAIN GEAR TIRE PRESSURE	$8.86 \pm 0.7 \text{ kg/cm}^2$ (126 ± 10 psi)	$9.14 \pm 0.7 \text{ kg/cm}^2$ (130 ± 10 psi)

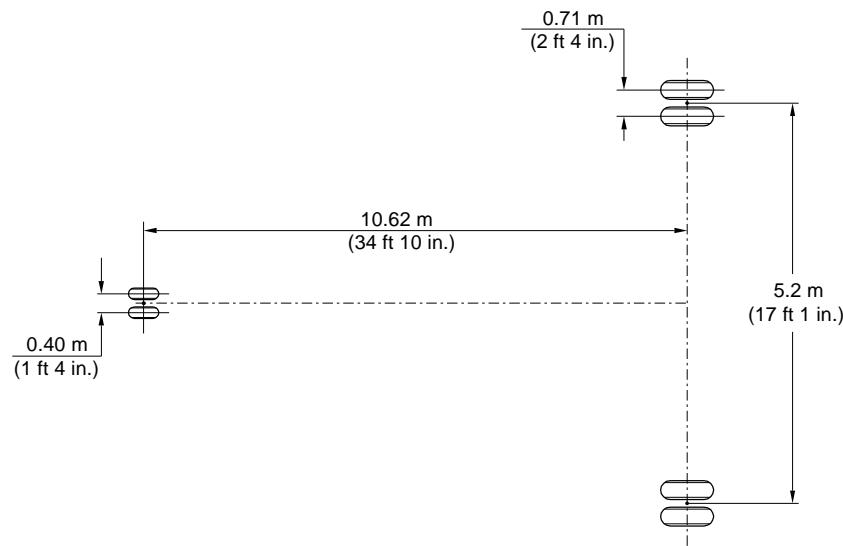

EM170APM070002C.DGN

Footprint  
Figure 7.1

EFFECTIVITY: ALL

Section 7  
Page 7-2  
Jul 01/05




# EMBRAER 170 AIRPORT PLANNING MANUAL

## 7.3. MAXIMUM PAVEMENT LOADS

LEGEND:  $V_{NG}$  = MAXIMUM VERTICAL NOSE GEAR GROUND LOAD AT MOST FORWARD C.G.  
 $V_{MG}$  = MAXIMUM VERTICAL MAIN GEAR GROUND LOAD AT MOST FORWARD C.G.  
 $H$  = MAXIMUM HORIZONTAL GROUND LOAD FROM BRAKING

NOTE: ALL LOADS CALCULATED USING AIRCRAFT MAXIMUM RAMP WEIGHT

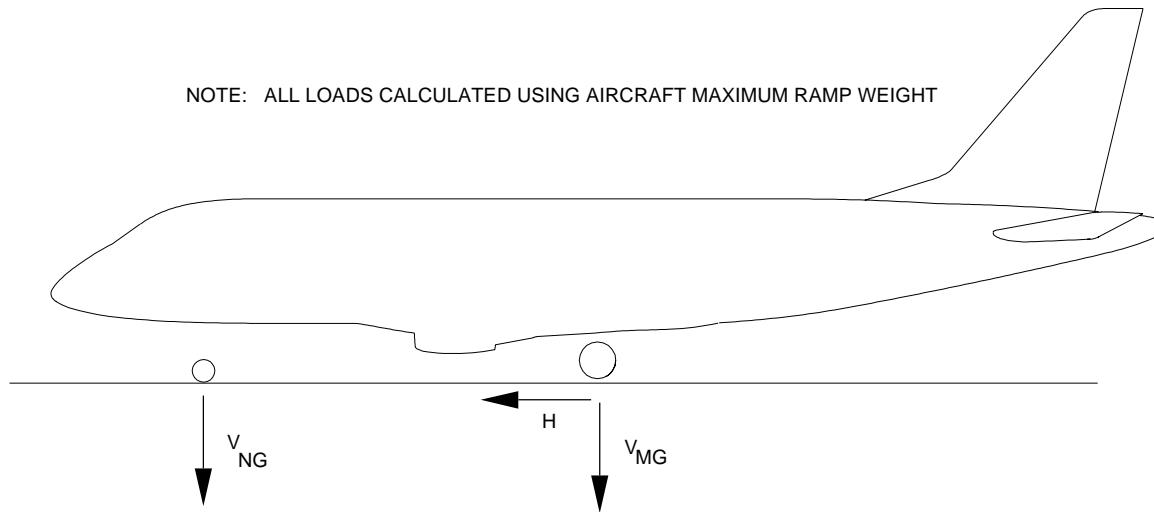

MODEL	MAXIMUM RAMP WEIGHT	$V_{NG}$		$V_{MG}$ (PER STRUT)	H (PER STRUT)	
		STATIC AT MOST FORWARD C.G.	STEADY BRAKING WITH DECELERATION OF 3,0 m/sec <sup>2</sup>	STATIC AT MOST AFT C.G.	STEADY BRAKING WITH DECELERATION OF 3,0 m/sec <sup>2</sup>	INSTANTANEOUS BRAKING (FRICTION COEF. OF 0.8)
LR, SU OR SE	37360 kg (82365 lb)	4888 kg (10776 lb)	6994 kg (15419 lb)	17546 kg (38682 lb)	5090 kg (11221 lb)	11870 kg (26169 lb)
STD	36150 kg (79697 lb)	4922 kg (10851 lb)	6961 kg (15346 lb)	16976 kg (37426 lb)	4924 kg (10855 lb)	11480 kg (25309 lb)

EM170APM070013C.DGN

Maximum Pavement Loads  
Figure 7.2

EFFECTIVITY: ALL


Section 7  
Page 7-3  
Jul 01/05



# EMBRAER 170 AIRPORT PLANNING MANUAL

7.4.

## LANDING GEAR LOADING ON PAVEMENT

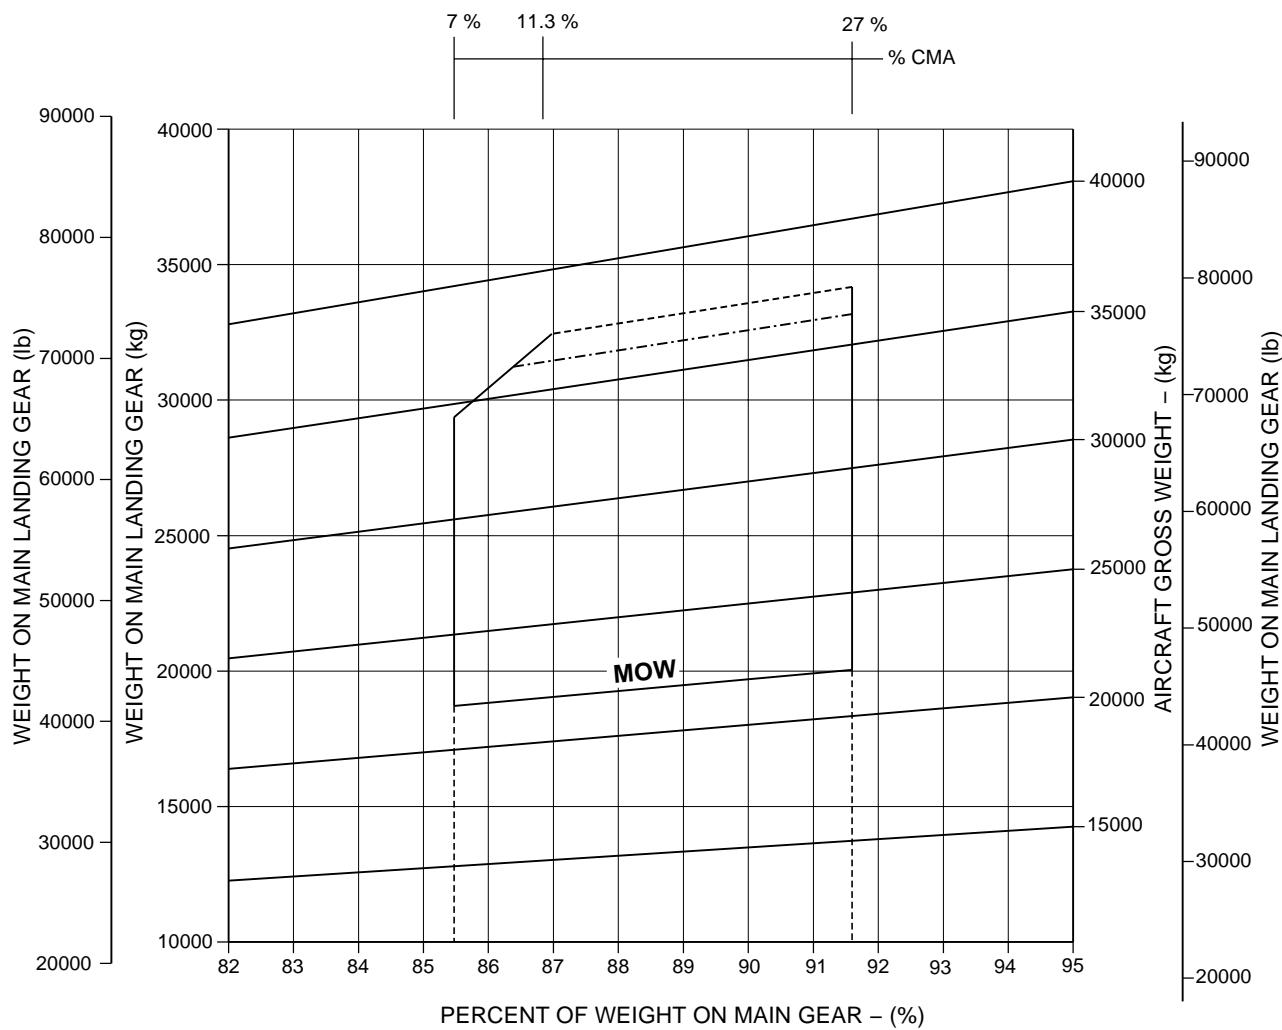

### LEGEND

- LR, SU OR SE AIRCRAFT MODELS
- STD AIRCRAFT MODEL

EM170APM070014C.DGN

Landing Gear Loading on Pavement  
Figure 7.3

EFFECTIVITY: ALL

**Section 7**  
Page 7-4  
Jul 01/05



## **EMBRAER 170 AIRPORT PLANNING MANUAL**

### **7.5. FLEXIBLE PAVEMENT REQUIREMENTS, U.S. CORPS OF ENGINEERS DESIGN METHOD**



The flexible pavement curves are based on the procedures set forth in Instruction Report No. S-77-1, "Procedures for Development of CBR Design Curves", dated June 1977, and modified according to the methods described in FAA Advisory Circular 150/5320-6D, "Airport Pavement Design and Evaluation", dated July 7, 1995. Instruction Report No. S-77-1 was prepared by the US Army Corps of Engineers Waterways Experiment Station, Soils and Pavements Laboratory, Vicksburg, Mississippi. The line showing 10,000 coverages is used to calculate ACN.



# EMBRAER 170 AIRPORT PLANNING MANUAL

NOTES: H 38x13-18 TIRE SIZE - TIRES PRESSURE AT 8.86 kgf/cm<sup>2</sup> (126 psi)

SUBGRADE STRENGHT - CBR

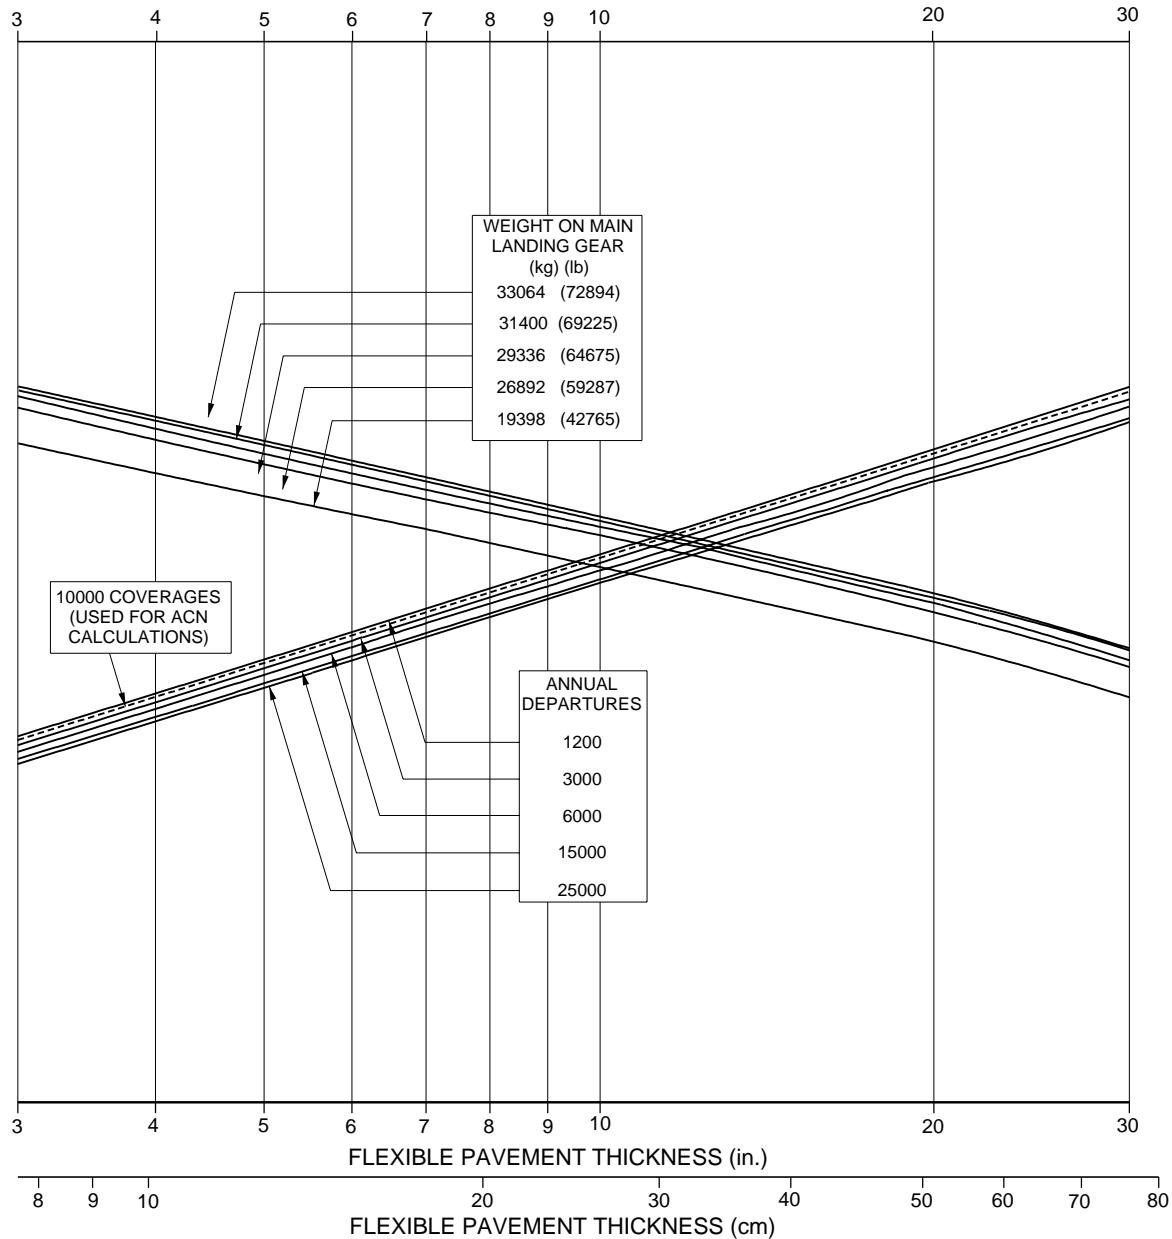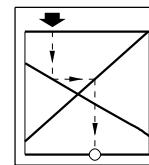

EM170APM070017.DGN

Flexible Pavement Requirements - US Army Corps of Engineers Design Method  
Figure 7.4


EFFECTIVITY: EMBRAER 170 STD ACFT  
MODEL

**Section 7**  
Page 7-6  
Dec 08/03




# EMBRAER 170 AIRPORT PLANNING MANUAL

NOTES: H38 X 13-18 TIRE SIZE – TIRES PRESSURE AT 9.14 kgf/cm<sup>2</sup> (130 psi)

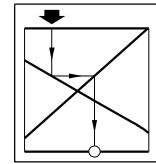

## SUBGRADE STRENGHT – CBR

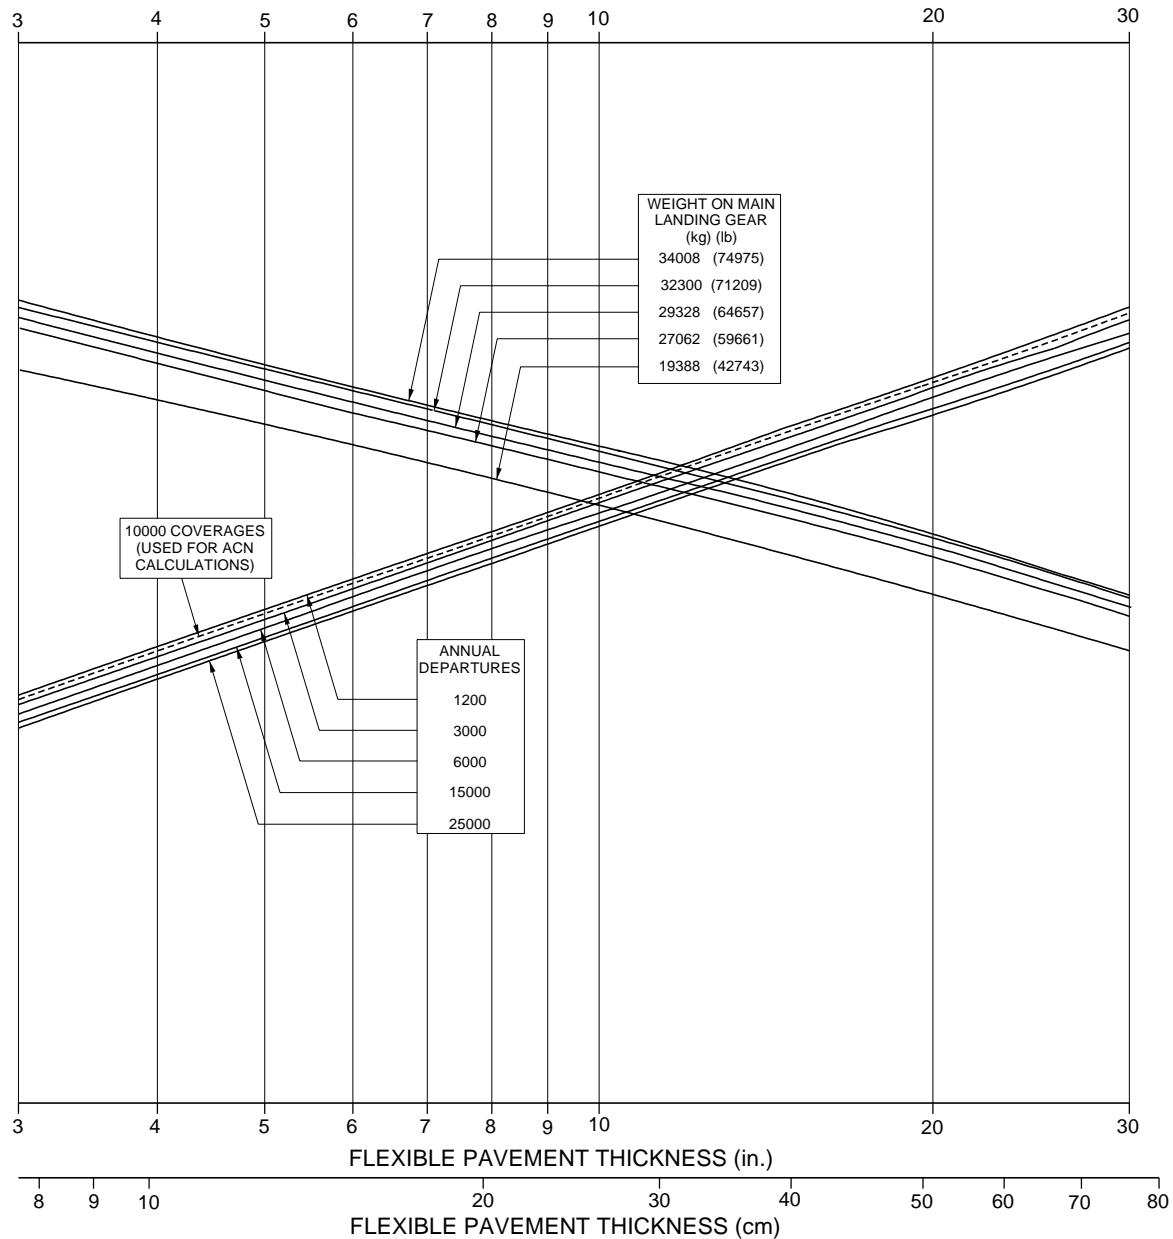

EM170APM070001A.DGN

Flexible Pavement Requirements - US Army Corps of Engineers Design Method  
Figure 7.5

EFFECTIVITY: EMBRAER 170 LR OR SU OR SE  
ACFT MODEL

**Section 7**  
Page 7-7  
Jul 01/05



# **EMBRAER 170 AIRPORT PLANNING MANUAL**

## **7.6. FLEXIBLE PAVEMENT REQUIREMENTS, LCN METHOD**


The LCN method presents curves for flexible pavements. They have been built using procedures and curves in the ICAO Aerodrome Design Manual, Part 3 - Pavements, Document 9157-AN/901, 1983. The same chart includes the data of equivalent single-wheel load versus pavement thickness.

EFFECTIVITY: ALL


**Section 7**  
Page 7-8  
Dec 08/03



# EMBRAER 170 AIRPORT PLANNING MANUAL

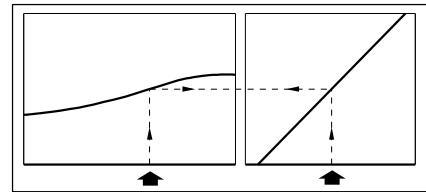

TIRES H38x13-18 AT 8.86 kg/cm<sup>2</sup> (126 psi)

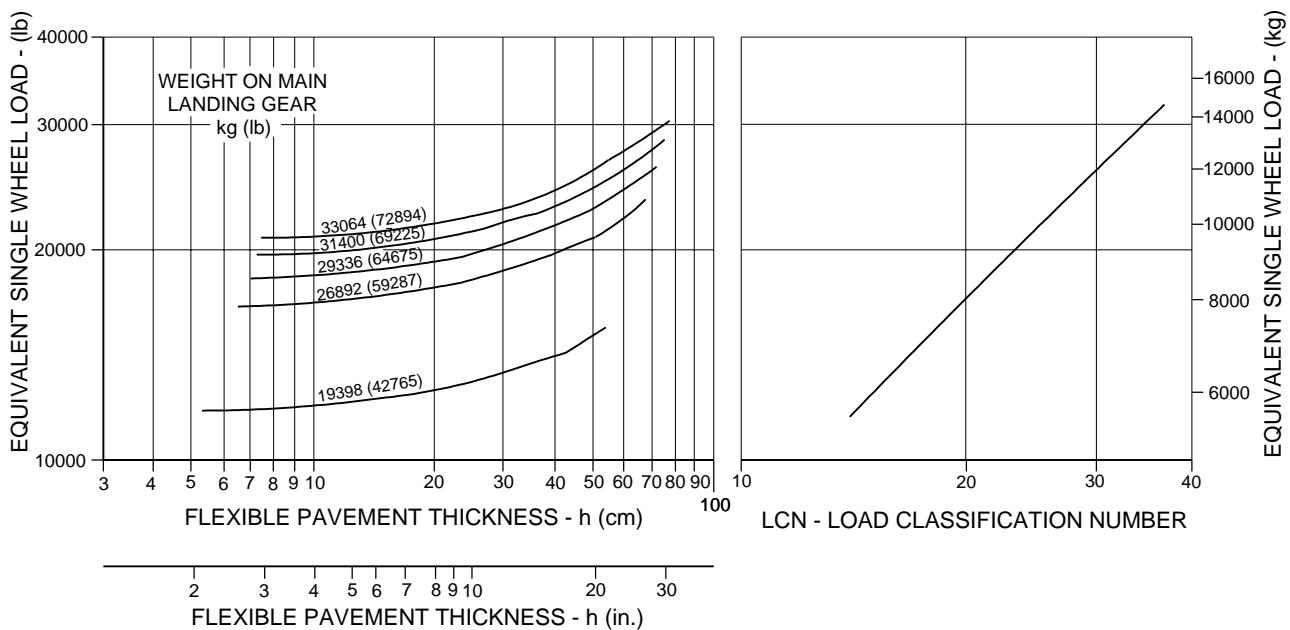

## NOTES:

EQUIVALENT SINGLE WHEEL LOADS  
ARE DERIVED BY METHODS SHOWN  
IN ICAO AERODROME MANUAL.  
PART 2, PAR. 4.1.3

EM170APM070018.DGN


Flexible Pavement Requirements - LCN Method  
Figure 7.6

EFFECTIVITY: EMBRAER 170 STD ACFT  
MODEL


Section 7  
Page 7-9  
Dec 08/03



# EMBRAER 170 AIRPORT PLANNING MANUAL

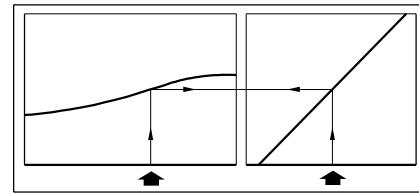

TIRES H38x13-18 AT 9.14 kg/cm<sup>2</sup> (130 psi)

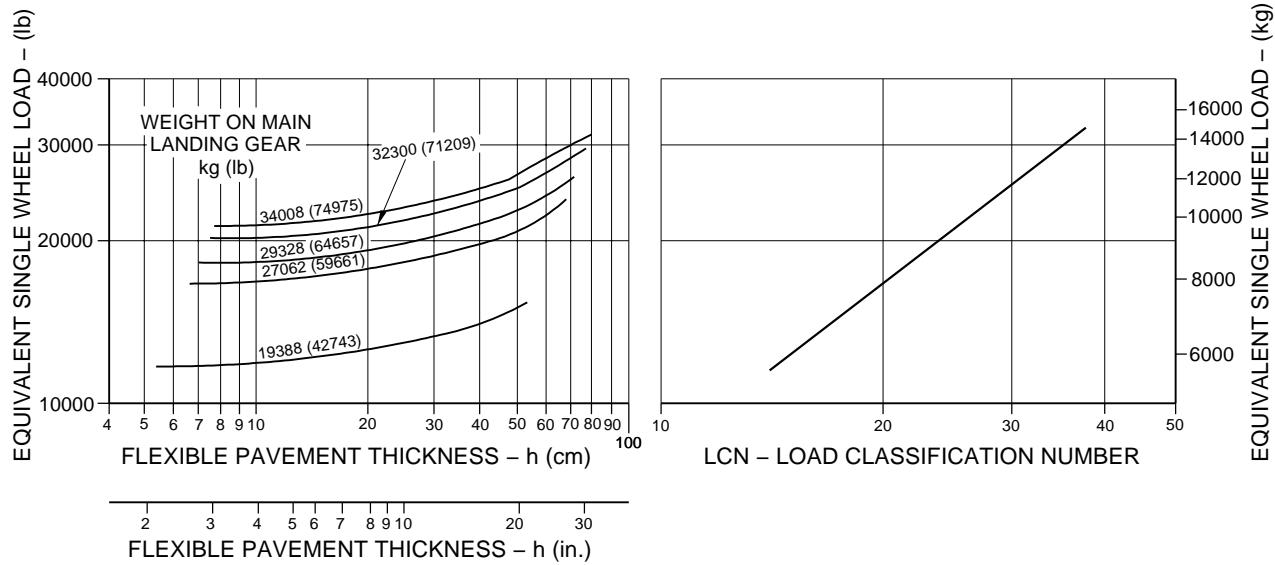

## NOTES:

EQUIVALENT SINGLE WHEEL LOADS ARE DERIVED BY METHODS SHOWN IN ICAO AERODROME MANUAL. PART 2, PAR. 4.1.3

EM170APM0012A.DGN

Flexible Pavement Requirements - LCN Method  
Figure 7.7

EFFECTIVITY: EMBRAER 170 LR OR SU OR SE ACFT MODEL

Section 7  
Page 7-10  
Jul 01/05



## **EMBRAER 170 AIRPORT PLANNING MANUAL**

### **7.7. RIGID PAVEMENT REQUIREMENTS, PORTLAND CEMENT ASSOCIATION DESIGN METHOD**

This method has a chart that has been prepared with the use of the Westergaard Equation in general accordance with the procedures outlined in the 1955 edition of "Design of Concrete Airport Pavement" published by the Portland Cement Association, 33 W. Grand Ave., Chicago 10, Illinois, but modified to the new format described in the 1968 Portland Cement Association publication, "Computer Program for Concrete Airport Pavement Design" by Robert G. Packard. The following procedure is used to develop rigid pavement design curves such as those shown in the chart:



- Once the scale for the pavement thickness to the left and the scale for allowable working stress to the right have been established, an arbitrary load line is drawn representing the main landing gear maximum weight to be shown.
- All values of the subgrade modulus (k-values) are then plotted.
- Additional load lines for the incremental values of weight on the main landing gear are then established on the basis of the curve for k=300, already established.



# EMBRAER 170 AIRPORT PLANNING MANUAL

## RIGID PAVEMENT REQUIREMENTS

NOTES: • TIRES H38 x 13-18  
 • TIRE PRESSURE 8.86 kgf/cm<sup>2</sup> (126 psi) (UNLOADED)

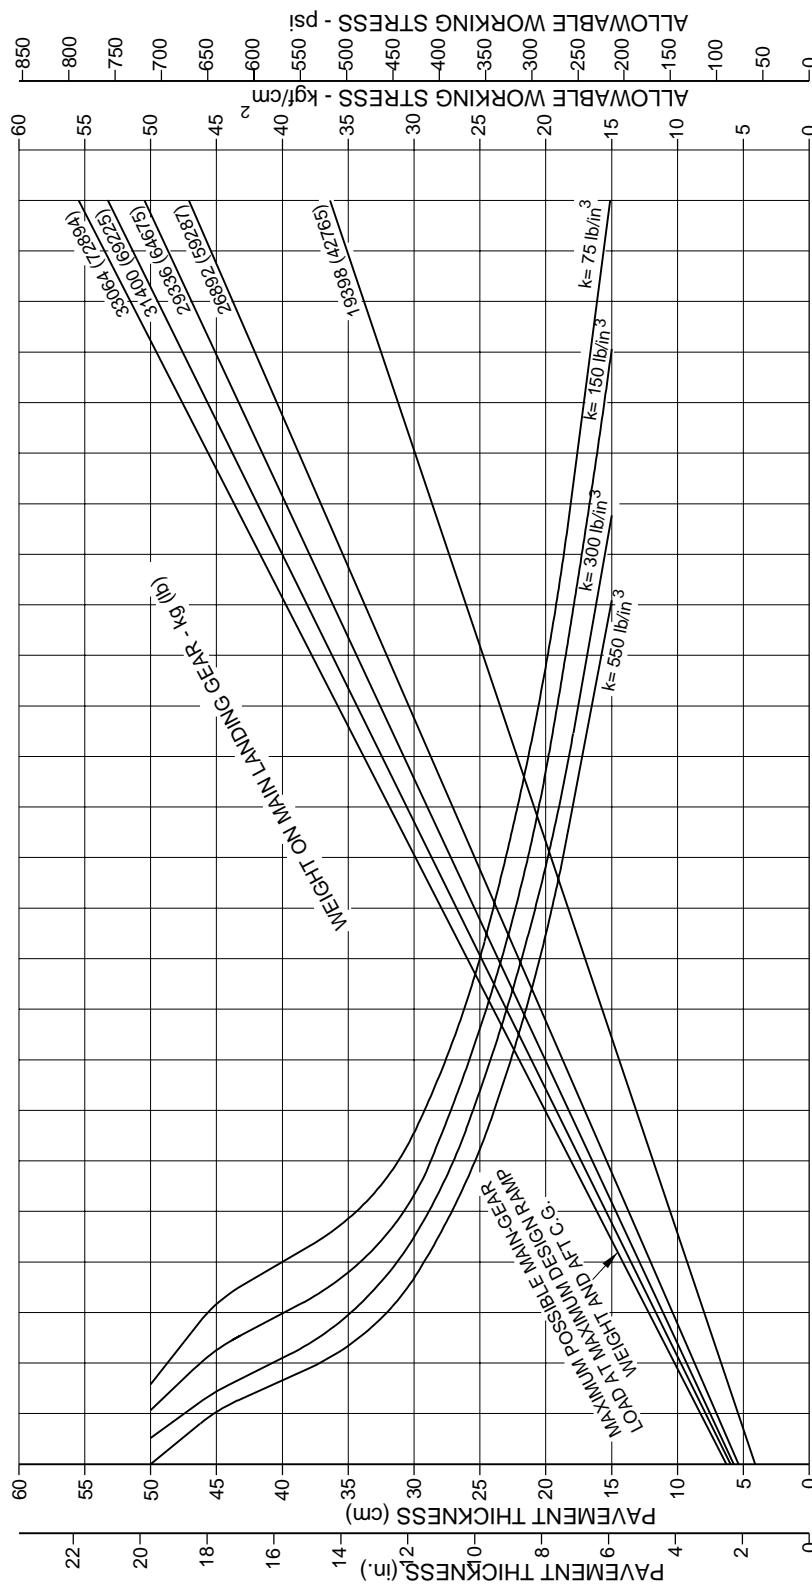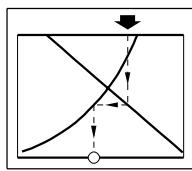

EM170APM070020.DGN

NOTE: THE VALUES OBTAINED BY USING THE MAXIMUM LOAD REFERENCE LINE AND ANY VALUE OF "K" ARE EXACT. FOR LOADS LESS THAN MAXIMUM, THE CURVES ARE EXACT FOR K=300 BUT DEVIATE SLIGHTLY FOR OTHER VALUES OF "K".

Rigid Pavement Requirements - Portland Cement Association Design Method  
 Figure 7.8

EFFECTIVITY: EMBRAER 170 STD ACFT  
 MODEL


**Section 7**  
 Page 7-12  
 Dec 08/03



# EMBRAER 170 AIRPORT PLANNING MANUAL

## RIGID PAVEMENT REQUIREMENTS

NOTES: • TIRES H38 x 13-18  
• TIRE PRESSURE 9.14 kgf/cm<sup>2</sup> (130 psi) (UNLOADED)

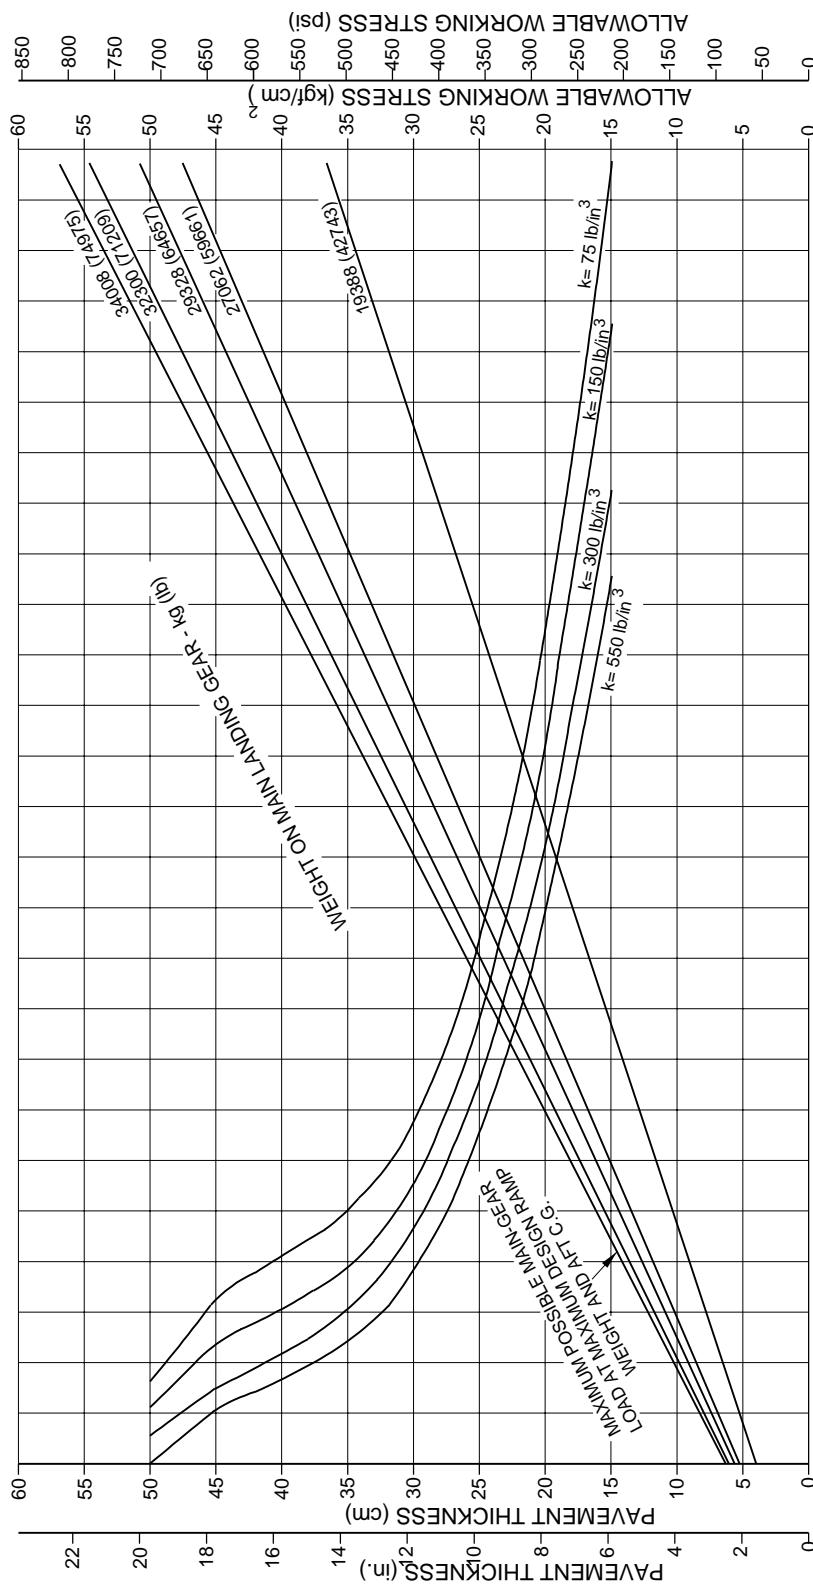

Rigid Pavement Requirements - Portland Cement Association Design Method  
Figure 7.9

EM170APM070010.DGN

NOTE: THE VALUES OBTAINED BY USING THE MAXIMUM LOAD REFERENCE LINE AND ANY VALUE OF "K" ARE EXACT. FOR LOADS LESS THAN MAXIMUM, THE CURVES ARE EXACT FOR K=300 BUT DEVIATE SLIGHTLY FOR OTHER VALUES OF "K".

EFFECTIVITY: EMBRAER 170 LR OR SU OR SE  
ACFT MODEL



## **EMBRAER 170 AIRPORT PLANNING MANUAL**

### **7.8. RIGID PAVEMENT REQUIREMENTS, LCN METHOD**

This LCN Method presents curves for rigid pavements. They have been built using procedures and curves in ICAO Aerodrome Design Manual, Part 3 - Pavements, Document 9157-AN/901, 1983. The same chart includes the data of equivalent single-wheel load versus radius of relative stiffness.

To determine the aircraft weight that can be accommodated on a particular rigid airport pavement, both the LCN of the pavement and the radius of relative stiffness must be known.

The radius of relative stiffness values is obtained from a table. This table presents the radius of relative stiffness values based on Young's modulus ( $E$ ) of 4,000,000 psi and Poisson's ratio ( $\mu$ ) of 0.15.

For convenience in finding this radius based on other values of  $E$  and  $\mu$ , the curves are included. For example, to find an RRS value based on an  $E$  of 3,000,000 psi, the "E" factor of 0.931 is multiplied by the RRS value found in figure 7.6.3. The effect of the variations of  $\mu$  on the RRS value is treated in a similar manner.



# **EMBRAER 170 AIRPORT PLANNING MANUAL**

## RADIUS OF RELATIVE STIFFNESS ( $\ell$ ) VALUES IN INCHES

$$\ell = \sqrt[4]{\frac{Ed^3}{12(1-\nu^2)k}} = 24.1652 \sqrt[4]{\frac{d^3}{k}}$$

WHERE: E = YOUNG'S MODULUS =  $4 \times 10^6$  psi  
 k = SUBGRADE MODULUS, lb/in.<sup>3</sup>  
 d = RIGID-PAVEMENT THICKNESS, in.  
 $\nu$  = POISSON'S RATIO = 0.15

d(in)	k=75	k=100	k=150	k=200	k=250	k=300	k=350	k=400	k=500	k=550
6.0	31.48	29.30	26.47	24.63	23.30	22.26	21.42	20.72	19.59	19.13
6.5	33.43	31.11	28.11	26.16	24.74	23.64	22.74	22.00	20.80	20.31
7.0	35.34	32.89	29.72	27.65	26.15	24.99	24.04	23.25	21.99	21.47
7.5	37.22	34.63	31.29	29.12	27.54	26.32	25.32	24.49	23.16	22.61
8.0	39.06	36.35	32.85	30.57	28.91	27.62	26.58	25.70	24.31	23.74
8.5	40.88	38.04	34.37	31.99	30.25	28.91	27.81	26.90	25.44	24.84
9.0	42.67	39.71	35.88	33.39	31.58	30.17	29.03	28.08	26.55	25.93
9.5	44.43	41.35	37.36	34.77	32.89	31.42	30.23	29.24	27.65	27.00
10.0	46.18	42.97	38.83	36.14	34.17	32.65	31.42	30.39	28.74	28.06
10.5	47.90	44.57	40.28	37.48	35.45	33.87	32.59	31.52	29.81	29.11
11.0	49.60	46.16	41.71	38.81	36.71	35.07	33.75	32.64	30.87	30.14
11.5	51.28	47.72	43.12	40.13	37.95	36.26	34.89	33.74	31.91	31.16
12.0	52.94	49.27	44.52	41.43	39.18	37.44	36.02	34.84	32.95	32.17
12.5	54.59	50.80	45.90	42.72	40.40	38.60	37.14	35.92	33.97	33.17
13.0	56.22	52.32	47.27	43.99	41.61	39.75	38.25	36.99	34.99	34.16
13.5	57.83	53.82	48.63	45.26	42.80	40.89	39.35	38.06	35.99	35.14
14.0	59.43	55.31	49.98	46.51	43.98	42.02	40.44	39.11	36.99	36.12
14.5	61.02	56.78	51.31	47.75	45.16	43.15	41.51	40.15	37.97	37.08
15.0	62.59	58.25	52.63	48.98	46.32	44.26	42.58	41.19	38.95	38.03
15.5	64.15	59.70	53.94	50.20	47.47	45.36	43.64	42.21	39.92	38.98
16.0	65.69	61.13	55.24	51.41	48.62	46.45	44.70	43.23	40.88	39.92
16.5	67.23	62.56	56.53	52.61	49.75	47.54	45.74	44.24	41.84	40.85
17.0	68.75	63.98	57.81	53.80	50.88	48.61	46.77	45.24	42.78	41.78
17.5	70.26	65.38	59.08	54.98	52.00	49.68	47.80	46.23	43.72	42.70
18.0	71.76	66.78	60.34	56.15	53.11	50.74	48.82	47.22	44.66	43.61
18.5	73.25	68.17	61.60	57.32	54.21	51.80	49.84	48.20	45.59	44.51
19.0	74.73	69.54	62.84	58.48	55.31	52.84	50.84	49.17	46.51	45.41
19.5	76.20	70.91	64.08	59.63	56.39	53.88	51.84	50.14	47.42	46.30
20.0	77.66	72.27	65.30	60.77	57.47	54.91	52.84	51.10	48.33	47.19
20.5	79.11	73.62	66.52	61.91	58.55	55.94	53.83	52.06	49.23	48.07
21.0	80.55	74.96	67.74	63.04	59.62	56.96	54.81	53.01	50.13	48.95
21.5	81.99	76.30	68.94	64.16	60.68	57.97	55.78	53.95	51.02	49.82
22.0	83.41	77.63	70.14	65.28	61.73	58.98	56.75	54.89	51.91	50.69
22.5	84.83	78.95	71.34	66.38	62.78	59.99	57.72	55.82	52.79	51.55
23.0	86.24	80.26	72.52	67.49	63.83	60.98	58.68	56.75	53.67	52.41
23.5	87.64	81.56	73.70	68.59	64.86	61.97	59.63	57.67	54.54	53.26
24.0	89.04	82.86	74.87	69.68	65.90	62.96	60.58	58.59	55.41	54.11
24.5	90.43	84.15	76.04	70.76	66.92	63.94	61.52	59.50	56.28	54.95
25.0	91.81	85.44	77.20	71.84	67.95	64.92	62.46	60.41	57.14	55.79



Radius of Relative Stiffness  
Figure 7.10

EFFECTIVITY: ALL

**Section 7**  
Page 7-15  
Dec 08/03



# EMBRAER 170 AIRPORT PLANNING MANUAL

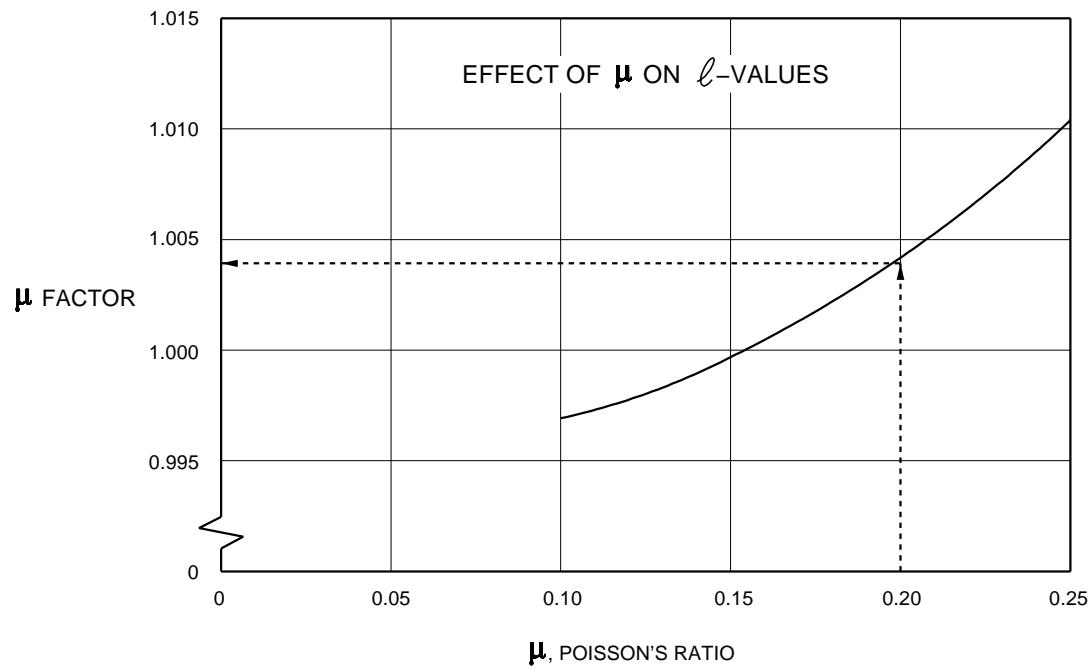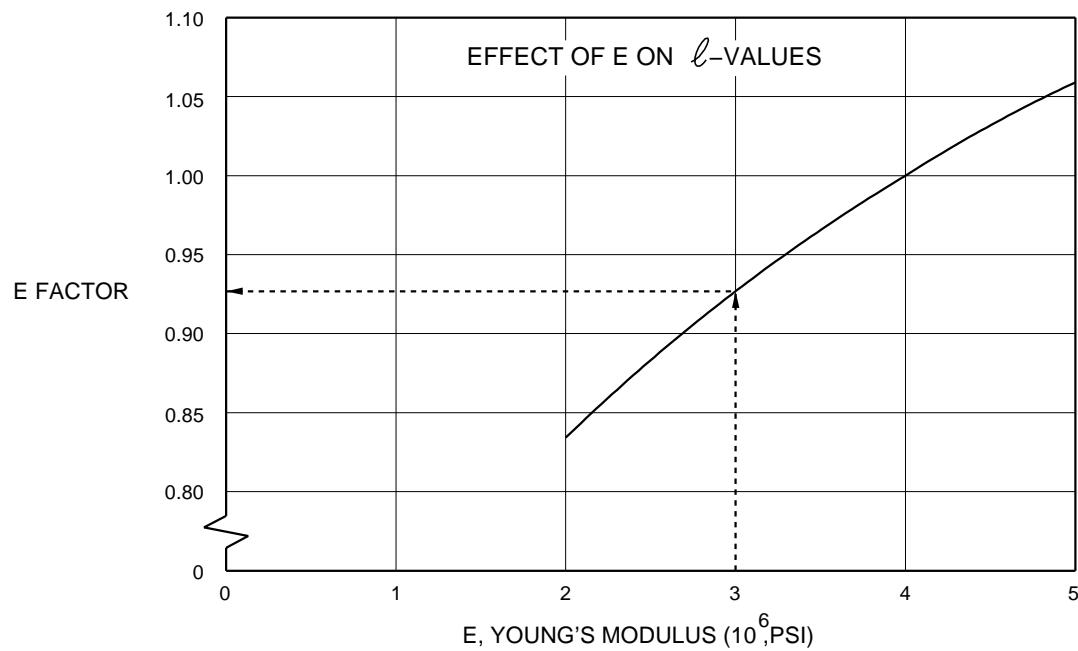

NOTE: BOTH CURVES ON THIS PAGE ARE USED TO ADJUST THE  $\ell$ -VALUES.

EM170APM070008.DGN

Radius of Relative Stiffness (other values)  
Figure 7.11



EFFECTIVITY: ALL

Section 7  
Page 7-16  
Dec 08/03



# EMBRAER 170 AIRPORT PLANNING MANUAL

TIRES H38x13-18 AT  $8.86 \text{ kg/cm}^2$  (126 psi)

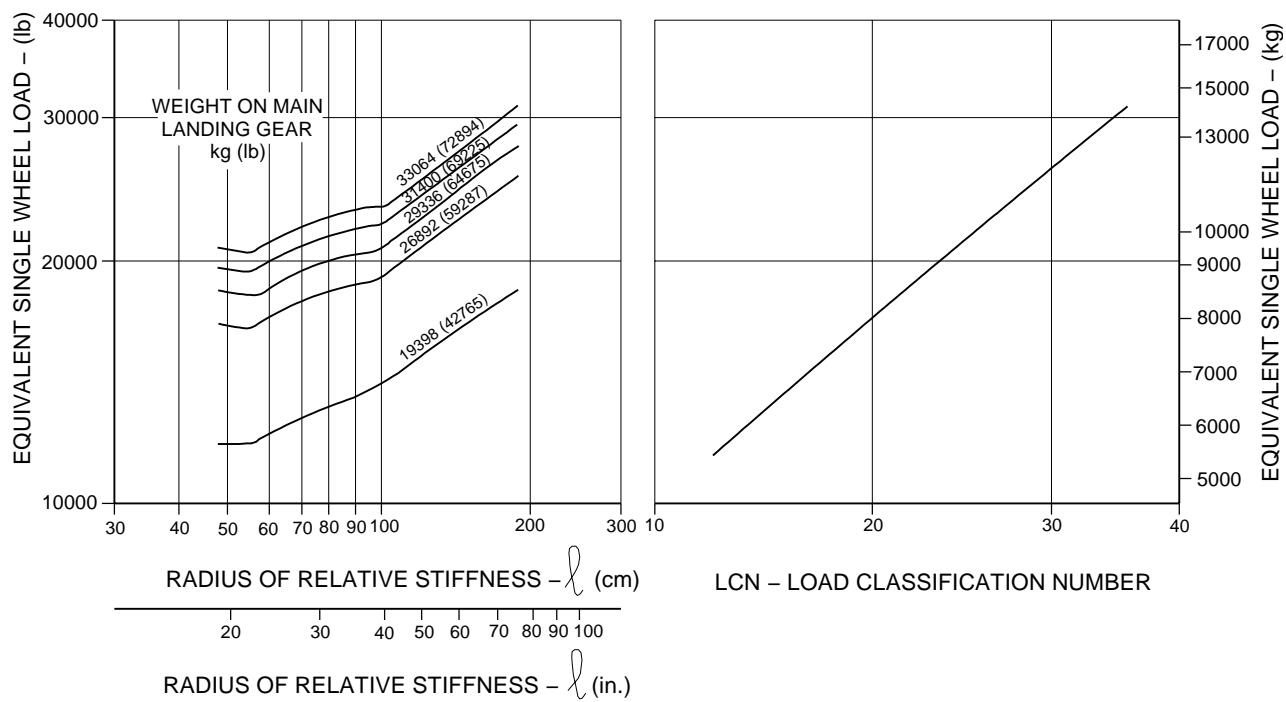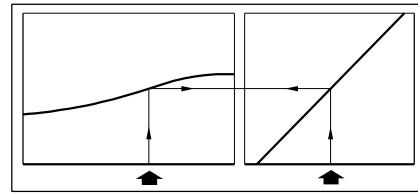

## NOTES:

EQUIVALENT SINGLE WHEEL LOADS  
ARE DERIVED BY METHODS SHOWN  
IN ICAO AERODROME MANUAL.  
PART 2, PAR. 4.1.3

EM170APM070019A.DGN


Rigid Pavement Requirements - LCN Method  
Figure 7.12

EFFECTIVITY: EMBRAER 170 STD ACFT  
MODEL

Section 7  
Page 7-17  
Dec 08/03



# EMBRAER 170 AIRPORT PLANNING MANUAL

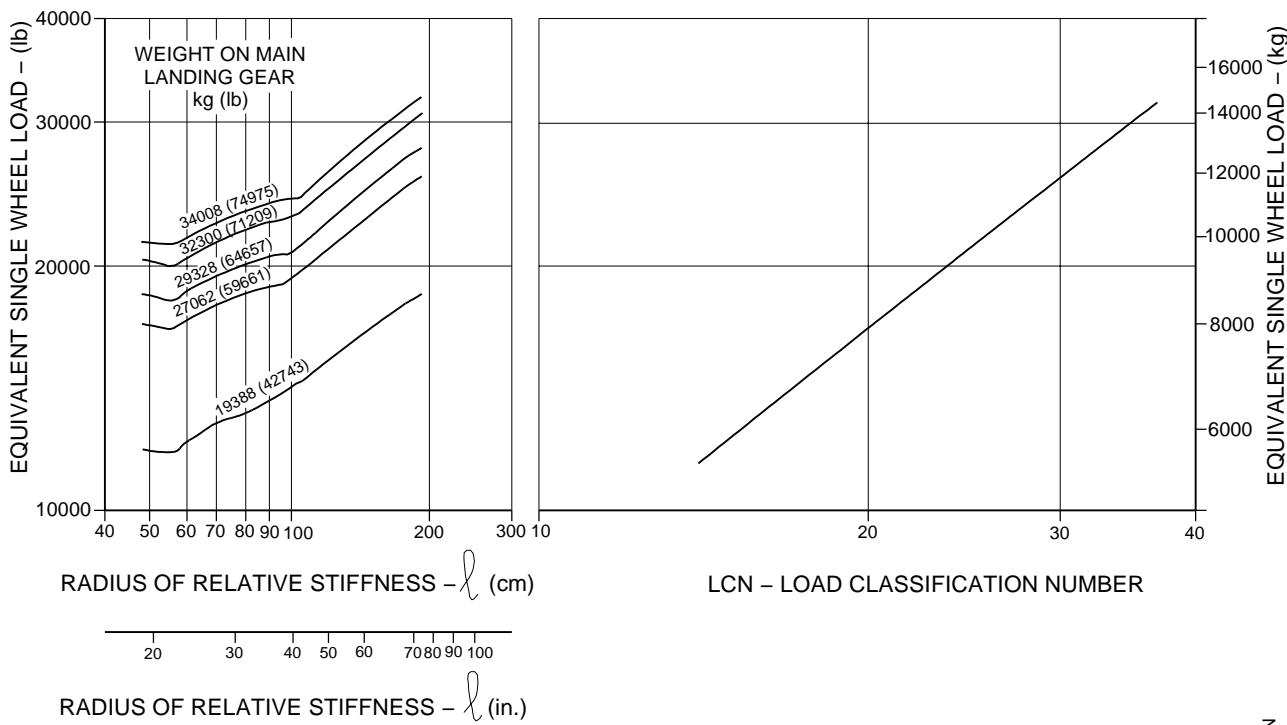

## NOTES:

EQUIVALENT SINGLE WHEEL LOADS  
ARE DERIVED BY METHODS SHOWN  
IN ICAO AERODROME MANUAL.  
PART 2, PAR. 4.1.3

EM170APM070011A.DGN

Rigid Pavement Requirements - LCN Method  
Figure 7.13

EFFECTIVITY: EMBRAER 170 LR OR SU OR SE  
ACFT MODEL

**Section 7**  
Page 7-18  
Jul 01/05



## **EMBRAER 170 AIRPORT PLANNING MANUAL**

### **7.9. ACN - PCN SYSTEM - FLEXIBLE AND RIGID PAVEMENTS**

The ACN/PCN system as referenced in Amendment 35 to ICAO Annex 14, "Aerodromes", provides a standardized international aircraft/pavement rating system.

The PCN is an index rating of the mass that according to evaluation can be borne by the pavement when applied by a standard single wheel. The ACN is established for the particular pavement type and subgrade category of the rated pavement, as well as for the particular aircraft mass and characteristics. An aircraft shall have an ACN equal to or less than the PCN to operate without restriction on the pavement.

The method of pavement evaluation is left up to the airport, and the results of such evaluation are presented as follows:

Table 7.1 - Pavement Evaluation

PAVEMENT TYPE	SUBGRADE CATEGORY	TIRE PRESSURE CATEGORY	METHOD
R – Rigid	A – High	W – No Limit	T – Technical
F – Flexible	B – Medium	X – to 1.5 Mpa (217 psi)	U – Using aircraft
	C – Low	Y – to 1.0 Mpa (145 psi)	
	D – Ultra Low	Z – to 0.5 Mpa (73 psi)	

Report example: PCN 80/R/B/X/T, where:  
80 = PCN  
R = Pavement Type: Rigid  
B = Subgrade Category: Medium  
X = Tire Pressure Category: Medium (limited to 1.5 Mpa)  
T = Evaluation Method: Technical

The flexible pavements have four subgrade categories:

- A. High Strength - CBR 15.
- B. Medium Strength - CBR 10.
- C. Low Strength - CBR 6.
- D. Ultra Low Strength - CBR 3.

The rigid pavements have four subgrade categories:

- A. High Strength - Subgrade  $k = 150 \text{ MN/m}^3$  (550 lb/in $^3$ ).
- B. Medium Strength -  $k = 80 \text{ MN/m}^3$  (300 lb/in $^3$ ).
- C. Low Strength -  $k = 40 \text{ MN/m}^3$  (150 lb/in $^3$ ).
- D. Ultra Low Strength -  $k = 20 \text{ MN/m}^3$  (75 lb/in $^3$ ).





# EMBRAER 170 AIRPORT PLANNING MANUAL

## FLEXIBLE PAVEMENT SUBGRADE

NOTES:

- H38 x 13-18 TIRE SIZE
- TIRE PRESSURE 8.86 kgf/cm<sup>2</sup> (126 psi) (UNLOADED)

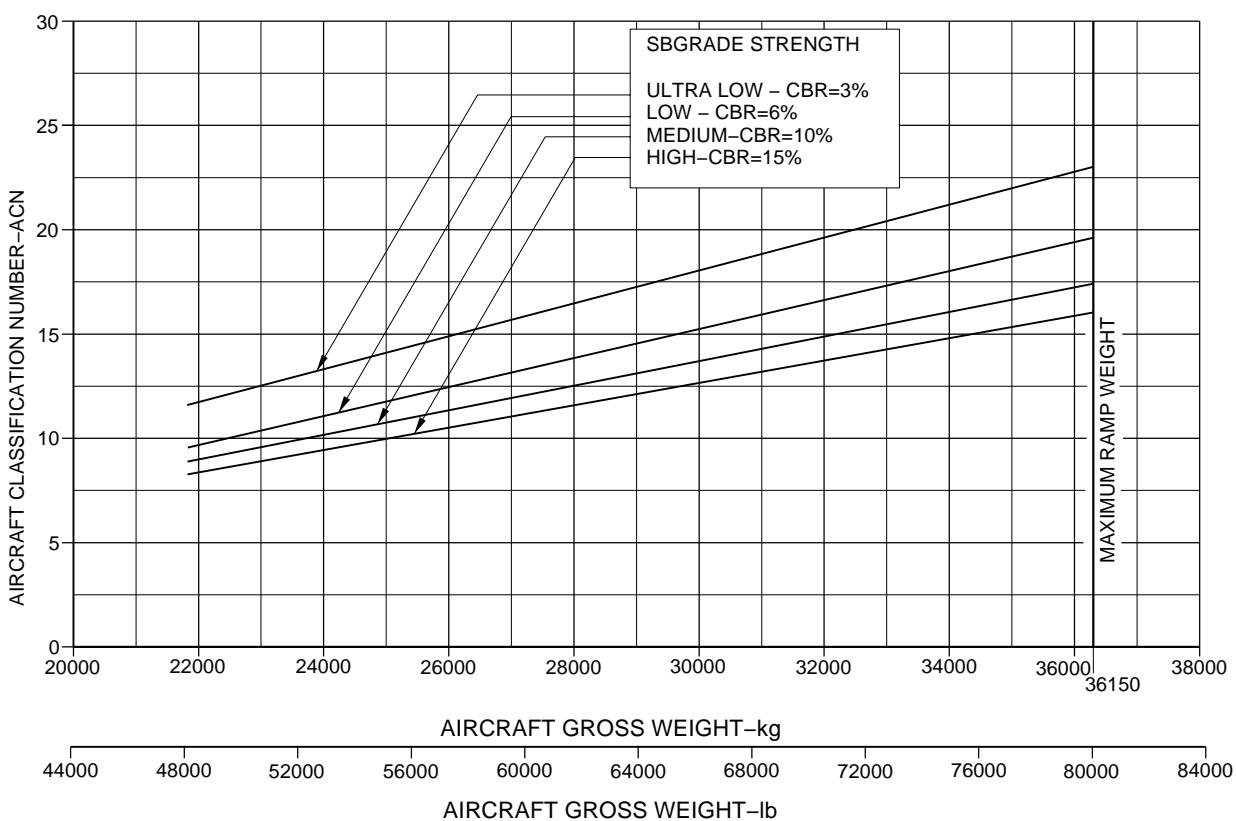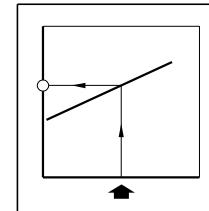

EM170APM0016A.DGN

ACN For Flexible Pavement  
Figure 7.14

EFFECTIVITY: EMBRAER 170 STD ACFT  
MODEL



Section 7  
Page 7-20  
Dec 08/03



# EMBRAER 170 AIRPORT PLANNING MANUAL

## FLEXIBLE PAVEMENT SUBGRADE

NOTES: • H38 x 13-18 TIRE SIZE  
• TIRE PRESSURE 9.14 kgf/cm<sup>2</sup> (130 psi) (UNLOADED)

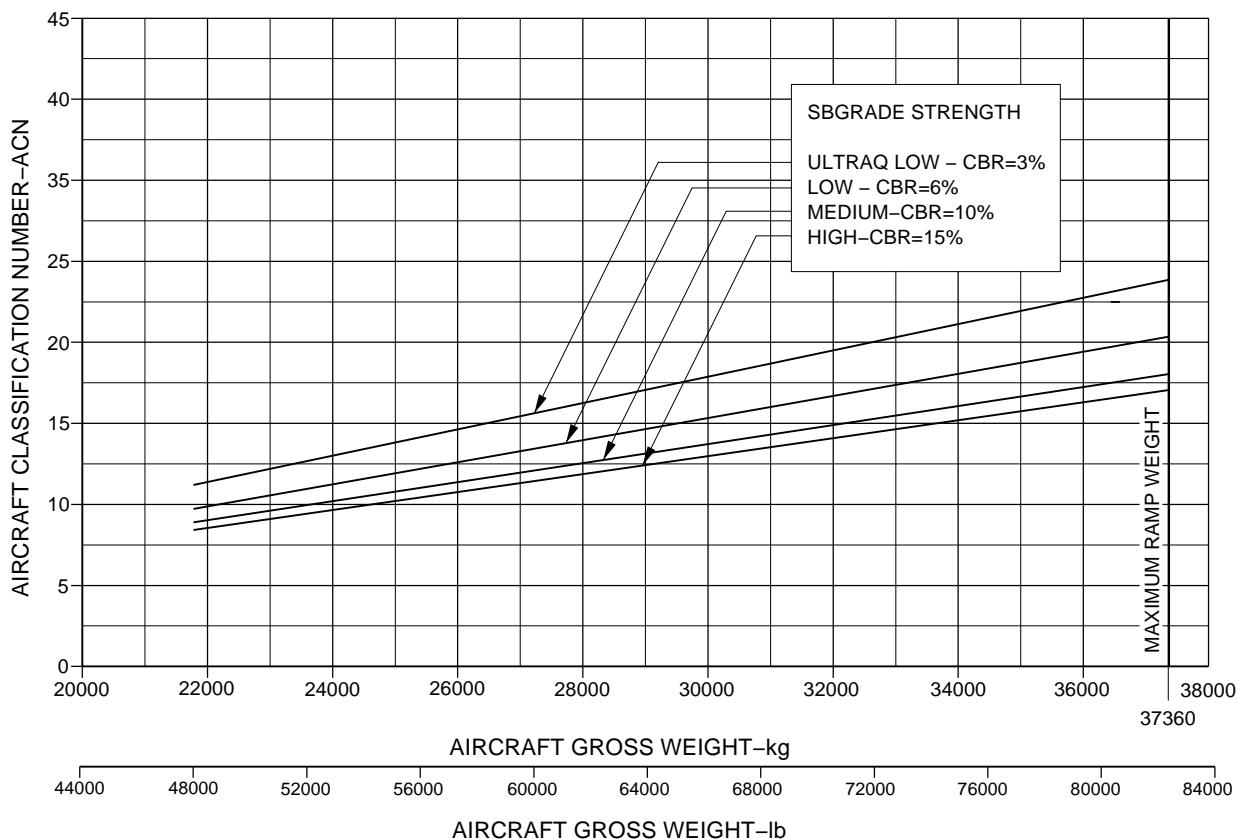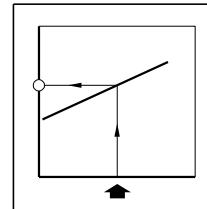

EM170APM070004A.DGN

ACN For Flexible Pavement  
Figure 7.15

EFFECTIVITY: EMBRAER 170 LR OR SU OR SE  
ACFT MODEL



Section 7  
Page 7-21  
Oct 06/11



# EMBRAER 170 AIRPORT PLANNING MANUAL

## FLEXIBLE PAVEMENT SUBGRADE

- NOTES:
- H38 x 13-18 TIRE SIZE
  - TIRE PRESSURE 9.56 kgf/cm<sup>2</sup> (136 psi) (UNLOADED)

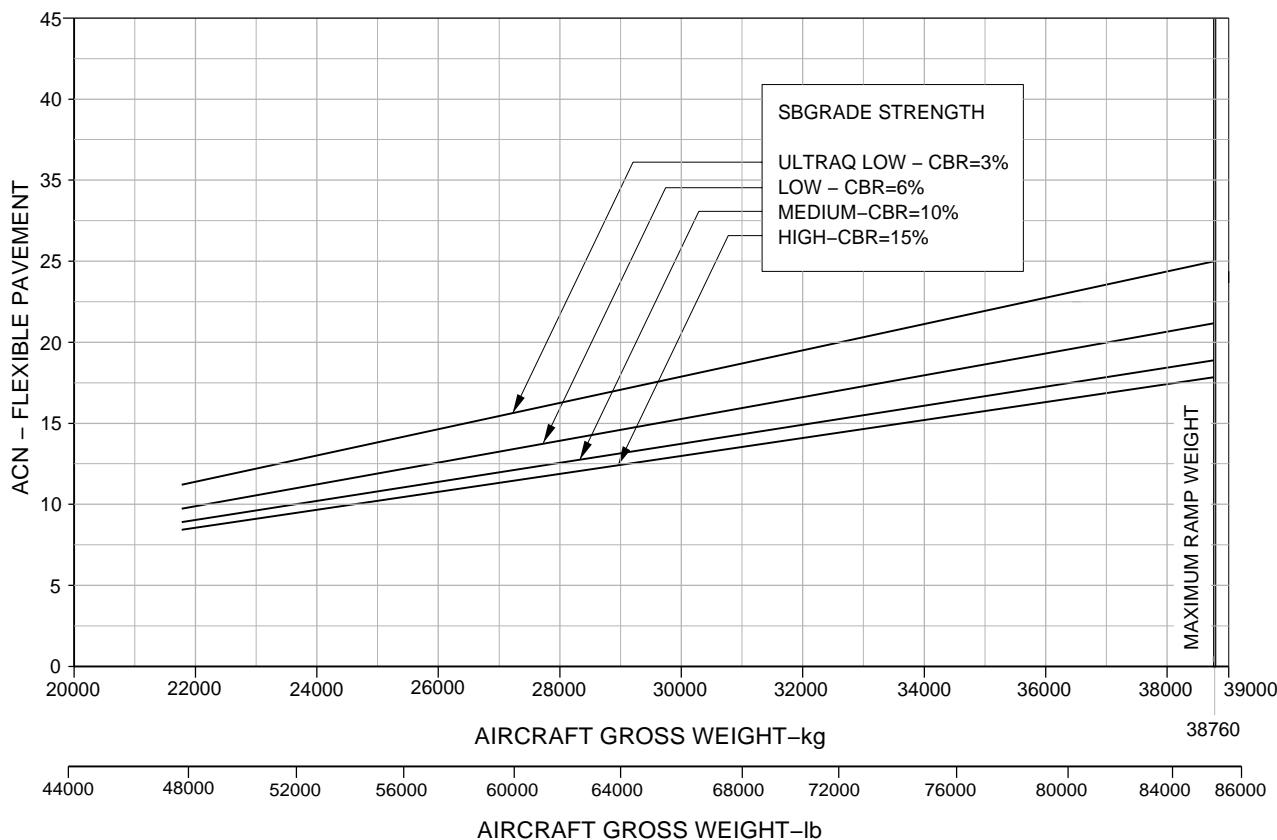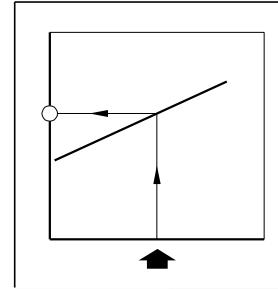

EM170APM070096A.DGN



ACN For Flexible Pavement  
Figure 7.16



# EMBRAER 170 AIRPORT PLANNING MANUAL

## RIGID PAVEMENT SUBGRADES

- NOTES:
- H38 x 13-18 TIRE SIZE
  - TIRE PRESSURE 8.86 kgf/cm<sup>2</sup> (126 psi) (UNLOADED)

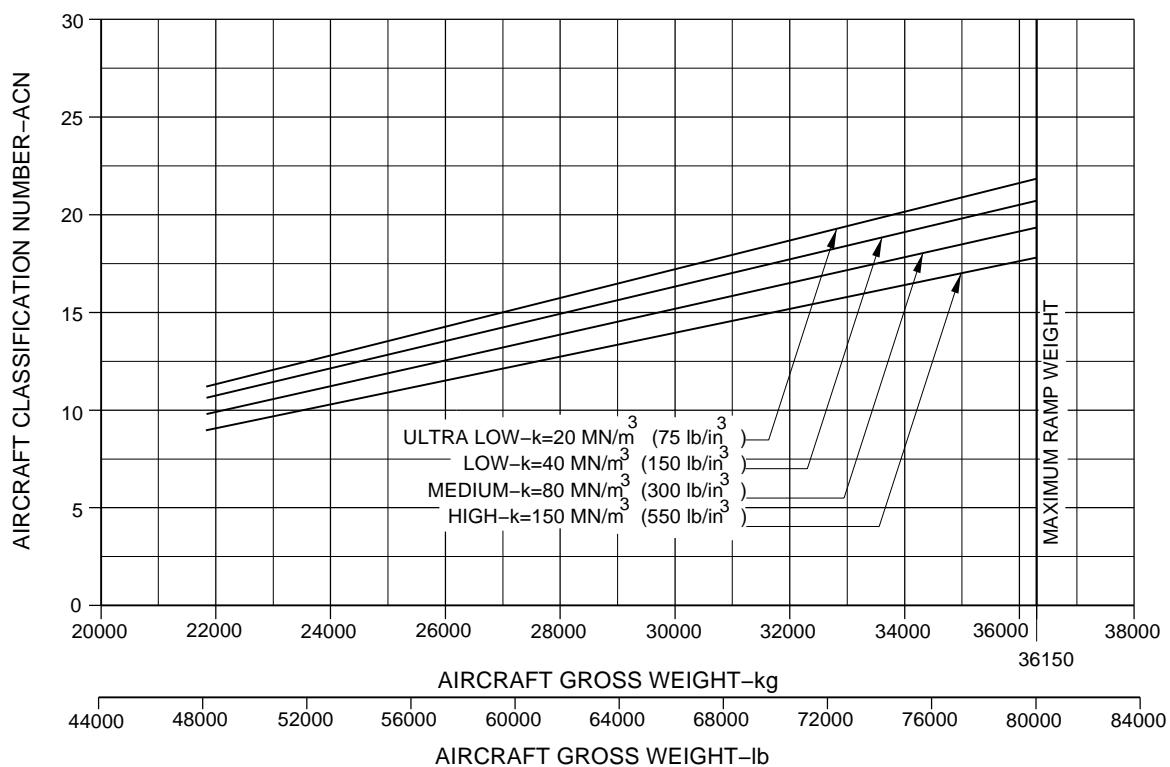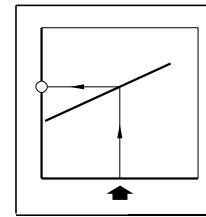

EM170APM070015A.DGN



ACN For Rigid Pavement  
Figure 7.17



# EMBRAER 170 AIRPORT PLANNING MANUAL

## RIGID PAVEMENT SUBGRADES

NOTES: • H38 x 13-18 TIRE SIZE  
• TIRE PRESSURE 9.14 kgf/cm<sup>2</sup> (130 psi) (UNLOADED)

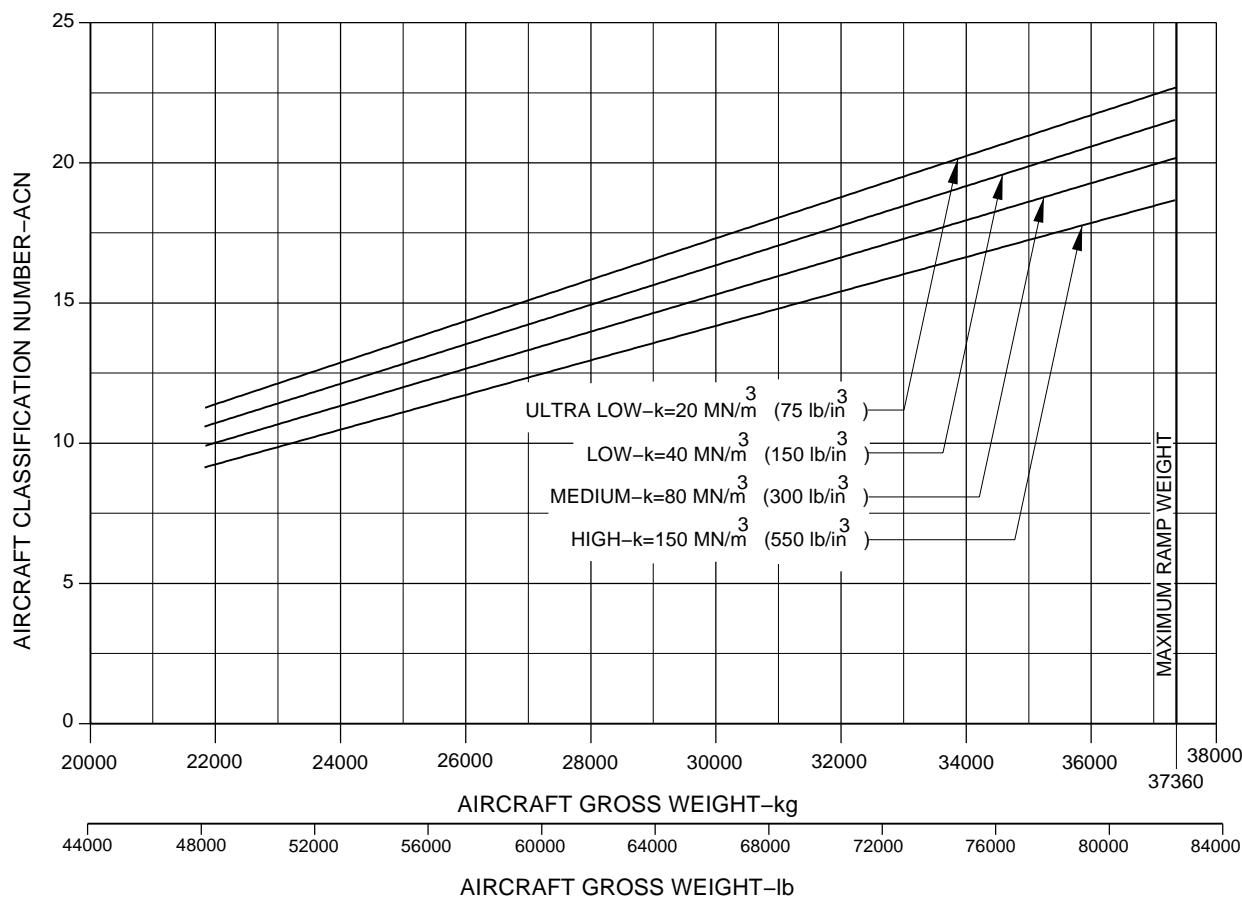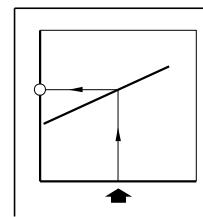

EM170APM070003A.DGN



ACN For Rigid Pavement  
Figure 7.18



## RIGID PAVEMENT SUBGRADES

NOTES:

- H38 x 13-18 TIRE SIZE
- TIRE PRESSURE  $9.56 \text{ kgf/cm}^2$  (136 psi) (UNLOADED)

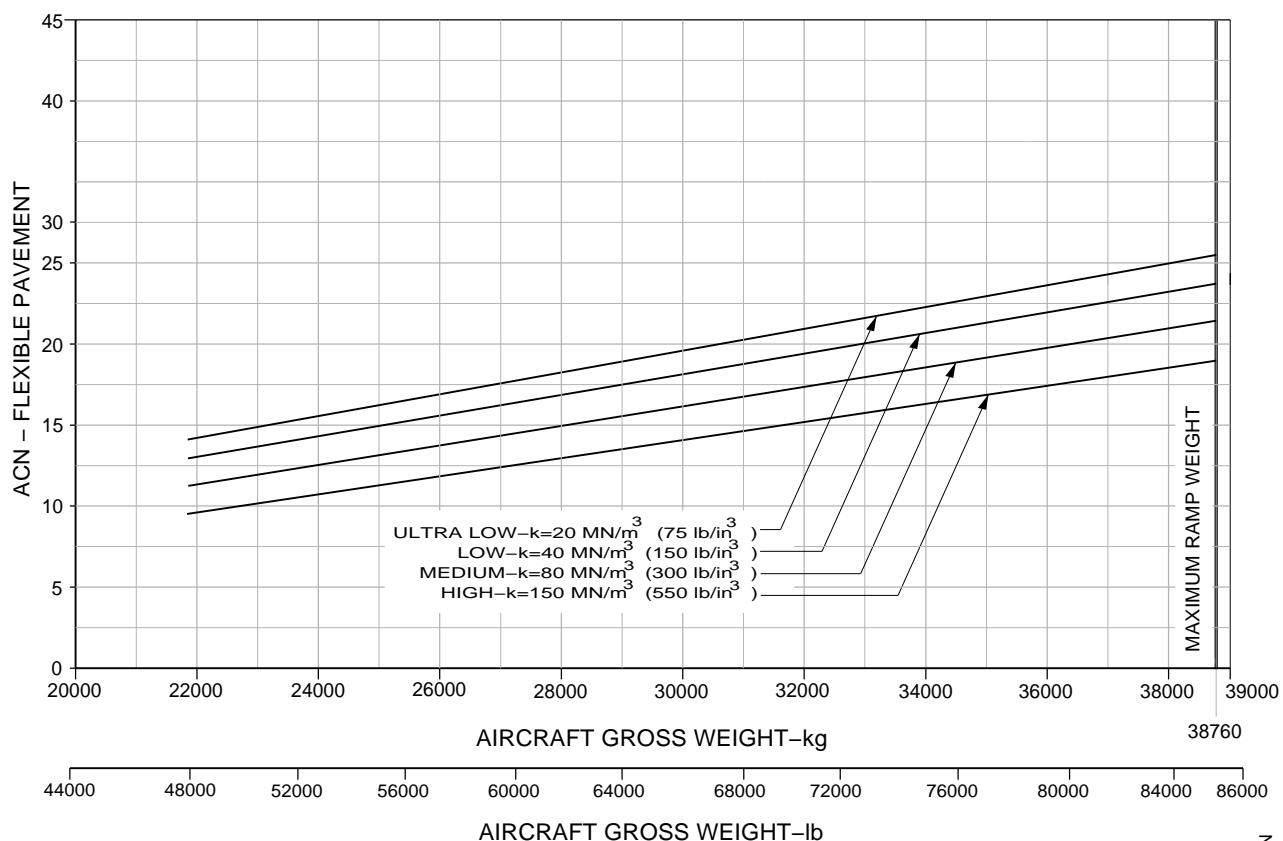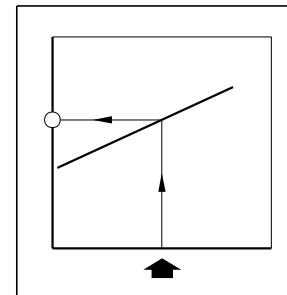

ACN For Rigid Pavement  
Figure 7.19





**EMBRAER 170 AIRPORT  
PLANNING MANUAL**

**8. POSSIBLE EMBRAER 170 DERIVATIVE AIRCRAFT**

**8.1. NOT APPLICABLE**

EFFECTIVITY: ALL

**Section 8**

Page 8-1 / 2

Dec 08/03



## **9. SCALED DRAWINGS**



### **9.1. GENERAL**

This section provides plan views to the following scales:

- English/American Customary Weights and Measures
  - 1 inch = 32 feet
  - 1 inch = 50 feet
  - 1 inch = 100 feet
- Metric
  - 1:500
  - 1:1000



# EMBRAER 170 AIRPORT PLANNING MANUAL

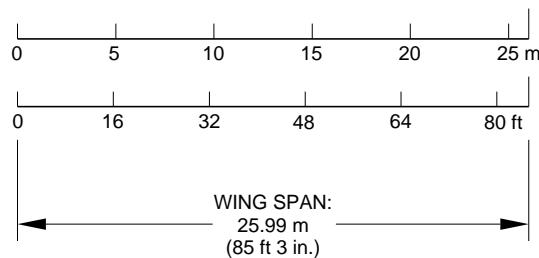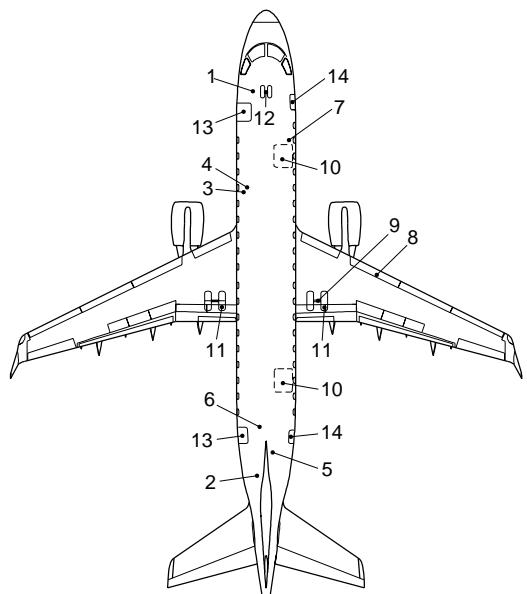



ITEM	DESCRIPTION	ITEM	DESCRIPTION
1	EXTERNAL POWER SUPPLY 115 VAC	8	PRESSURE REFUELING / DEFUELING
2	EXTERNAL POWER SUPPLY 28 VDC	9	GROUNDING POINT (RIGHT MLG)
3	ENGINE AIR STARTING	10	CARGO DOOR
4	AIR CONDITIONING LOW PRESSURE	11	MAIN LANDING GEAR
5	WASTE SERVICING PANEL	12	NOSE LANDING GEAR
6	POTABLE WATER SERVICING PANEL	13	PASSENGER DOOR
7	OXYGEN REFILL / REPLACE BOTTLE	14	SERVICE DOOR

EM170APM090001.DGN

Scale: 1 Inch Equals 32 Feet  
Figure 9.1

EFFECTIVITY: ALL

**Section 9**  
Page 9-2  
Dec 08/03

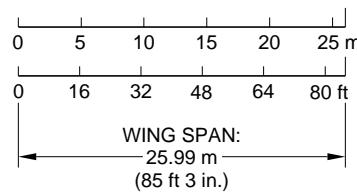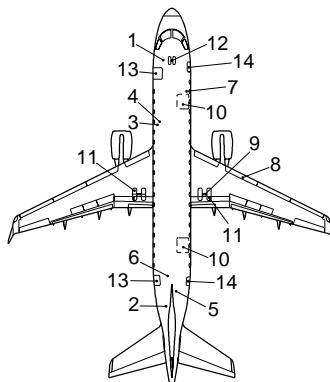
**EMBRAER 170 AIRPORT  
PLANNING MANUAL**


ITEM	DESCRIPTION	ITEM	DESCRIPTION
1	EXTERNAL POWER SUPPLY 115 VAC	8	PRESSURE REFUELING / DEFUELING
2	EXTERNAL POWER SUPPLY 28 VDC	9	GROUNDING POINT (RIGHT MLG)
3	ENGINE AIR STARTING	10	CARGO DOOR
4	AIR CONDITIONING LOW PRESSURE	11	MAIN LANDING GEAR
5	WASTE SERVICING PANEL	12	NOSE LANDING GEAR
6	POTABLE WATER SERVICING PANEL	13	PASSENGER DOOR
7	OXYGEN REFILL / REPLACE BOTTLE	14	SERVICE DOOR

EM170APM090002.DGN


Scale: 1 Inch Equals 50 Feet  
Figure 9.2

EFFECTIVITY: ALL

**Section 9**  
Page 9-3  
Dec 08/03



# EMBRAER 170 AIRPORT PLANNING MANUAL

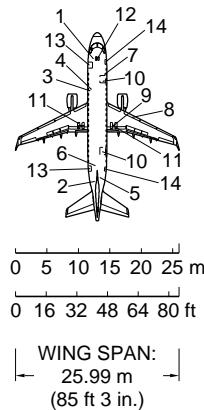

ITEM	DESCRIPTION	ITEM	DESCRIPTION
1	EXTERNAL POWER SUPPLY 115 VAC	8	PRESSURE REFUELING / DEFUELING
2	EXTERNAL POWER SUPPLY 28 VDC	9	GROUNDING POINT (RIGHT MLG)
3	ENGINE AIR STARTING	10	CARGO DOOR
4	AIR CONDITIONING LOW PRESSURE	11	MAIN LANDING GEAR
5	WASTE SERVICING PANEL	12	NOSE LANDING GEAR
6	POTABLE WATER SERVICING PANEL	13	PASSENGER DOOR
7	OXYGEN REFILL / REPLACE BOTTLE	14	SERVICE DOOR

EM170APM090003.DGN



Scale: 1 Inch Equals 100 Feet  
Figure 9.3

EFFECTIVITY: ALL

**Section 9**  
Page 9-4  
Dec 08/03



# **EMBRAER 170 AIRPORT PLANNING MANUAL**

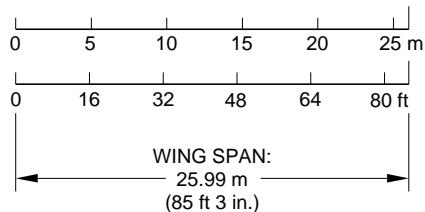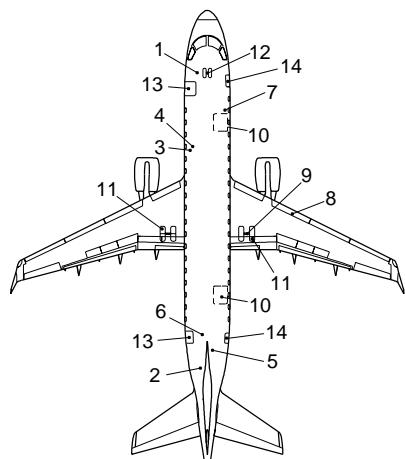

ITEM	DESCRIPTION	ITEM	DESCRIPTION
1	EXTERNAL POWER SUPPLY 115 VAC	8	PRESSURE REFUELING / DEFUELING
2	EXTERNAL POWER SUPPLY 28 VDC	9	GROUNDING POINT (RIGHT MLG)
3	ENGINE AIR STARTING	10	CARGO DOOR
4	AIR CONDITIONING LOW PRESSURE	11	MAIN LANDING GEAR
5	WASTE SERVICING PANEL	12	NOSE LANDING GEAR
6	POTABLE WATER SERVICING PANEL	13	PASSENGER DOOR
7	OXYGEN REFILL / REPLACE BOTTLE	14	SERVICE DOOR

EM170APM090004.DGN


Scale: 1 to 500  
Figure 9.4

EFFECTIVITY: ALL

**Section 9**  
Page 9-5  
Dec 08/03



# EMBRAER 170 AIRPORT PLANNING MANUAL

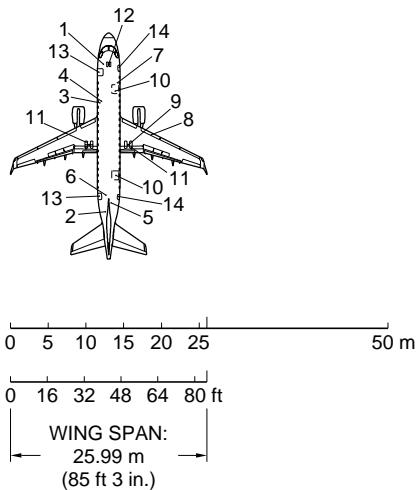

ITEM	DESCRIPTION	ITEM	DESCRIPTION
1	EXTERNAL POWER SUPPLY 115 VAC	8	PRESSURE REFUELING / DEFUELING
2	EXTERNAL POWER SUPPLY 28 VDC	9	GROUNDING POINT (RIGHT MLG)
3	ENGINE AIR STARTING	10	CARGO DOOR
4	AIR CONDITIONING LOW PRESSURE	11	MAIN LANDING GEAR
5	WASTE SERVICING PANEL	12	NOSE LANDING GEAR
6	POTABLE WATER SERVICING PANEL	13	PASSENGER DOOR
7	OXYGEN REFILL / REPLACE BOTTLE	14	SERVICE DOOR

EM170APM090005.DGN

Scale: 1 to 1000  
Figure 9.5

EFFECTIVITY: ALL

**Section 9**  
Page 9-6  
Dec 08/03